









Quick Installation Guide



Recommended Tools

 Step Ladder	 Adjustable Wrench	 Pliers
 Flat and Phillips Screwdriver	 Wire Stripper	 Safety Glasses

WARNING !

IMPORTANT INSTALLATION INSTRUCTIONS

WARNING – To reduce the risk of severe injury or death:

- 1) READ AND FOLLOW ALL INSTALLATION INSTRUCTIONS.
- 2) Install only on a properly operating and balanced door. A door that is operating improperly could cause severe injury. Have qualified service personnel make repairs to cables, spring assemblies, and other hardware before installing the operator.
- 3) Remove all pull ropes and remove, or make inoperative, all locks (unless mechanically and/or electrically interlocked to the power unit) that are connected to the door before installing the operator.
- 4) Install the door operator at least 8 ft (2.44 m) or more above the floor if the operator has exposed moving parts. If the operator must be installed less than 8 ft (2.44 m) above the floor, then exposed moving parts must be protected by covers or guarding, provided by the operator manufacturer.
- 5) Do not connect the door operator to the source of power until instructed to do so.
- 6) Locate the control station: (a) within sight of the door, and (b) at a minimum height of 5 feet so small children cannot reach it.
- 7) Install the Entrapment Warning Placard next to the control station in a prominent location.
- 8) For products having a manual release, instruct the end user on the operation of the manual release.




Step 1 – Installing the chain

<p>1a. Assemble the T-rail</p>	<p>1 Connect the T-Rail Sections</p> <p>Align the 4 T-Rail sections on the floor. Connect these rails together with the rail couplers as shown</p> <p>All rail pieces must be aligned properly</p> <p>Please note the arrow & "M" marking, indicates this side to the motor unit</p> <p>Please note the arrow & "D" marking, indicates this side to the door</p> <p>Ensure the square bolt necks are seated into the square holes</p>
<p>1b. Place the chain to the opener.</p>	




Step 2 – Install the safety beam and wall button.
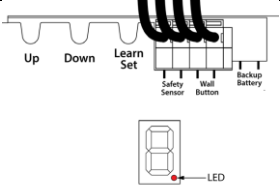
<p>2a. Connect the safety beam, wall button wires to the opener.</p>	
<p>2b. Install the opener to the hanging brackets.</p>	

Step 3 – Indication


<p>3a. When power up the opener. The dot in the LED display stays on.</p>	
<p>3b. When power up the opener. The red LED on the Wall Button stays on.</p>	
<p>3c. When power up the opener. The red and green LEDs on the Safety Beam Sensors stays on once aligned properly.</p>	

Step 4 – Programming the Remote Control

<p>4a. Press and hold the [Set] button in the opener for 1 second, the LED shown [P] segments.</p>	
<p>4b. Press the button on the remote.</p>	
<p>4c. Once the button on the remote is programmed. The LED segment will off and emits one beep indicating the programming successfully.</p>	<p>LCD becomes  Beep Once</p>

Step 5 – Erase all the Remote Control from opener


Note: To erase any unwanted remote control, first erase all remotes.

<p>5a. Press the [Set] button for 15 seconds, when the opener emits 4 beeps, release the Learn/Set button. The LED display shows “E”.</p> <p>5b. Press the [Set] button again to erase all the programmed remotes.</p> <p>5c. The LED segment will off indicating the erasing successfully.</p>	
---	--

Step 6 – Adjust the Up and Down Limits

Warning: Trolley MUST be engaged before setting limits.

6a. Power up the opener. The dot in the LED display stays on.

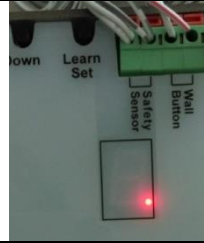

Adjustments

Program	Buttons	LCD	Actions	Confirmation
3.1 Set Travel Limit (Open)	[Set] (5 sec)	1	1) Press [Up] / [Down] button until the door is in fully open position; 2) Press [Set] Button to confirm	LCD becomes 2
3.2 Set Travel Limit (Closed)	Continue from 3.1	2	1) Press [Up] / [Down] button until the door is in fully closed position; 2) Press [Set] Button to confirm	LCD becomes 8 Opener Light will flash 3 times.
3.3 Set Door Force (Open)	Continue from 3.2	3	Press the Wall Console Large Button, garage door will open completely.	LCD becomes 9 Opener Light will flash 3 times.
3.4 Set Door Force (Close)	Continue from 3.3	4	Press the Wall Console Large Button, garage door will close completely.	LCD becomes 8

Step 7 – Operation

7a. To activate the opener with remote control, press the button that is programmed to the desired opener.



FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Le présent appareil est conforme aux Partie 15 des règlements de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization Number are required.

<p>CUSTOMER SERVICE 17 Shread Avenue, Brampton, Ontario, Canada L6Y 1J3 Email: support@skylinkhome.com http://www.skylinkhome.com ©2015 SKYLINK GROUP</p>	<p>US Office Securelink Inc., 1180-D East Francis Street, Ontario, CA 91761, USA Tel: (909) 673-1778</p>
--	--