<u>User Manual</u>

Model HA2401-XI-325X FCC ID: MYF-XI-325X IC: 2837A- XI-325X

Interference Statement

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressively approved by the party responsible for compliance could void the user's authority to operate the equipment.

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

NOTE: This system must be installed by experienced professional installers who are familiar with radio frequency (RF) equipment operation as well as local building and safety codes. Failure to do so may void the Product Warranty, as well as expose the end-user to legal and/or financial liabilities.

Information to the user

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the distance between the equipment and the receiver.

Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications of equipment not expressly approved by the manufacturer could void the user's authority to operate the equipment and the company's warranty.

NOTE: Certain high gain antennas are intended for point-to-point or point-tomultipoint applications only. These antennas are clearly identified in the table contained in this manual. Note that +36 dBi may only be exceeded for point-topoint applications as given in 15.247(b). It is the installers responsibility that when using these antennas to ensure that the system is used exclusively for point-to-point operations, and that the antenna may not be co-located with other intentional radiators transmitting the same information". The device and its antenna and must not be co-located or operating in conjunction with any other antenna or transmitter.

The table contained in this manual identifies which antennas are considered "fixed" and which are "mobile". When this device is installed as a fixed-mount application there is a minimum required separation distance of 100 cm between the antenna and all persons during normal operation. All mobile antennas must be mounted at a minimum distance of 20 cm from users.

Router Installation:

Conduct a Site Survey to determine the best location for the system. Once located, install the Router in an appropriate location. Follow the Router mounting instructions for specific mounting details.

Open the access cover by depressing the two tabs. Slide the PC Card into the PC Card Slot and plug in the pigtail cable as shown. Then replace the access cover:



Connect the Pigtail Cable between the PC Card and the Amplifier/DC Injector input.

Install the Antenna

NOTE: The antenna system shall be installed ONLY by experienced antenna installers who are familiar with local building and safety codes, and wherever necessary have been licensed by appropriate government regulatory bodies. Failure to do so may void the Product Warranty, as well as expose the end-user to legal and/or financial liabilities. Hyperlink Technologies, its agents, resellers or distributors, are not liable for injury, damage, or violation of government regulations that may arise from failing to comply with the guidelines described in this document.

Mount the antenna according to the specific installation instructions for the model you are installing. When choosing the antenna site you must observe the following exposure limits:

The table contained in Appendix B of this manual identifies which antennas are considered "fixed" and which are "mobile". When this device is installed as a fixed-mount application there is a minimum required separation distance of one 100 cm between the antenna and all persons during normal operation. All mobile antennas must be mounted at a minimum distance of 20 cm from users.

Once the antenna is installed connect the antenna to the amplifier using the antenna cable.

Configuring the Wireless Router

Connect to Unit with a cross-over cable to your PC or through a Switch (HUB) with straight cables. Apply power to the Router unit. Check the diagnostic lights to ensure proper connection. You should now be ready to configure the Router.

Launch the Network Configurator Utility

Click on File, Open Remote Config

Open Remote Config	Monitor Analyze	
Report Remote	Select Another Device	SNNP Poling Interval
Dult Predicest Finance Status	Remote Statistics	P
	Interface Monitor	IP TOPAUDP
	Ethemet like Interfaces	IDMP
	Turbocel Station Entries	System Information
	AP Associated Station Entries	Bridge Learn
	Doi'l x Clients	IPARP
Fortes en 10 estatere en calert frem about	602.11 Interfaces	IP Route
is not recognized.	SNMP	IP/TCP Connection
Configure Bengle		IP/UDPLktenet
Congretitation		Local IP Address
OR Enter a filename to configues		
Contana Tela Da La Banana		

Click on Scan to locate the Device

			ucuero (musice)	
Local Area Ne	stwork Scan		Select Another Device	SNNP Poling Interval
of scanned d	evices		Remote Statistics	P
Address	nonis	Status	laiethce Mania	IPTOPAIDP
			Ethernet-like Intelfaces	IDNP
		R	Turbocel Station Entries	System Information
			AP Associated Station Entries	Bridge Learn
-			Doilly Elients	IPARP
En	ter IP Addre	55	2 🛛	IP Route
nter an In		200 1		IP/TCP Connection
0.4	Hemo	te IP Address		IP/UDPListener
comput	😵 🔤	Write Password	(2010)	Local IP Address
R Enter (ED	nis device is in mph	scal subnet	
	av		a 5.4	

Select the Router to configure by Clicking on Name and Click on Change IP Button to change to IP on your local subnet (similar to the configuration PC).

Setting the Password

The default password is "public". Once you have accessed the security settings change the password. Click OK to accept changes.

		1	Transfer (
Loca Alea Ne	owork pican	1	Select Another Device S	NMP Poling Interval
of scenned de	vices		Barrada Statistics	IP
Addiess	name	Statur		
		13	Infertace Monitor	PTCP/UOP
			Ethernet-like Interfaces	ICMP
			Turbocal Station Entries	System Information
			AP Associated Station Entries	Bridge Learn
Sean			2 🗙	IPARP
17.55				IP Route
Ne Nane H-RD	Chan	ge IP Address	2 2 ctress 545-60	IP/TCP Connection
Co.	Rend	te P Address	BORFACKESS	IP/UDP Listener
81	Pass	word [*	end 1	LocalIPAddess
		UK	Lances	

Select – This device is in my local subnet Click OK.

Select a device	gioup to sean		Nontoi Analyze St	tup
Local Area Net	work Soan	*	General Setup	HamanaSaasooli
at of scanned de	vices	nec.	Interface Serup	TurboCell Access List Setup.
PAddess	0409	Status	Advertised Interface	Finand
			Bridging	I are Presed
			IPHost	Advanced Authentication
			IP Reader	D. Jacobia NAT Incoming NAT
-		_	enno 1	INTRRedent
inter an H	er IP Addre	55		DHDE Serve
	Remo	e iPAddess	198.17.74.254	RADIUS Server
Configue	Read	Avite Password	*****	Scena Central
	M	his device is in my lo	scal subnet	

Once the screen pops up that Configuration has been Read-Click OK

Bridge/B	Brouter Configuration Program
(į)	Configuration Seen read from Bridge (198.17.74.254)
	OK

Configure Router Parameters

Click on Setup – General Setup or Click Setup Tab on the right of Window and General Setup



For Basic Bridging, the default parameters should be OK:

Enable Bridging, Enable Watchdog Reboot Timer (unit will reboot if there is not activity for long period of time) and MAC Authentication (security)

7 / DHCP Features able Outgoing Network Address Translation able Incoming Network Address Translation able DHCP Server able TurboCe1R adjus Authentication
able TurboCell Radius Authentication
ese Control (MAC Authentication)
sable comp Access Control ACAuthentication Access Control

Click on OK to accept these parameters.

Interface Setup

Click on Setup – Interface Setup or the Tab on the right – Interface Setup. The Ethernet port by default is select as Remote and Enable. Click on Setup 2 (802.11b radio interface)

Select a device	gloup to span		Mentor Analyze 39	into 1	
Local Area Ne	bwork Scan		General Setup	Unermeu R	anverds -
st of scanned di	e vices		Interface Setup	TuboCel Access	List Setup.
P Address	name	Status			
	Interface Setu	P	adamente elegand	? 🛛	
	1 Ethernel	Ren F	ote Enabled Max Xier Ra	de Setup 1	icelon ming 1447
Erder an IP add	2 802.116	5	0 Inclies Not	init Second	
Configure Ren	sole		Linkbriegh	Accession	ala I
OR Enter a filer	ame to configure		-		
Configure This	File Browe				
				10.00044	44.04

Select the function of unit – One must be Base Station (does the polling) and second unit must be Satellite Station (responds to polling).

In a multipoint application, there is one Base Station and all the remotes must be configured as Satellite Stations.

802,11b Setup	Me	intor Anakoe Setup
Solveri, Harre (SUD).	Provident Hallowe	
C Deny Inter-Elent Traffic 0	ç On This Interface	
C 80211b Compatible Acc C 80211b Super Chernet C TurboCell No Base Station C TurboCell Satellie Station C TurboCell Satellie Station	ess Point Converter me	Base Station Mode Chion Paling Base Station Ching Base Station Ching Base Station Ching Base Station with Pickocol Names
F This base station supports	up to 1 catellite stations CancelAdva	nced Frequency Security
entire This File Desug		

Click on **Advanced**, Select a network ID and the maximum modulation rate you want the radio to operate (higher speeds of 11 Mbps require better signal quality.) Click on OK to accept changes

lect a device group to	soan Monitor Anakae Setup	1
802.115 Setup		2 🗙
National Harris	802.11b Advanced Setup	×
-	Network ID 7	
	Radio Transmit Rate High 11 Nbps 💌	
T Deny Inter-Die	nt Ti	
C 802.11b Comp	aitin	
C TurboCel No TurboCel Bas	uro Iase Sta	
C TurboCell Seo	ie	Petrocitions
This base statio		
DK	Cancel Advanced Frequen	cy Security
onligure This File	Browse	

Configure the Operating Frequency

Click on Frequency, Select a Channel. Select an authorized frequency channel based upon the specific antenna used from the table in Appendix B. Click on OK to accept changes

lect a device group to span	Montor Anakoe Setup	101.000
802.115 Setup		2 🗙
Madword, Harris (SSID)	Forward memory	_
1	802.11b Frequency Setup	
	Channel Frequency	
C Downletter Close Traff	7 2.442 GHz 💌	
1. Deryman Lient run		
C 802.11b Compatible A		4
C TurboCell No Base St	2000-11 11	
FuboCel Base State C. TurbeCel Service State		- perset local
Torbooet Salenie Sie	Lancer	
This base station expos	its up to 1 estellite stations	
	Cancel Advanced Frequency	Security
Configure This File Bro	AU00	

Security Settings

You could Click next on Security and select encryption at this time (Not required for basic configuration, implies 15-20% lower performance).

Click on OK to accept changes and return to Main Menu.

13. Click on Setup – System Access setup (or the Tab), select same Pass Phrase for all the units on your system. Click OK to accept changes.

elect a device group to scan M	lanitar Analyze Se	stup
Local Area Network Scan	General Setup	Dent most Passocide
rstem Access Setup	race Setup	TuboCell Access List Setup.
Enter the Sustem Access Page Planse used to	ted Metrics	Facisal
identity the windows network. To set the SNMP read/write community used to modify Bridge/Plouter	Bridging	Fasic Franket
settings, use the SNMP Setup menu.	IP Host	Advanced Authentication
Pass Phrase	PRove	Dataeng NAT Incoming SerT
	SNMP	SMTP Rediete
	Encyaton	DHCP Sava
is not recognized	System Access	RADIUS Server
Conligue Renote	Linkiningite	Access Cartol
IB Enter a filename to configure	a	
Configure This File Browse		

With this configuration, you should be able to communicate between the 2 units. You could select TurboCell Access List to improve security (MAC address of unit allowed to communicate and Bandwidth Control)

Saving the Configuration Settings

Please save your configuration changes, File , Save Config

Open Config File Ctrl+O Open Remote Config	1.000	Manhor Analyze Sa	tur:
Save Confid Co145	2	Diamenal Solup	COMPANY Particular
isve Config File/82	top at	Interface Setup	TurboCell Access List Setup.
Juliand Buffrom		Robarnost interant	Provide 1
Reboot Remote		Bridaina	The second secon
Exk		IP Host	Advanced Authentication
		in those	Data to 100 Television 100
		SNMP	SHITP RADIES
Erter so iP address a actent turn almost	accost .	Construction (DHLPSorre
is not to	cognized	System Access	RADIUS Server
Contigue Restate		Lass mesono -	Access Carlon
OR Enter a filename to configure			
and the second sec			
Configure This File Drowse			

Accept Yes to Save to the Unit with the IP you have assigned, it would take few seconds and Unit will Reboot.



		Amplifier P	ower Ratin	(dB) g					Card Alone
Antenna Model	Gain (dBi)	29.9	29	28	27	26	24	21.8	17.5
HG2401U	1	6.6	8.9	8.0	7.1	6.3	5.0	3.9	2.7
HG2402RD	2	11.1	10.0	8.9	8.0	7.1	5.6	4.4	3.0
HG2403RD	3	12.5	11.2	10.0	8.9	8.0	6.3	4.9	3.0
HG2403UR	3	12.5	11.2	10.0	8.9	8.0	6.3	4.9	3.0
HG2404CU	3	12.5	11.2	10.0	8.9	8.0	6.3	4.9	3.8
RE05E	5	15.7	14.1	12.6	11.2	10.0	8.0	6.2	3.8
RE05U	5	15.7	14.1	12.6	11.2	10.0	8.0	6.2	3.8
HG2405	5	15.7	14.1	12.6	11.2	10.0	8.0	6.2	•
HG2406U	9	17.6	15.9	14.1	12.6	11.2	8.9	6.9	•
HG2407U	7	N/A	17.8	15.9	14.1	12.6	10.0	7.8	•
HG2408U	8	N/A	20.0	17.8	15.9	14.1	11.2	8.7	•
HG2409U	8.5	N/A	21.2	18.9	16.8	15.0	11.9	9.2	
HGV-2409U	8.5	N/A	21.2	18.9	16.8	15.0	11.9	9.2	•
HG2410U	10	N/A	N/A	22.4	20.0	17.8	14.1	11.0	•
HG2412U	12	N/A	N/A	N/A	25.1	22.4	17.8	13.8	
HG2415U-PRO	15	N/A	N/A	N/A	N/A	31.7	25.1	19.5	ı

Appendix A - Minimum Separation Distance (cm)

Configurations in BLACK Can be used in either MOBILE OR FIXED MOUNTED Installations Configurations in RED can only be used in FIXED MOUNTED Installations Configurations with N/A are not permissible, via. FCC 15.247(b)(4)(i)

Appendix B

					Ampli	fier Power F	Rating			Card Alone
			1000	800	630	500	400	250	150	
Antenna Model	Antenna Type	Gain (dBi)	29.9	29	28	27	26	24	21.8	17.5
HG2401U	whip/monopole	Ļ	9	9	9	9	9	9	9	1-11
HG2402RD	whip/monopole	2	9	9	9	9	<mark>9</mark>	o	9	1-11
HG2403RD	whip/monopole	ო	9	9	9	9	9	Q	9	1-11
HG2403UR	whip/monopole	ო	9	9	9	9	9	Q	9	1-11
HG2404CU	whip/monopole	ო	9	9	9	9	9	Q	9	1-11
RE05E	whip/monopole	S	9	9	9	9	o	Q	Q	1-11
RE05U	whip/monopole	5	9	9	9	9	9	Q	9	1-11
HG2405	whip/monopole	S	9	9	9	9	9	9	9	1
HG2406U	whip/monopole	9	9	9	9	9	9	9	9	ı
HG2407U	whip/monopole	7	N/A	9	9	9	9	9	9	1
HG2408U	whip/monopole	ω	N/A	9	9	9	9	9	9	ı
HG2409U	whip/monopole	8.5	N/A	9	9	9	9	9	9	1
HGV-2409U	whip/monopole	8.5	N/A	9	9	9	9	9	9	ı
HG2410U	whip/monopole	10	N/A	N/A	9	9	9	9	9	I
HG2412U	whip/monopole	12	N/A	N/A	N/A	9	9	9	9	ı
1G2415U-PRO	whip/monopole	15	N/A	N/A	N/A	N/A	9	9	9	I

FCC / IC Compliant Configurations - Channels of Operation

Configurations in BLUE can be used in either MOBILE OR FIXED MOUNTED Installations (NO FILTER REQUIRED) Configurations in BLACK can be used in either MOBILE OR FIXED MOUNTED Installations (FILTER REQUIRED) Configurations with "-" are NOT PERMISSIBLE as they do not meet the FCC Part 15 restricted band limits Configurations in RED can only be used in FIXED MOUNTED Installations (FILTER REQUIRED) Configurations with N/A are NOT PERMISSIBLE, via. FCC 15.247(b)(4)(i)

(mW) - as labeled

(dBm)

Important Information

Your wireless system has been installed and configured by an RF professional to comply with FCC Part 15 regulations. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the installation and configuration manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the end user will be required to correct the interference at their own expense.

Modifications to this system including changing the antenna, power setting or transmit channel may result in a non-compliant system, and should only be undertaken by professional installers after reading the Installation Guide for this system.

For further information contact:

Hyperlink Technologies Technical Support Dept. 1201 Clint Moore Road Boca Raton, FL 33487 Email: support@hyperlinktech.com

SAFETY NOTICE

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment when installed as directed. When this device is installed as a fixed-mount application there is a minimum required separation distance of one (1) meter between the antenna and all persons during normal operation. For mobile mounted antennas, the required separation distance is a minimum of twenty (20) cm between the antenna and all persons during normal use.

Installer: Please post this notice in a prominent location near the transmitter.