

Radio remote control

Note:

For operation in USA only: This device complies with Part 15 Subpart C Section 231 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 this device must accept any interference received, including interference that may cause undesired operation.

Warning:

Any unauthorized modification to this device could void the user's authority to operate the equipment.

Controls	Operation	Practical hints	Service products, Technical data	Index
----------	-----------	-----------------	-------------------------------------	-------

Central locking



N80.35-2002-20

- 1 Release button for mechanical key
- 2 Indicator lamp
- 3 Lock button <
- 4 Unlock button OE

Notes:

Malfunctions could occur if the radio remote control is exposed to moisture. As a precaution, both radio remote controls should always be carried.

The radio remote control transmits in all directions. It does not have to be pointed at the vehicle. Do not expose the radio remote control to high levels of electromagnetic radiation. Risk of malfunctions.

The radio remote control has an average range of about 32 ft (approx. 10 m). Always verify the correct operation of the radio remote control by listening for the locking noise and by checking that the white patch on the interior door handle is visible.

When pressing the OE or < buttons, the indicator lamp illuminates. If the indicator lamp does not illuminate, the batteries must be replaced. For instructions on replacing the batteries in the radio remote control, see page 189.

The remote control will not function when there is a vehicle key inserted in the ignition lock.

Unlocking with radio remote control:

Press the  button once. The driver's door is unlocked and the hazard warning light, as well as the radio remote control indicator lamp, blink once.

Press the  button a second time. The passenger door and cargo doors are unlocked and the turn signal lamps, as well as the radio remote control indicator lamp, blink once again. The button must be pressed a second time within 2,5 seconds, otherwise the second request to open can not be performed.

Notes:

The vehicle is automatically locked again, if within 40 seconds of unlocking with the remote control, none of the doors are opened. The hazard warning light doesn't blink.

The hazard warning light doesn't blink, if there is a key in the ignition lock.

Central locking



Locking with radio remote control:

Press the < button. The entire vehicle is locked and the hazard warning light blinks three times. The radio remote control indicator lamp blinks once.

If the hazard warning light does not blink, at least one door is improperly closed. Check to see if there is a door that is not properly closed or if there is a key in the ignition lock. Remove key from ignition lock and/or close doors properly and press the < button again.

Note:

The hazard warning light doesn't blink, if there is a key in the ignition lock.

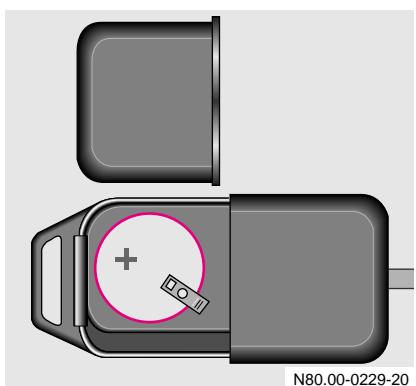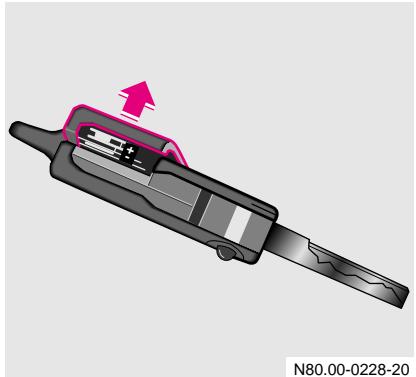

Replacing batteries in radio remote control

Do not touch the battery contact surfaces (insert the batteries with a lint-free cloth).



Warning!

Keep batteries away from children.

Consult a doctor immediately if a battery is swallowed.

Dispose of used batteries in an environmentally responsible manner.

- Release the mechanical key by pressing the release button.
- Remove the battery cover.
- Remove the battery (note correct polarity; positive terminal up).
- Press on the battery cover until it snaps into place.

Note:

Do not operate the remote control while the battery is being replaced.