Sponge Bob Sea Talkies™

54002

Ages 4 and Up

Important: Please save this instruction sheet. It contains valuable product information

- On/Off switch
- Talk Button
- Microphone / Speaker

Patrick and SpongeBob love to chat all day long. Give your best friend one of these Sea Talkies, and you can too!

- 1. Move the On/Off switch to the On position. (Both units must be ON to function properly.)
- 2. Press the talk button to speak
- 3. Release talk button to hear your friend speak.
 You will hear underwater bubbles along with their voice!

IMPORTANT:

Do not use walkie-talkies underwater!

Switch power when finished playing.

Battery Information:

Requires two 9 volt (6LR61) batteries (not included).

Battery Safety:

- Only adults should install and replace batteries.
- Only use the specified battery types.
- Do not use rechargeable batteries.
- Do not try to recharge non-rechargeable batteries.
- Insert batteries correctly—match positive and negative signs.
- Do not place anything across the battery terminals.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- · Remove dead or weak batteries.
- Dispose of batteries safely. Recycle them where possible.
- Do not dispose of batteries in a fire. They may explode!

To install the batteries:

- 1. Use a small Phillips head screwdriver to loosen the screw in the **battery compartment door** on the bottom of the station
- 2. Install batteries as shown.
- 3. Replace the battery compartment door by sliding the tabs into the holes and tightening the screw.

If you have any questions, please contact us at 1-800-247-6570.

www.wildplanet.com

©2003 Wild Planet Toys, Inc.

WARNING: CHOKING HAZARD: Small Parts. Not for Children Under 3 Years.

© 2003 Viacom International, inc. All Rights Reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.