
Coffee Cup Bluetooth Speaker


Model: SP-1078

User Guide

Enjoy your music wirelessly in great sound quality

Features

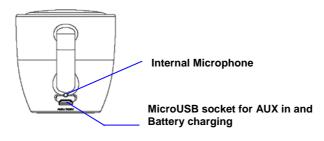

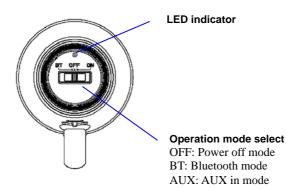

Accessories


- Y cable X 1
- User guide

For first use

Although the battery is partially charged at the factory, it is important to fully charge the battery before first use.

Charging battery with Y cable

- 1. Connector MicroUSB cable to speaker
- 2. Plug Type A male USB connector to USB female socket
- 3. LED indicator light will turn to red while charging and turn off when charging is completed.

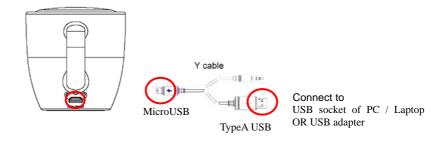

Note: Battery low, LED indication Red and play notice sound every 20 seconds.

Note: The battery charging can work at all operation modes.

Power on and Pairing

- 1. Switch operation mode to Bluetooth mode
- 2. Speaker is now enter the pairing mode, please refer to your Bluetooth device manual for pairing operation

Pairing ID is SP-1078 Password is 0000

Bluetooth mode



*Using hands free function

When using phone to answer the call, you could answer through this speaker microphone.

 
Note: If pairing fail, please switch to Bluetooth mode again.

AUX in

1. Switch operation mode to AUX in mode



2. Speaker is now enter the AUX in mode, please connect speaker to audio device.



Connect to audio device for example MP3 player, Tablet, Mobile phone, etc...

FCC Caution: "Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment."

FCC Statement: "This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help."