



 
Stereo / Hands Free / For Smart Phone
Fashion ELEGANT Bluetooth Speaker

User Manual



INDEX

Overview.....	P1
Specification.....	P2
Control buttons.....	P4
Play Music.....	P6
Battery Recharging.....	P8
Accessories.....	P9

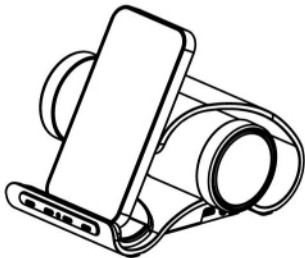 








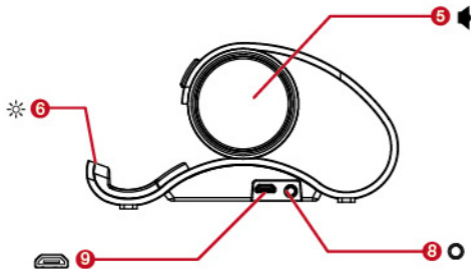


Overview

Front



Left Side



1		Power on/off, Bluetooth pairing, Answer / End a call
2		Play / Pause
3		Forward / Volume up
4		Backward / Volume down
5		Driver unit
6		LED Indicator
7		Internal Microphone
8		3.5mm AUX In
9		DC power input (For power supply and charging battery only)

Note : The control buttons 2 3 4 functions maybe difference in some mobile phone.

○ Specification


● Speaker

- Output: 1.5W x 2
- Speaker unit: Full range, d40 x 18.5 mm / 4 Ohm
- Frequency response: 200Hz-20 KHz
- S/N Ratio: 75dB
- Audio input : Bluetooth or 3.5 mm AUX (Priority)
- Power input : Micro-USB female (DC 5V / 500mA),
or Built-in rechargeable Li-Polymer battery
- Weight: 455g
- Dimension: (W)142 x (D)148 x (H)79 mm

Bluetooth

- Bluetooth 3.0+EDR compliant
- (Compatible with V2.1, V2.0, V1.1 and V1.2 standard)
- Operation Scope : ≤ 10 meters
- Bluetooth protocol support: HSP, HFP, A2DP, AVRCP, PBAP
- Frequency range : 2.402 ~ 2.480 GHz (2.4GHz ISM Segment)
- Microphone: Omni-Directional Type
- LED Indicator:

Color	Status
Blue(Blink twice around 5 seconds)	Bluetooth connecting mode
Blue(Blink once around 5 seconds)	Bluetooth Standby mode
Blue/Red blink alternately	Pairing mode
Red	AUX in / Battery in charge / Low power warning

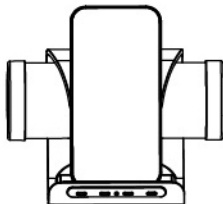 

○ Control buttons

All the functions be controlled by these four buttons, such as (Power on/off), (Answer/End a phone call),(Pairing), (Play/ pause), (Volume up / down), (Backward / Forward). Operation methods showed as below:



⏻ Power on/off, Bluetooth pairing and Answer / End a call button

1.Power on / off

Press for 3 seconds for Power on
Press for 3 seconds for Power off

2. Bluetooth Pairing mode

Turn power on and Double Click
→ Enter pairing status

It is necessarily only for the first time of connection.

If **Pairing mode** fall , please operate double click again.

3. Answer / End a call


One click → Pick up the phone
One click → Hang up the phone



▶|| Play / Pause

- One click → Play or re-play
- One click → Pause

 Note : it maybe stop the song for different mobile phone.

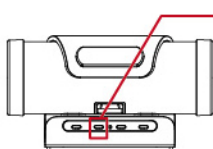


▶▶/||+ Forward / Volume up

1.Forward

- One click → forward to next Track

2.Volume up

 - Press for more than 2 seconds
→ Increase volume

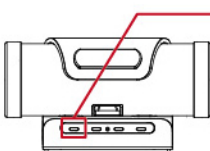

◀||◀◀ Backward / Volume down

1.Backward

- Double click → Previous Track

 
2.Volume down

- Press for more than 2 seconds
→ Decrease volume

○ Play Music


● Bluetooth Mode

Step 1. Press button for 3 seconds for Power on

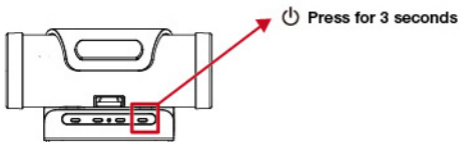

Note : User no need to run the step 2 again, if the Bluetooth pairing had been done before.

 Step 2. Double click the button and enter Bluetooth Pairing mode

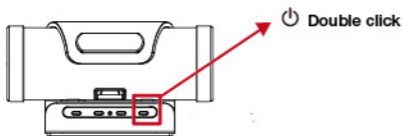

Step 3: Turn on the Bluetooth function of mobile phone or other Bluetooth device and start to search for a new Bluetooth device.

Note :

- 1. Pairing mode will turn to the sleeping mode after 90 seconds, you have to operate double click again if it is necessary to run the pairing once more.*
- 2. Suitable for iPhone, Android Smartphone and iPad, Tablet PC and other Bluetooth device*

Step 4: Select device "SP-310" And enter the password 0000 if it is required.

 
Step 5: Bluetooth mobile phone will show the sign that it is connected to a Bluetooth audio device.

Step 6: For playing music please refer to the manual of your Bluetooth mobile phone.

● Hands Free Mode

Press a click on "Power" button to Answer a call and another click to End a call.

Note: This function only work on Bluetooth mode.

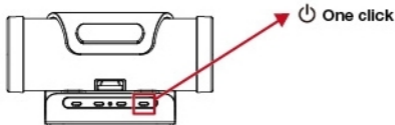

● AUX in Mode



○ 3.5 mm AUX in

Step 1. Connect speaker via audio cable with d3.5mm audio plug.

Step 2. Connect this cable to your media player, such as MP3 / MP4 player, mobile phone, etc

Note : Bluetooth Mode and AUX in Mode can not work at the same time.

○ Battery Recharging

● For speaker internal Battery



Step 1. Plug Micro USB connector to the speaker.

Step 2. LED indicators will show red light when charging power, and go off after fully charged.

Step 3. It will take around 2 to 3 hours for recharging battery.

Step 4. Please remove the power cable when completed.

○ Accessories

- USB power input Cable: 100 cm \pm 10 cm
- d3.5mm AUX in Cable : 60 cm \pm 5 cm
- User manual



- USB power input cable
(For power supply and
charging battery only)



- d3.5mm AUX in cable



- User manual

- The contents are subject to change without prior notice due to product improvement and specification changes.
- Caution: please away from Wifi access point and micro oven when you using Bluetooth speaker for better transmission.

FCC Caution: "Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

FCC Statement: "This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

