

CAR ALARM SYSTEM DEVICE

MODEL NO:

HU03WHT(Transmitter)

HU03WHR(Receiver)

USER'S GUIDE

HU03WH

CAR ALARM SYSTEM

Federal Communications Commission Requirements

Warning : 'CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE WITH THE FCC'S RULES (THE FCC 'GRANTEE') COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.'

THIS DEVICE COMPLIES WITH PARTS 15 OF FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO
CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE,
AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE
RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE
UNDESIRE OPERATION.

Note : This equipment has been tested and found to comply with the limits for a Class B digital devices, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radios communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- '- Reorient or relocate the receiving antenna.
- '- Increase the separation between the equipment and receiver.
- '- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- '- Consult the dealer or an experienced radio /TV technical for help.

USER'S MANUAL FOR CAR ALARM SYSTEM

1. APPLICATIONS FOR THE CAR ALARM SYSTEM

THIS CAR ALARM SYSTEM IS AVAIVABLE TO THE VEHICLE WHICH EQUIPED THE CABRIO A4 CAR MODEL FOR CAR ALARM SYSTEM

2. DESCRIPTION OF THE CAR ALARM SYSTEM

THIS SYSTEM IS CONSIST OF TX(TRANSMITTER) AND RX(RECEIVER), AND IT IS CONTROL SYSTEM FOR THE VEHICLE OF THE DOOR LOCK/UNLOCK ,TRUNK OPEN,PANIC WHEN MATCHING THE TX UNIT CODE WITH SAVED CODE OF RX UNIT.


3. BASIC FUNCTIONS

SYSTEM IS DESIGNED TO OPERATE THE DOOR LOCL/UNLOCK ,TRUNK,PANIC,ALARM BY THE SECURITY CODE


- a) DOOR LOCK
 - b) DOOR UNLOCK
 - c) TRUNK OPEN
 - d) PANIC
 - e) ALARM
-

4. LAYOUT COMPONENT OF RX UNIT


(TOP VIEW)

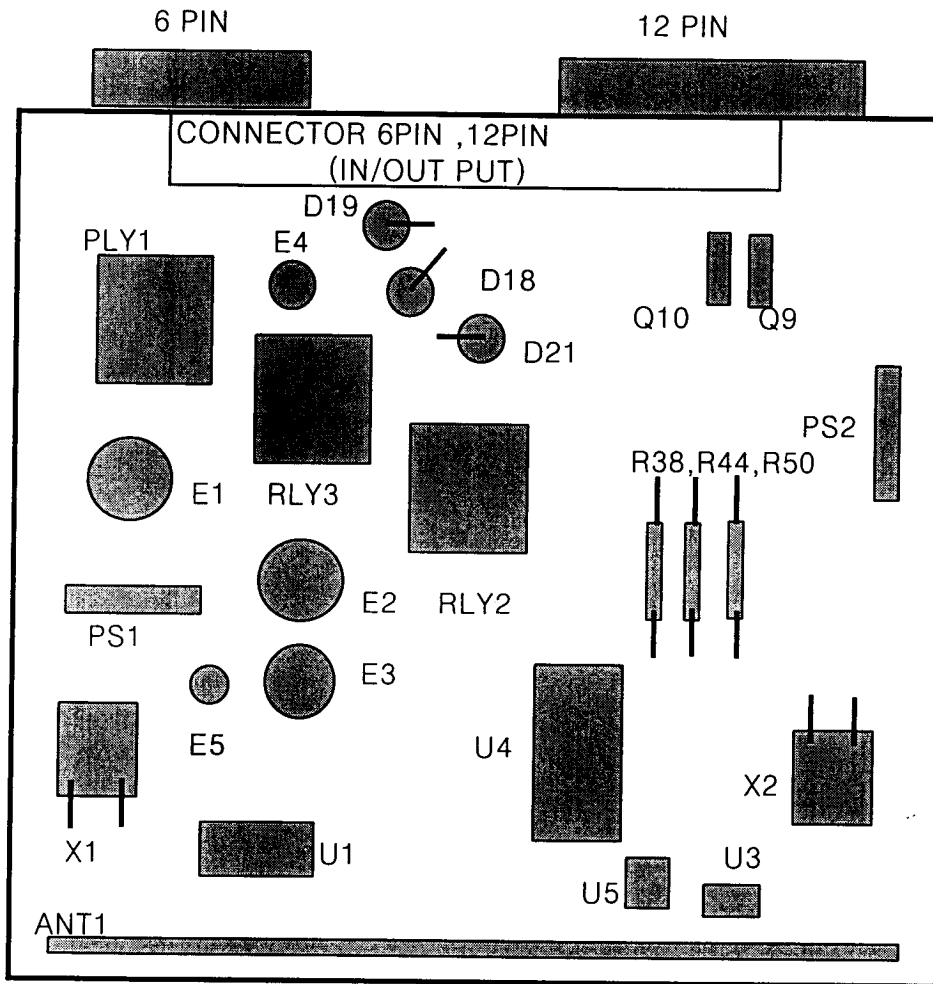

1. APPEARANCE OF TRANSMITTER

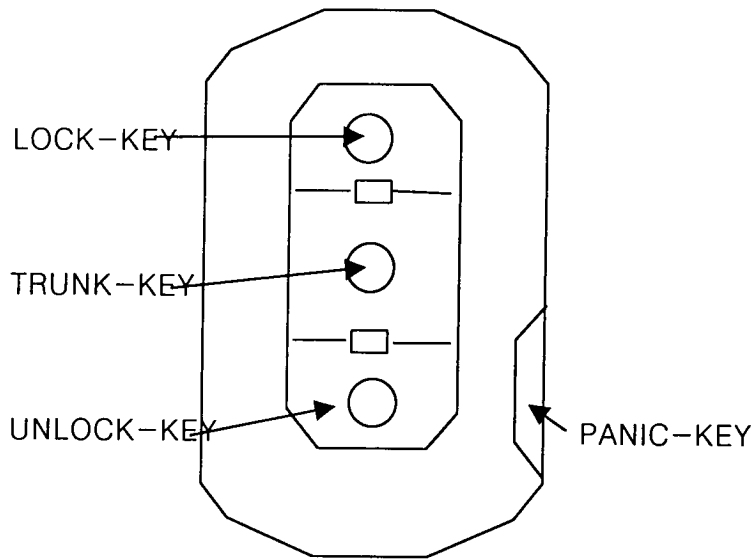

2. CONNECTOR PIN DIAGRAM (RX)

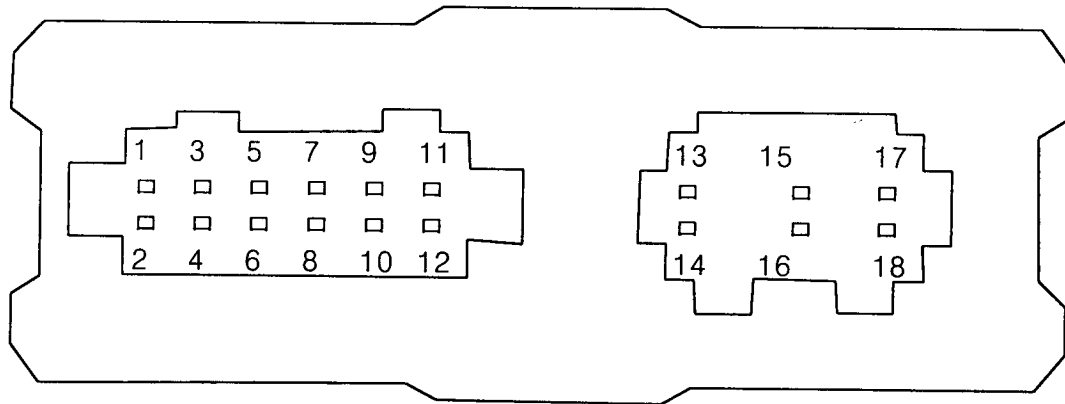

<u>PIN.NO</u>	<u>PIN.NAME</u>	<u>PIN. NO</u>	<u>PIN.NAME</u>
1.	KSS	11.	S
2.	T	12.	-THDF
3.	ZU	13.	R
4.	MHKS	14.	L
5.	KKS	15.	H
6.	AUF	16.	30(BATTERY 12V)
7.	GND	17.	WFS2
8.	15(IGNITION B+)	18.	WFS1
9.	HKS		
10.	AZ		

SYSTEM COMPONENTS LIST FOR CAR ALARM SYSTEM

NO	NAME	PART NUMBER	Q'ty	REFERENCES
1	MAIN RX UNIT(RECEIVER) 315MHz	S02844508	1	MODEL NO:HU03WHR
2	REMOCON(TRANSMITTER) 315MHz	S022844506	1	MODEL NO: HU03WHT