

memorex

User's Manual



XBoom

INTRODUCTION

Thank you for choosing the XBoom as your source for entertainment! This speaker can be used via a Bluetooth connection with a tablet, some computers and some smartphones to stream music and make wireless telephone calls. To make the most of the features of your speaker, we recommend that you carefully read this user guide first.

IMPORTANT WATERPROOF/SAFETY INFORMATION

XBoom is waterproof, which means the speaker can be heavily splashed with water or left in the rain. If the speaker gets wet, it is recommended that you dry the speaker completely before using it again.

Please note: please make sure that cover is closed and secure before using in a wet environment.

PACKAGE CONTENTS

- 1* Memorex Xboom
- 1* Charging cable
- 1* User manual

IMPORTANT SAFETY PRECAUTIONS

When using your Memorex Xboom, basic safety precautions should always be followed, including the following:

 
1. Keep this product and its charging cable away from excessive heat.
2. Do not operate this device with a damaged cable or after it has malfunctioned or has been damaged in any manner.
3. Do not disassemble your device.

CHARGING YOUR SPEAKER

 
1. Use the USB-C power cord in the accessories to connect the DC 5V charger / USB port on your computer / notebook/ power bank and speaker for charging.
2. The red indicator will turn on to indicate that the unit is charging and then will turn off when fully charged.

Tips: There will be a beep when battery low and needs to be recharged. To maintain the battery's durability, fully charge the speaker if it is not used for a long time.

A QUICK LOOK AT YOUR SPEAKER

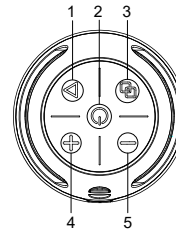

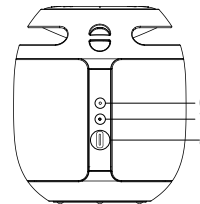

1. Play / Pause / Hands-free Button
Press the "⏮" when music is playing to pause the music. Press the "⏪" when music is paused to begin playing again. Press the "☎" to answer / reject the phone call.
2. Power / Light Button
Press and hold the "⏻" to power on/ off
Press the "🌈" to change the various lightshow modes when Xboom on.
3. TWS / EQ Button
Short press the "👤" to achieve the TWS paired or TWS cleared.
Press and hold the "👤" to switch EQ modes (Indoor or Outdoor)
4. Next track / Vol + Button
To skip to the next track, press and hold the "⏭" Button. To increase the volume, press the "⏩" Button.
5. Previous track / Vol - Button
To go back the previous track, press and hold the "⏮" Button.
To lower the volume, press the "⏪" Button.



6. Mic
7. Indicator
8. Type-C Charging port (DC 5V/1A)

PARING BLUETOOTH DEVICES TO YOUR SPEAKER


 

In order to pair your Bluetooth audio device to your Bluetooth Speaker for the first time, follow the steps below

- 1). Make sure your Bluetooth audio source is held within three meters of your speaker. Press and hold the “” switch on your speaker to power on The LED light will blink blue to indicate that you have entered pairing status.
 - 2). Search Bluetooth devices and select “XBoom”.
 - 3). Once paired. the blue LED light will be solid and you can use your speaker to listen to audio from you Bluetooth sound source.
 - 4). Press and hold the “” to disconnect the Bluetooth.
- Note:

1. If no Bluetooth device becomes available, the speaker will power off automatically after 10 minutes.
2. If the speaker connected to device without playing music, the speaker will power off automatically after 30 minutes.



USING THE HANDS-FREE FUNCTION

When an iPhone or other smartphone is connected to your speaker follow the steps below to take calls hands-free.

1. Press “” to pick up the call.
2. Press the “” twice to reject the call.
3. During call. Press “” again to hang up the call.

TWS FUNCTION

If you have two of XBoom, you can use multiple point to achieve wireless stereo combined playing music.

1. Turn on two speakers and make sure there is no Bluetooth connection with a device.
2. When the speakers enter Bluetooth mode, press the “” button on any of the speaker to start the TWS connection.
3. Under connection, search Bluetooth device and select“ XBoom”.
4. When the device and the units are connected, the blue LED of both units will be solid.
5. Short press the “” button on one of the speakers to disconnect the TWS connection.



FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

TROUBLESHOOTING

| Problem | Solution |
|---|--|
| The speaker doesn't connect to device. | <ul style="list-style-type: none"> - Disable and then enable the Bluetooth feature. - If the speaker was previously connected, delete it from the Bluetooth list on your device, and then search again. |
| A voice "low battery" is heard every few seconds. | The speaker needs to be charged. |
| Bluetooth connection distance cannot reach to 33ft. | <ul style="list-style-type: none"> - Avoid operating the Bluetooth speaker in areas of strong electromagnetic interference, such as near induction cookers, large power fans, motors, etc. - Move the speaker closer to the Bluetooth device. - Fully charge the speaker and try again. |
| Speaker does not charge. | <ul style="list-style-type: none"> - Make sure the connector on the cable is correctly aligned with the connector on the speaker. - Try another charging source. - Secure both ends of the USB-C cable. - If your speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again. |

Contact us if you experience issues with your Memorex product.

support@mizari.com

Toll Free: 1-877-506-4900