

Please replace the following procedure with “Supplementary Instructions for Display Rotation”.

<Only for CF-C1 Series>


After Windows is started up, you can rotate the display and perform the Touch Pad and screen operations in the rotated mode.

## Rotating the Display

1 Press  (Rotation) button.

### ■ To select the angle and rotate the display


#### When using the computer in the tablet mode

- Press  (Rotation) button.

When the computer is held in an upright position, the display will automatically rotate to the most suitable orientation.


If the display has already been at the most suitable orientation, the display will not rotate.

When the computer is held in a level position, the display will rotate 90 degrees clockwise at each press.

- **Windows 7** Press and hold  (Rotation) button.


The display will continue rotating 90 degrees clockwise.

#### When using the computer in the laptop mode

- Press  (Rotation) button.

When the rotation angle is changed from the default value, the display will rotate by the set angle.

When the rotation angle is not changed (when [Keep angle] or [Latest Angle] is set), the display will rotate to primary landscape.

- **Windows 7** Press and hold  (Rotation) button.

The display will continue rotating 90 degrees clockwise.

#### NOTE

- Be sure to use the above procedures to rotate the display.