

Angelcare®

FOR YOUR PEACE OF MIND

OWNER'S MANUAL
Model AC017
Baby Movement Monitor



TABLE OF CONTENTS

WARNINGS.....	P.2
Setup requirements.....	P.6
Positioning the movement Sensor Pad.....	P.7
Setting up the Nursery Unit.....	P.8
Getting to know your monitor.....	P.9
Get knowing information of Light indicators.....	P.11
Troubleshooting.....	P.11
Limited warranty.....	P.12
Technical specifications	P.13

OWNER'S MANUAL

KEEP YOUR OWNER'S MANUAL FOR FUTURE REFERENCE.

PLEASE READ THE WARNINGS AND INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING & USING THE PRODUCT.

FAILURE TO FOLLOW THE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH OR DAMAGES TO THE PRODUCT.

THE SENSOR PAD FEATURE IS NOT FOR USE WITH ADULTS, CHILDREN OR INFANTS OLDER THAN 24 MONTHS.

THE SENSOR PAD IS NOT INTENDED TO BE USED TO DETERMINE IF A CHILD IS OUT OF THE COT.

WARNING

Adult assembly required.

Keep small parts away from children when assembling.

We, at Angelcare®, stand behind all of our products.

If you are not completely satisfied or have any questions,

United States and Canada: Please contact us at: angelcare@cdecinc.ca

Other countries: Please contact your local distributor.

⚠️ WARNINGS

1. THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION. This product is designed to aid in the monitoring of your child. When using the monitor, you must still provide the supervision necessary for the continued safety of your child. Monitoring of premature babies, or those considered to be at risk, should always be carried out under the supervision of a health professional. This monitor SHOULD NOT be used as a medical device, nor as a device to prevent Sudden Infant Death Syndrome (SIDS).

2. WARNING Strangulation Hazard – Children have STRANGLED in cords. Keep adapter cords out of the reach of children (more than 1 m away). NEVER use Sensor Pad(s) without the protective cord covering. Check protective cord covering before each use. Immediately discontinue use of Sensor Pad(s) if protective covering is



damaged or broken.

3. Use button cell provided for the Sensor Pad.

4. Use 2 AA size alkaline batteries (not provided) for the Nursery Unit.

5. ALWAYS be sure that both the transmitter and receiver are working properly and are within range of each other. Test monitor before first use, periodically and when changing location of the Nursery Unit.

6. ALWAYS be sure to immediately check on baby whenever an alarm sounds.

7. DO NOT use monitor near water (such as bath tub, sink, etc.).



8. Keep monitor AWAY from heat sources (such as stoves, radiators, etc.).

9. ALWAYS place both the Nursery Unit and Parent Unit on a flat surface in an upright position and allow for proper ventilation. DO NOT place on sofas, cushions, beds, etc. which may block ventilation.

10. This monitor uses public airwaves to transmit signals. The Parent Unit may pick up signals or interference from other nursery monitors in your area. Your monitor may even be picked up by other households. To protect your privacy, make sure both units are turned OFF when not in use. If you experience interference, change the channel on both units.

11. This product is NOT a toy. DO NOT allow children to play with it.

12. This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product and keep small parts away from children.

13. Use and store the monitor at a temperature between 5 °C and 40 °C.

⚠️ BATTERY WARNING

14. Use ONLY AAA Alkaline batteries for the Nursery Unit. DO NOT mix old and new batteries. DO NOT mix alkaline, standard or rechargeable batteries. Insert batteries with correct polarity. DO NOT short-circuit supply terminals. ONLY use the recommended batteries or equivalent (volts and size) and the correct adapter. Remove batteries when product is stored for long periods of time or when batteries are exhausted. Dispose exhausted batteries properly. DO NOT recharge non-rechargeable batteries. Rechargeable batteries are ONLY to be charged under adult supervision. Keep all batteries away from children.

15. IMPORTANT SAFETY INSTRUCTIONS

15.1 Read these instructions - All the safety instructions should be read before the product is operated.

15.2 Keep these instructions. The safety and operating instructions should be retained for future reference.

15.3 Heed all warnings - All warnings on the product and in the operating instructions should be adhered to.

15.4 Follow all instructions - All operating and use instructions should be followed.

15.5 Water and moisture - DO NOT use this apparatus near water. For example, near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet environment or near a swimming pool and the like. Care should be taken so that objects DO NOT fall onto units and that liquids are not spilled into either unit or Sensor Pad through its openings.

15.6 Cleaning - Disconnect all units before cleaning. DO NOT immerse in water any part of the Nursery Unit, Parent Unit. Clean only with dry cloth.

15.7 Ventilation - DO NOT block any ventilation openings. Allow for proper ventilation when units are in use. DO NOT cover the Nursery Unit or Parent Unit with any object such as a blanket. DO NOT place it in a drawer or in any location which would muffle the sound or interfere with the normal flow of air.

15.8 Heat sources - DO NOT install near any heat sources such as radiators, heat registers, stoves, TVs or other apparatus (including amplifiers) that produce heat. Heat can damage the case or electrical parts.

15.10 Accessories - Only use attachments/accessories specified by the manufacturer. DO NOT place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use ONLY with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions.

15.11 Unplug this appliance during lightning storms or when not used for long periods of time.

15.12 Servicing - DO NOT attempt to service this product yourself as opening or removing covers (except battery doors) may expose you to dangerous voltage or other hazards.

15.13 Replacement parts - When replacement parts are required, be sure the replacement parts specified by the manufacturer have the same characteristic as the original part. Unauthorized substitution may result in fire, electric shock or other hazards.

15.14 Usage - This baby monitor is intended as an aid. It is NOT a substitute for responsible and proper adult supervision and should not be used as such. Use this appliance ONLY for its intended use as described in this manual.

15.15 Power Sources - Operate this product only from the type of power source indicated on the type plate of the adaptor. If you are unsure of the type of power supply to your home, consult your dealer or local power company.

15.16 Overloading - DO NOT overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.

15.17 Object and Liquid Entry - NEVER push objects of any kind into this product through casing slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. NEVER spill liquid of any kind on the product.

15.18 Antenna - The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

15.19 Power Lines - An outside antenna system should NOT be located in the vicinity of overhead power lines or other electric light or power circuit, or where it can fall into such power lines or circuits as contact with them may be fatal.

15.20 WARNING Strangulation Hazard - Children have STRANGLED in cords. Keep adapter cords out of the reach of children (more than 1m away). NEVER use Sensor Pad(s) without the protective cord covering. Check protective cord covering before each use. Immediately discontinue use of Sensor Pad(s) if protective covering is damaged or broken.

15.21 Interference - This monitor uses public airwaves to transmit signals. The Parent Unit may pick up signals or interference from other nursery



monitors in your area. Your monitor may even be picked up by other households. To protect your privacy, make sure both units are turned OFF when not in use. If you experience interference, change the channel on both units.

15.22 Vibration Source - When the monitor is in use, DO NOT use a crib mobile or other crib accessories that may produce vibrations. Other sources of vibrations may include fans, washing machines, loud music, etc. These sources of vibration may interfere with the performance of your Angelcare® monitor and the alarm will not sound if it continues to detect any movement other than your baby's. Be sure all vibration sources are eliminated before using the monitor.

You may experience false alarms for several reasons. The most common reason is the Nursery Unit has not been turned OFF after you have removed your baby from the crib. Another reason is the Sensor Pad has not been placed under the mattress properly.

Be sure the Sensor Pad is on a flat, firm surface with the printed side facing up. The sensitivity level may also need to be adjusted. Refer to Step 5.3. Always be sure to immediately check on baby whenever an alarm sounds.

15.23 Sensor Pad - If the crib has a spring or slat base, place a hard board between the crib base and the Sensor Pad measuring at least 33 x 33 cm and 6 mm thick. Only use your Angelcare® monitor in a stationary sleeping environment such as a crib where the Sensor Pad can rest on a completely flat, firm surface.

16. IMPORTANT SAFETY INSTRUCTIONS RELATED TO USE OF BATTERIES

16.1 Use ONLY the type and size of batteries specified in the owner's manual. There is a risk of explosion if batteries are replaced with an incorrect type.

16.2 Use ONLY AAA alkaline batteries for the Nursery Unit.

16.3 You must use only provided button type battery for the Sensor Pad.

16.4 DO NOT use adapters with Nursery Unit.

16.5 DO NOT use adapters with the Sensor Pad.

16.6 DO NOT use rechargeable batteries in the Nursery Unit. Use alkaline batteries ONLY.

16.7 DO NOT dispose batteries in fire. They may explode. Check with local regulations for possible special disposal instructions.

16.8 Exercise care in handling batteries in order not to short out the batteries with conducting materials such as rings, bracelets and keys. Overcharging, short circuiting, reverse charging, mutilation, or incineration of batteries must be avoided to prevent one or more of the following occurrences: release of toxic materials, release of

hydrogen and/or oxygen gas and rise in surface temperature.

16.9 DO NOT attempt to recharge batteries provided with or identified for use with this product that are not intended to be charged. The batteries may leak corrosive electrolyte or explode.

16.10 DO NOT attempt to rejuvenate the batteries provided with or identified for use with this product by heating them. Sudden release of battery electrolyte may occur, causing burns or irritation to eyes or skin.

16.11 If and when necessary, the batteries must be replaced with identical new ones or equivalent (volts and size). If a battery to be replaced is connected with other batteries in series, replace the other batteries at the same time as well. DO NOT mix old and new batteries.

16.12 Reverse polarity installation of the batteries in the end product must be avoided. Reverse insertion of batteries can cause charging, and that may result in leakage or explosion.

16.13 Remove batteries from this product if you store the product over 30 days because the batteries could leak and damage the product.

16.14 Discard 'dead' batteries as soon as possible since 'dead' batteries are more likely to leak in a product. If a battery has leaked or vented, it should be replaced immediately using protective gloves.

16.15 DO NOT store this product, or the batteries provided with or identified for use with this product, in high-temperature areas.

FCC WARNING (North America Only)

17. Modifications not authorized by the manufacturer may void users authority to operate this device.

17.1 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

17.2 However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

17.3 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

IC warning:

This device complies with Industry Canada RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio

Exempt de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

FCC AND IC REGULATIONS

RF radiation exposure statement


The Nursery Unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. **Caution:** To maintain the compliance with the FCC's RF exposure guideline, install the Nursery Unit at least 20 cm from ALL persons. The transmitter of this device must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada


This product meets the applicable Industry Canada technical specifications.
CAN ICES-3 (B)/NMB-3(B)

SETUP REQUIREMENTS

INCLUDED:

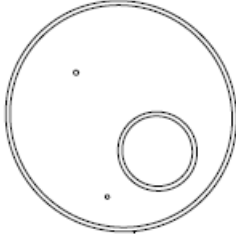

Nursery Unit

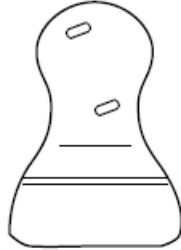

Tabletop stand
(for Nursery Unit)

Model AC017

Baby
Movement Monitor



Wireless Movement Sensor Pad
* Always place Angelcare logo side up *



3V LITHIUM
BATTERY
(for Sensor Pad)

YOU MUST PREPARE:

One hardboard (not included)

Thickness: **6 mm**

Minimum dimensions:

33 cm x 33 cm

Maximum dimensions:
equal to the mattress size



Hardboard

IMPORTANT

The hardboard must be larger than the
Sensor Pad surface.

WHAT YOU WILL NEED (NOT INCLUDED):




2 AAA Alkaline
Batteries
(for Nursery Unit)



Miniature Philips
Screwdriver


POSITIONING THE MOVEMENT SENSOR

- POWERING THE MOVEMENT SENSOR PAD

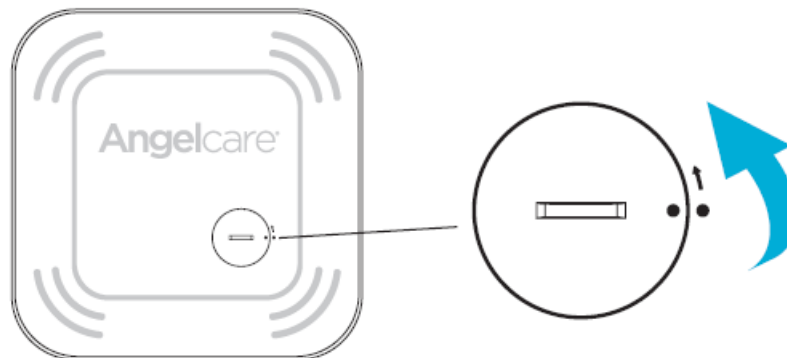

- 1) When using the Sensor Pad for the first time, you will need to insert the provided CR3032 battery.
- 2) Remove the battery cover using a coin. Turn in the direction of the arrow.
- 3) Place the included battery (CR3032) in the compartment.
Note: The + symbol should be facing up.
- 4) Replace the battery cover (the two dots will line up). The Sensor Pad is now ON.
- 5) Verify the wireless sensor pad icon is on the status bar of your Parent Unit.

INSTALL THE SENSOR PAD ON THE MATTRESS SUPPORT

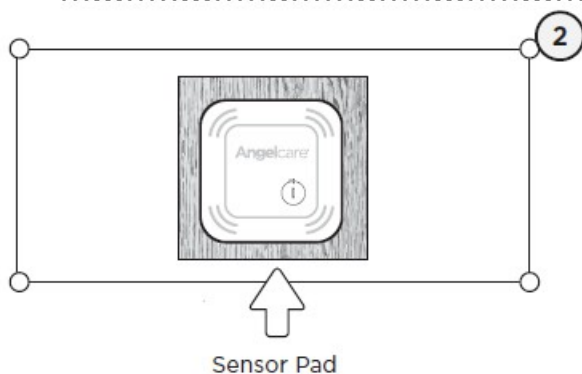

- 1) Remove the mattress from the crib.
- 2) Place the Sensor Pad - printed side up - in the center of the mattress. It should be centered on the hardboard if your crib requires a hardboard support.
- 3) Replace the mattress.

IMPORTANT

If your crib does not have a solid, stable surface for the Sensor Pad, you will need to place a hard support board (not included) underneath the sensor pad to ensure correct operation of the system.

This hardboard support should be at least $\frac{1}{4}$ " (6 mm) thick and should have minimum dimensions of 13" x 13" (33 cm x 33 cm). This support board must be larger than the Sensor Pad surface area.




Hardboard

- Place the Sensor Pad directly underneath the mattress (and on top of support board, if needed) in the center of the crib. Make sure there is nothing between the mattress and Sensor Pad to interfere with operation.
- Never immerse the Sensor Pad in water or other liquids!

- SETTING UP THE NURSERY UNIT


Select a location for the Nursery Unit that is at least 1 m away from the crib.

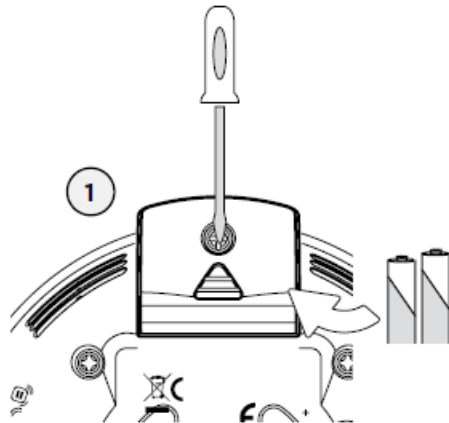

- 1) The batteries cover and insert 2 AAA Alkaline Batteries (not included)

Note:


The batteries maintain power supply in case of power outage.

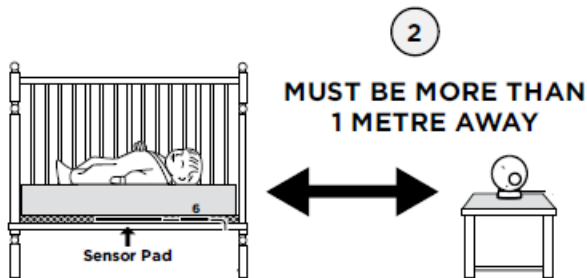

- 2) Install the Nursery Unit on a flat, stable surface facing the cot at a distance of at least 1 metre and plug the Sensor Pad cord into the Nursery Unit.
- 3) Check to make sure the Sensor Pad has not moved from position.
- 4) Place the mattress back inside the cot.

NURSERY UNIT:

Power ON/OFF Light Indicator
Low Batteries Light Indicator

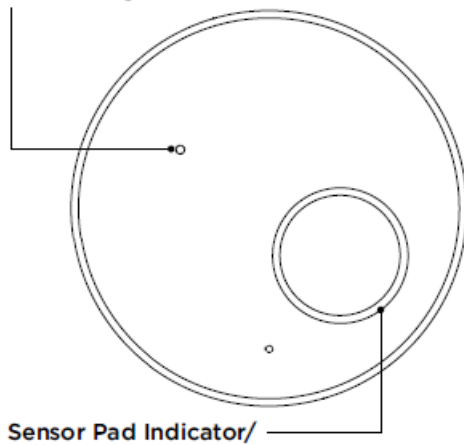


Batteries Compartment

Pause Movement Sensor Pad

Power ON/OFF

Buzzer

Movement Sensor Pad Sensibility Switch

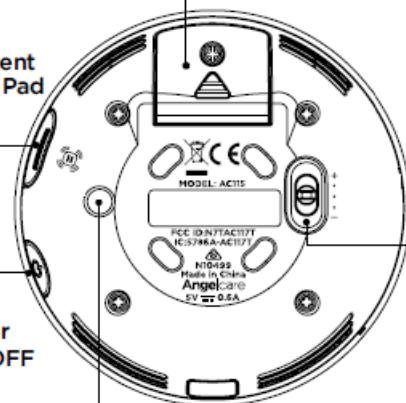

GETTING TO KNOW YOUR MONITOR

TURNING ON YOUR MONITOR

YOU ARE NOW READY TO USE YOUR MONITOR

TURN ON YOUR MONITOR




Press **ON/OFF** on the Nursery Unit

- 1) Press the Nursery Unit Power **ON/OFF** button for 2 seconds. The Power Light indicator then blinks for unit being turned ON. Then a few seconds later, Sensor Pad indicator will blink in BLUE for successful linking with wireless Sensor Pad.

NOTE: The connecting process should be done within 30 seconds. If this sequence is not completed within 30 seconds you will need to switch the units off and start again.

TO TEST THE SENSOR PAD:

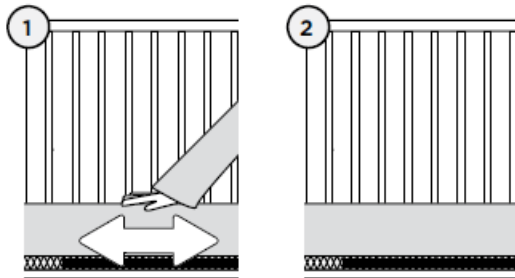

- 1) Move your hand lightly on the mattress.
- 2) Remove your hand from the mattress. After 15 seconds you will hear a 'TIC' pre-alarm sound, and 5 seconds later the Movement Alarm will trigger.
- 3) Repeat by moving your hand lightly in all four corners of the mattress. Ensure the Nursery Unit Movement Indicator is still flashing.


MOVEMENT ALARM

- If NO movement is detected after 15 seconds you will hear a single 'TIC' pre-alarm sound from the Nursery Unit.
- If after a further 5 seconds there is still NO movement detected both the Parent Unit and Nursery Unit speakers will emit loud warning sound.
- Nursery Unit Sensor Pad indicator will flash red light.

IF THE ALARM DOES NOT SOUND

- Avoid contact with crib while Sensor Pad is in operation.
- Place crib near a supporting wall.
- Adjust Sensor Pad sensitivity level.
- Turn OFF crib mobile, fans, loud music or anything else that may cause vibration.

TO STOP THE ALARM

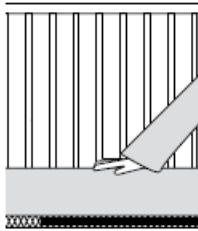

Place your hand back on the mattress.


OR



Press **PAUSE** button on the Nursery Unit

PAUSING AND RESTARTING THE SENSOR PAD

Allows you to pause the Sensor Pad if you remove baby from the cot, e.g. for feeding or comforting.

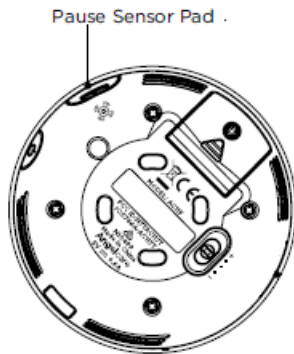

- 1) From the Nursery Unit, press the **Pause** button

IMPORTANT

- If you do not pause the Sensor Pad, the alarm will sound if there is no movement after 20 seconds.
- Ensure to unpause the Sensor Pad before putting baby in the cot.


ADJUST THE SENSOR PAD SENSITIVITY LEVEL:

To ensure adequate monitoring of your child's movements, you can adjust the sensitivity of the Sensor Pad. Set a high sensitivity for a newborn and a lower sensitivity as the child grows and gains weight. A thicker mattress will also need a higher sensitivity. Slide the Nursery Unit sensitivity level button to select between low, medium or high level.

For optimal results begin with medium sensitivity level, adjusting the sensitivity by increasing or decreasing as required.

NOTE:

If you are experiencing false alarms, adjust the sensitivity level.

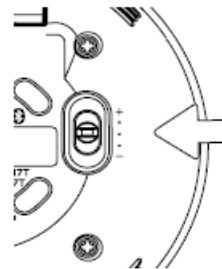

IMPORTANT

- The Sensor Pad is not designed for use with adults, children or infants older than 24 months.
- Once you are finished using the Sensor Pad, please remove it from the baby's crib and store it away.

OUT OF RANGE DETECT


Your monitor has an Out-of-Range detect function that advises you when your two units are not communicating. Out-of-Range situations can be caused by distance or by physical interferences.

OUT-OF-RANGE ALARM

- Alarm activates when the Nursery Unit and the Sensor Pad are not communicating.
- The Nursery Unit will emit beep tone every 20 seconds.
- Out of Range indication will flash in light blue (similar to Aquo) at the Sensor Pad indicator.

GET KNOWING INFORMATION OF LIGHT INDICATORS

Drawing and table below shows what information the Nursery Light indicators and buzzer response according to different situations:

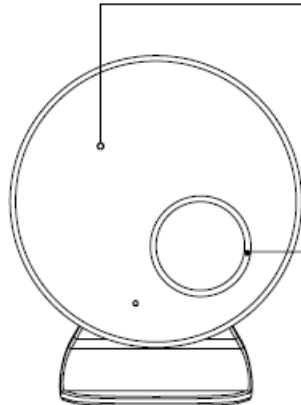

Power On/Off Light Indicator	
Low Battery Light Indicator	
Flashing green	Nursery Unit is ON
Flashing yellow	Nursery Unit batteries are low

Sensor Pad Light Indicator and Buzzer beep for various status		
STATUS	COLOR DISPLAY	BUZZER BEEP
Movement alarm	Fast flashes in RED	Continuous warning alarm tone
Sensor Pad in Pause	Slowly flashes in WHITE	Alert beep for every 20s
Sensor Pad battery LOW	Slowly flashes in YELLOW	Alert beep for every 20s
Lost link with Sensor Pad (Out-of-Range)	Slowly flashes in LIGHT BLUE (AQUO)	Alert beep for every 20s
Linking Success with Sensor Pad	Flashes in BLUE for about 1s	Confirm beep tone

TROUBLESHOOTING

FALSE ALARMS

- Turn **OFF** the Nursery Unit.
- Make sure there is no bedding between the mattress and the Sensor Pad.
- If the crib has a spring or slat base, place a hardboard between the crib base and the Sensor Pad measuring at least 33 x 33 cm and 6 mm thick.
- Make sure Sensor Pad is positioned as described under the setup requirements. Sensitivity may need to be adjusted, refer to **ADJUST THE SENSOR PAD SENSITIVITY LEVEL, P.10**

ALARM WILL NOT SOUND

- Avoid contact with the crib when the monitor is **ON**.
- Place crib near a solid supporting wall to avoid Sensor Pad from detecting movement from outside the crib.
- Turn **OFF** crib mobile, fans, loud music or anything else that may cause vibration.
- You may need to decrease the sensitivity, refer to **ADJUST THE SENSOR PAD SENSITIVITY LEVEL, P.10**

NURSERY UNIT POWER ON INDICATOR (GREEN LIGHT) DOES NOT LIGHT UP

- Check connections or change to another electrical outlet.
- Press the Nursery Unit ON/OFF button for 2 seconds to turn the Nursery Unit ON.

WEAK RECEPTION (OUT-OF-RANGE INDICATION FREQUENTLY APPEARS)

.....

- Bring Nursery Unit and Sensor Pad closer together.
- Change the position of Nursery Unit
- Place Nursery Unit on a flat surface away from baby’s reach.

SENSOR PAD LIGHT INDICATOR FLASHING RED (MONITOR IS BARELY DETECTING MOVEMENT)

.....

- Make sure there is no bedding between the mattress and the Sensor Pad.
- The Sensor Pad must rest on a completely flat and firm surface. If the cot has a spring or slat base, place a hard board between the cot base and the Sensor Pad measuring at least 33 x 33 cm and 6 mm thick.
- Make sure Sensor Pad is positioned as described under the setup requirements. Sensitivity may need to be adjusted, **ADJUST THE SENSOR PAD SENSITIVITY LEVEL, P.10**

NO POWER

.....

- Check or replace batteries.
- Make sure Monitor is **ON**.

NURSERY UNIT POWER ON INDICATOR (GREEN LIGHT) DOES NOT LIGHT UP

.....

- Check batteries are put inside the Nursery Unit.
- Press the Nursery Unit ON/OFF button for 2 seconds to turn the Nursery Unit ON.

LIMITED WARRANTY

Angelcare® warrants to the original owner of this product that Angelcare® monitor is free from any material and workmanship defects for the term of the warranty period (see warranty table below to determine the warranty for your country). If this monitoring system fails to function properly when used as directed under normal conditions and during the warranty period, Angelcare® will either repair or replace the product, at our discretion, free of charge. Please contact your local distributor to validate warranty and warranty period.

The product must be accompanied by a proof of purchase, either a bill of sale or other proof that the monitoring system is within the warranty period. Angelcare® will bear the cost of repairing or replacing the product and shipping it back to you.

This warranty does not apply to a product which has been damaged as a result of improper maintenance, an accident, improper voltage supply or any other form of misuse. The warranty is also void if the owner repairs or modifies the product in any way. Angelcare® is not liable for any incidental or consequential damages with regard to this product. The warranty also excludes any liability other than what is stated above. No other warranty is given.

This warranty does not cover products and accessories which are not Angelcare-branded, or any problems that result from usage that is not in accordance with product instructions, failure to follow the product instructions, or problems caused by using accessories, parts or components not supplied by Angelcare.

LEGAL RIGHTS VARY FROM COUNTRY TO COUNTRY. SOME COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

WE ARE NOT IN ANY WAY RESPONSIBLE FOR ANY OUTCOME RESULTING FROM THE USE OF THIS PRODUCT.

IMPORTANT! This Angelcare® monitor is a personal care product. Please do not return this product to the store. If you have questions or need help, please call your distributor before returning this product.

WARRANTY TERM PER COUNTRY	
North America	1 year
UK, South Africa, Russia	1 year
Other countries	2 years

TECHNICAL SPECIFICATIONS

Range:

Open field (Open area without obstructions): up to 10 metres.

Power Supply:

2 AAA alkaline batteries (not included) for Nursery Unit.

1 CR3032 size battery (included) for Wireless Sensor Pad.

Caution: To reduce the risk of electric shock, do not expose this product to rain or moisture.

Danger of explosion if batteries are incorrectly replaced. The battery included for the Wireless Sensor Pad is 1 CR3032 size battery, manufactured by CHAOCHUNG LIMITED (CR3032H, 3V). Only use the

Angelcare recommended replacement battery. To obtain information on replacement batteries please contact Angelcare customer service:

www.angelcarebaby.com or contact your local distributor. Instructions will be included with the replacement battery. Dispose of exhausted batteries properly according to your local ordinances. Keep all batteries away from children.

Batteries:

- DO NOT mix old and new batteries.
- DO NOT mix alkaline standard (carbon-zinc), or rechargeable (NI-CD, NIMH, etc.) batteries.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Transmission:

Transmission from the Nursery Unit to Sensor Pad and Sensor pad to Nursery Unit is made on the range of 2.402 to 2.480 GHz frequency

Number of frequency channel is 40.

Transmission Power is about 1dBm.

Hereby, Angelcare Monitors Inc, declares this baby monitor is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The EU declaration of conformity can be obtained through your local distributor. Please refer to address in the manual.

PROTECT THE ENVIRONMENT

This electronic equipment contains reusable material and must not be disposed with domestic waste. Please take it to a collecting point for electric and electronic equipment (ask your local authorities for details).