

Angelcare[®]

FOR YOUR PEACE OF MIND

OWNER'S MANUAL

SOUND MONITOR

Model AC423



EN
2

DE
XX

XX
XX

XX
XX

XX
XX

XX
XX

TABLE OF CONTENT

Warnings..... 3
AC423 SETUP REQUIREMENTS.....7
STEP 1 - Charge Parent Unit 8
STEP 2 - Setup Nursery Unit..... 9
STEP 3 - Turn on your Monitor10
STEP 4 - Test and get to know your Monitor 11
STEP 5 - Activate and deactivate additional functions14
Troubleshooting.....16
Warranty18
Technical specifications19
DEUTSCH.....XX
XXXX

OWNER'S MANUAL

KEEP YOUR OWNER'S MANUAL FOR FUTURE REFERENCE.

PLEASE READ THE WARNINGS AND INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING & USING THE PRODUCT.

FAILURE TO FOLLOW THE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH OR DAMAGES TO THE PRODUCT.

 **WARNING**

Adult assembly required.
Keep small parts away from children when assembling.

 
We, at Angelcare®, stand behind all of our products.
If you are not completely satisfied or have any questions,
United States and Canada: please contact us at: angelcare@cdecinc.ca
Other countries: please contact your local Distributor.

⚠ WARNING

1. THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION. This product is designed to aid in the monitoring of your child. When using the monitor, you must still provide the supervision necessary for the continued safety of your child. Monitoring of premature babies, or those considered to be at risk, should always be carried out under the supervision of a health professional. This monitor is not intended to be used as a medical monitor.

2. STRANGULATION HAZARD.

Children have **STRANGLED** in cords. Keep the Adapter cords out of the reach of children. **DO NOT** put the Nursery Unit inside a crib or play yard. Because of the serious strangulation risk to infants and toddlers,

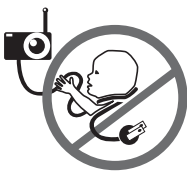

parents and caregivers should never place the Nursery Unit within 3 feet (1 meter) of a crib. **NEVER** use extension cords with AC Adapters. **ONLY** use the AC Adapters provided.

3. When an AC Adapter is plugged into an electrical outlet, **DO NOT** touch the exposed end.

4. **ALWAYS** be sure that both the transmitter and receiver are working properly and are within range of each other. Test monitor before first use, periodically and when changing location of the Nursery Unit.

5. **ALWAYS** be sure to immediately check on baby whenever an alarm sounds.

6. **DO NOT** use monitor near water (such as bath tub, sink, etc.).

7. Keep monitor **AWAY** from heat sources (such as stoves, radiators, etc.).

8. **ALWAYS** place both the Nursery Unit and Parent Unit on a flat surface in an upright position and allow for proper ventilation. **DO NOT** place on sofas, cushions, beds, etc. which may block ventilation.

9. This monitor uses public airwaves to transmit signals. The Parent Unit may pick up signals or interference from other nursery monitors in your area. Your monitor may even be picked up by other households. To protect your privacy, make sure both units are turned **OFF** when not in use. If you experience interference, change the channel on both units.

10. This product is **NOT** a toy. **DO NOT** allow children to play with it.

11. This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product and keep small parts away from children.

12. Use and store the monitor at a temperature between 50°F (10°C) and 104°F (40°C).

⚠ BATTERY WARNING

13. Use **ONLY** AAA **RECHARGEABLE** batteries for the Parent Unit. **DO NOT** mix old and new batteries. **DO NOT** mix alkaline, standard or rechargeable batteries. Insert batteries with correct polarity. **DO NOT** short-circuit supply terminals. **ONLY** use the recommended batteries or equivalent (volts and size) and the correct adapter. Remove batteries when product is stored for long periods of time or when batteries are exhausted. Dispose exhausted batteries properly. **DO NOT** recharge non-rechargeable batteries. Rechargeable batteries are **ONLY** to be charged under adult supervision. Keep all batteries away from children.



IMPORTANT SAFETY INSTRUCTIONS

14.1 Read these instructions - All the safety instructions should be read before the product is operated.

14.2 Keep these instructions. The safety and operating instructions should be retained for future reference.

14.3 Heed all warnings - All warnings on the product and in the operating instructions should be adhered to.

14.4 Follow all instructions - All operating and use instructions should be followed.

14.5 Water and moisture - DO NOT use this apparatus near water. For example, near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet environment or near a swimming pool and the like. Care should be taken so that objects DO NOT fall onto units and that liquids are not spilled into unit through its openings.

14.6 Cleaning - Disconnect all units before cleaning. DO NOT immerse in water any part of the Nursery Unit, Parent Unit. Clean only with dry cloth. DO NOT spray with cleaning products or solvents.

14.7 Ventilation - DO NOT block any ventilation openings. Allow for proper ventilation when units are in use. DO NOT cover the Nursery Unit or Parent Unit with any object such as a blanket. DO NOT place it in a drawer or in any location which would muffle the sound or interfere with the normal flow of air.

14.8 Heat sources - DO NOT install near any heat sources such as radiators, heat registers, stoves, TVs or other apparatus (including amplifiers) that produce heat. Heat can damage the case or electrical parts.

14.9 Power cord protection - Protect the Adapter's power cord from being walked on or pinched by furniture or other items - Power supply cords should be routed so that they are not likely to be walked on or pinched by items upon or against them, paying particular attention to cords and plugs, convenience receptacle, and the point where they exit from the product.

14.10 Accessories - Only use attachments/accessories specified by the manufacturer. DO NOT place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use ONLY with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of

the product should follow the manufacturer's instructions.

14.11 Unplug this appliance during lightning storms or when not used for long periods of time.

14.12 Servicing - DO NOT attempt to service this product yourself as opening or removing covers (except battery doors) may expose you to dangerous voltage or other hazards.

14.13 Replacement parts - When replacement parts are required, be sure the replacement parts specified by the manufacturer have the same characteristic as the original part. Unauthorized substitution may result in fire, electric shock or other hazards.

14.14 Usage - This baby monitor is intended as an aid. It is NOT a substitute for responsible and proper adult supervision and should not be used as such. Use this appliance ONLY for its intended use as described in this manual.

14.15 Power Sources - Operate this product only from the type of power source indicated on the type plate of the adaptor. If you are unsure of the type of power supply to your home, consult your dealer or local power company.

14.16 Overloading - DO NOT overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.

14.17 Object and Liquid Entry - NEVER push objects of any kind into this product through casing slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. NEVER spill liquid of any kind on the product.

14.18 Antenna - The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm (7.9") from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

14.19 Power Lines - An outside antenna system should NOT be located in the vicinity of overhead power lines or other electric light or power circuit, or where it can fall into such power lines or circuits as contact with them may be fatal.



14.20 STRANGULATION HAZARD. Children have STRANGLED in cords. Keep the Adapter cords out of the reach of children. Because of the serious strangulation risk to infants and toddlers, parents and caregivers should NEVER



place the Nursery Unit within 3 feet (1 meter) of a crib. NEVER use extension cords with AC Adapters. ONLY use the AC Adapters provided.

14.21 Interference - This monitor uses public airwaves to transmit signals. The Parent Unit may pick up signals or interference from other nursery monitors in your area. Your monitor may even be picked up by other households. To protect your privacy, make sure both units are turned OFF when not in use. If you experience interference, change the channel on both units.

IMPORTANT SAFETY INSTRUCTIONS RELATED TO USE OF BATTERIES

E
N

15.1 Use ONLY the type and size of batteries specified in the owner's manual. There is a risk of explosion if batteries are replaced with an incorrect type.

15.2 Use ONLY AAA rechargeable batteries and/or the AC Adapters provided for the Parent Unit. You must use only rechargeable batteries in the Parent Unit. DO NOT use alkaline batteries or you will severely damage the unit.

15.3 Charge the batteries for 15 hours prior to first use. Be sure to have the monitor in the OFF position during this period. ONLY use the AC Adapters included with your monitor.

15.4 DO NOT use these adapters with any other equipments.

15.5 When unplugging the AC Adapter from the Nursery Unit, be sure it is switched to the OFF position. If it isn't, the unit will revert to battery mode if batteries are installed.

15.6 DO NOT use rechargeable batteries in the Nursery Unit. Use alkaline batteries ONLY.

15.7 DO NOT dispose batteries in fire. They may explode. Check with local regulations for possible special disposal instructions.

15.8 Exercise care in handling batteries in order not to short out the batteries with conducting materials such as rings, bracelets and keys. Overcharging, short circuiting, reverse charging, mutilation, or incineration of batteries must be avoided to prevent one or more of the following occurrences: release of toxic materials, release of hydrogen and/or oxygen gas, rise in surface temperature.

15.9 DO NOT attempt to recharge batteries provided with or identified for use with this product that are not intended to be charged. The batteries may leak corrosive electrolyte or explode.

15.10 DO NOT attempt to rejuvenate the batteries provided with or identified for use with this product by heating them. Sudden release of battery electrolyte may occur, causing burns or irritation to eyes or skin.



WARNING

(North America Only)

15.11 If and when necessary, the batteries must be replaced with identical new ones or equivalent (volts and size). If a battery to be replaced is connected with other batteries in series, replace the other batteries at the same time as well. DO NOT mix old and new batteries.

15.12 Reverse polarity installation of the batteries in the end product must be avoided. Reverse insertion of batteries can cause charging, and that may result in leakage or explosion.

15.13 Remove batteries from this product if you store the product over 30 days because the batteries could leak and damage the product.

15.14 Discard 'dead' batteries as soon as possible since 'dead' batteries are more likely to leak in a product. If a battery has leaked or vented, it should be replaced immediately using protective gloves.

15.15 DO NOT store this product, or the batteries provided with or identified for use with this product, in high-temperature areas.

16.1 Modifications not authorized by the manufacturer may void users authority to operate this device.

16.2 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

16.3 However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

16.4 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC AND IC REGULATIONS

RF radiation exposure statement

The Nursery Unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. Caution: To maintain the compliance with the FCC's RF exposure guideline, install the Nursery Unit at least 20cm from nearby baby and persons.

Industry Canada

This product meets the applicable Industry Canada technical specifications.
CAN ICES-3 (B)/NMB-3(B)

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept interference that may cause undesired operation of the device.

SETUP REQUIREMENTS

SOUND MONITOR

Model AC423

E
N

 
INCLUDED:




Rechargeable Parent Unit



Nursery Unit

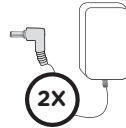


2 AC Adapters

 

3 AAA rechargeable batteries for Parent Unit

 WHAT YOU WILL NEED (NOT INCLUDED):



4 AAA Alkaline Batteries for Nursery Unit

 
 


Miniature Phillips Screwdriver

BABY'S ROOM:


IMPORTANT

Place the crib near a supporting wall and far from air currents. Install the Nursery Unit on a flat, stable surface facing the crib at a distance of at least 1 meter (3 feet).

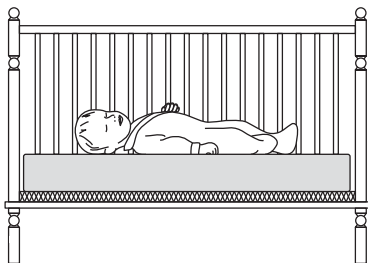


IMPORTANT

 
Keep at least **1 m (3 ft)** apart

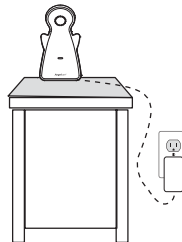

 STEP 1 - CHARGE PARENT UNIT (12 HOURS)

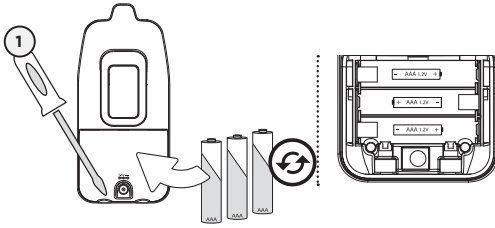

 IMPORTANT
 Never use regular alkaline batteries in the Parent Unit; they may explode.

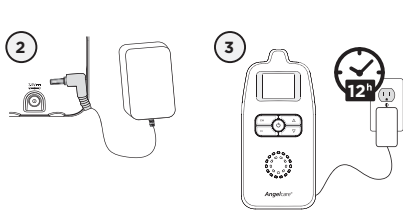


- 1) Remove the battery cover and insert the Rechargeable Batteries (included).
- 2) Connect the AC Adapter to the Parent Unit and into an electrical outlet.
- 3) Charge the unit for **12 continuous hours** (prior to first use).


NOTE:

To optimize your battery performance please refer to Battery Guidelines in the Trouble Shooting section p.16.

 PARENT UNIT:

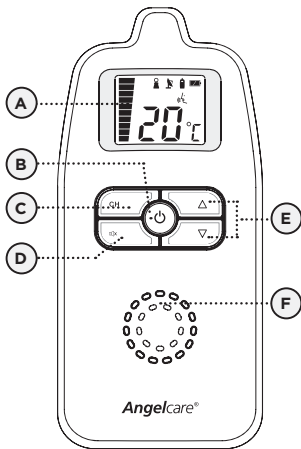

Front View

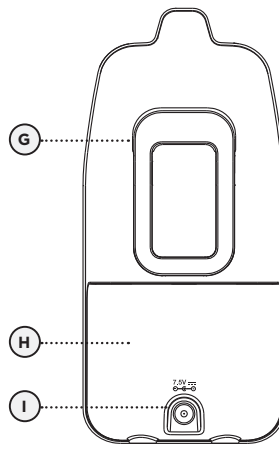 


Rear View


- A) LCD Screen
- B) Power ON/OFF
- C) Channel Button
- D) Mute Button
- E) Sound Volume Up/Down
- F) Speaker
- G) Belt Clip
- H) Battery Cover
- I) AC Adapter Outlet

STEP 2 - SETUP NURSERY UNIT

 E
N

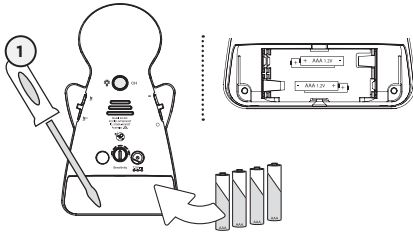

 
- 1) Remove the battery cover and insert 4 AAA Alkaline Batteries (not included).
- 2) Place the Nursery Unit at a **minimum of 1m (3ft)** away from the crib.
- 3) Connect the AC Adapter to the Nursery Unit and plug into an electrical outlet.

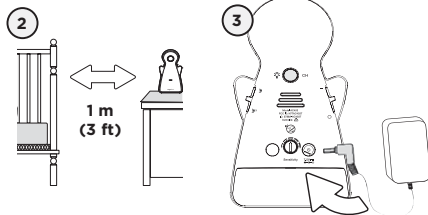

NOTE:


The batteries maintain power supply in case of power outage.

 NURSERY UNIT:

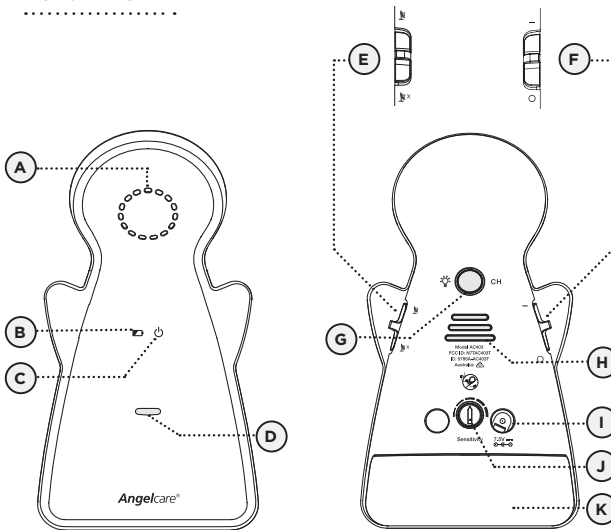


Front View

Rear View

- A) Speaker
- B) Low Battery Indicator
- C) Power ON Indicator
- D) Microphone
- E) Out-of-Range Switch ON/OFF
- F) **Power ON/OFF** 
- G) Night Light Button / Channel Selection
- H) Speaker
- I) AC Adapter Outlet
- J) Volume Sensitivity Dial
- K) Battery Cover

 STEP 3 - TURN ON YOUR MONITOR

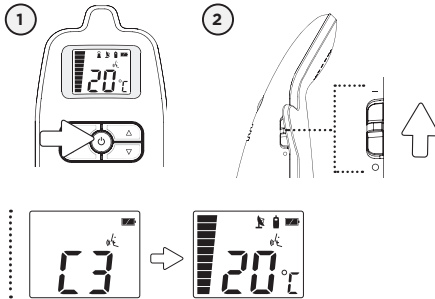

If there is a lost connection between the 2 units (refer to troubleshooting p.16):



- The Out-of-range icon (if activated) will blink on the screen and the Parent Unit will beep.

 
- 1) Press the Parent Unit **ON/OFF** button for 2 seconds.
- 2) Slide ON the Nursery Unit Power **ON/OFF** button.

NOTE:

The screen of the Parent Unit will show the channel of transmission (C1 to C8). Then temperature reading will replace the channel display.

If there is no temperature display, turn OFF and then ON the Nursery Unit again. The channel display will then turn to temperature reading in one minute.

CHANNEL SELECTION

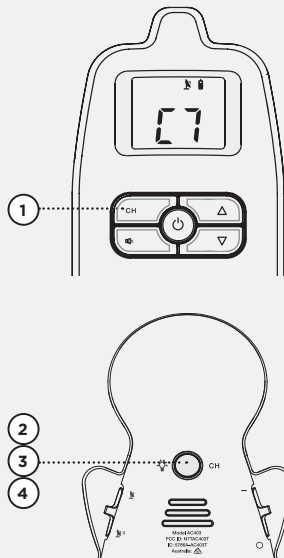

TO SELECT THE CHANNEL:

- 1) Press the Channel button to enter the channel mode.



The Antenna icon will blink.

- 2) Press and hold the Nursery Unit back button until the Night Light flashes.



The Antenna icon will blink with present of the channel number display

- 3) Press and release the Nursery Unit back button to change the channel your monitor transmits on (C1 to C8).
- 4) Press and hold the Nursery Unit back button until the Night Light stops flashing to confirm your channel selection and quit to normal mode.

NOTE :

If the transmission is not clear, or if you hear interference sounds, you should change the channel.

IMPORTANT ICONS



Nursery Unit:
Appears when the Nursery Unit battery is low



Out-of-Range:
Indicates the loss of connection between the Parent Unit and Nursery Unit.



Parent Unit:
Appears only when the Parent Unit is in channel selection mode.



Sound:
Indicates sound activation. Flashing when speaker is muted.



Temperature Display:
Indicates room temperature



Channel Display:
Indicates selected channel



Volume/ Microphone Sensitivity Level:
Indicates speaker volume and sound level.

Battery Level icon:

Indicates battery level



 
Empty



1/2 Full



Full



Charging

STEP 4 - TEST AND GET TO KNOW YOUR MONITOR

4.1 - SOUND

TO TEST SOUND:

Ask someone to speak into the Nursery Unit or place the unit near a radio to ensure that sound is being picked up.

 
IMPORTANT

To avoid feedback (whistling), keep both units at least 3 meters apart (10 feet).

IF YOU HEAR NO SOUND:


- Check that both units are switched on.
- Check that both units are plugged into functioning electrical outlets.
- Check the batteries in both units (replace or recharge them as necessary per unit).
- Bring the Parent Unit closer to Nursery Unit.

ADJUST THE SOUND LEVEL

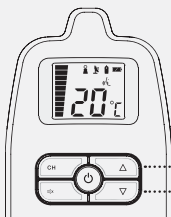

..... Raise volume
..... Lower volume

 PUT IN TEMPORARY MUTE MODE

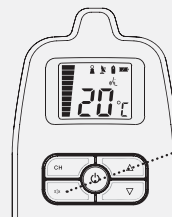




Press the **Mute** button once to mute the sound (see step 5.3).

4.2 - BATTERIES

HOW TO CHECK THE BATTERIES:



Unplug the AC Adapters from both units.

   - If the Nursery Unit **Power Indicator** does not show or if the Low Battery Indicator does show, replace the batteries.
- If the Parent Unit screen does not light up or it switches off, recharge the batteries.

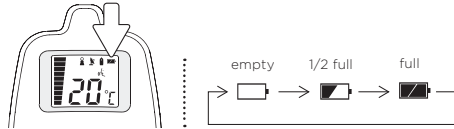

HOW TO CHARGE THE BATTERIES IN THE PARENT UNIT:

  Plug the AC into the Parent Unit and a working electrical outlet. Your Parent Unit can function with the batteries at 1/2 capacity but it is recommended that they are fully charged before unplugging from the AC Adaptor and power outlet for maximum use.

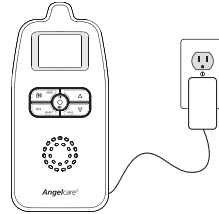


PARENT UNIT BATTERY ALARM

- Alarm activates when batteries need to be recharged.
- Parent Unit will emit a beep sound every 15 seconds.
- Battery Alarm icon will show on screen.

4.3 - MICROPHONE SENSITIVITY LEVEL

TO ADJUST THE MICROPHONE SENSITIVITY LEVEL:

 You can adjust the Nursery Unit sensitivity dial to change your microphone from less sensitive to very sensitive. This sensitivity dial is located on the back of the Nursery Unit.

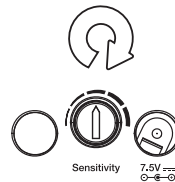

YOU ARE NOW READY TO USE YOUR MONITOR


EN

The Angelcare® monitor can be used with the pre-program factory settings or you can also customize your settings to your preference.

 
DEFAULT SETTINGS

 **Temperature Unit:** Celsius

 **Out of Range:** OFF

 **Speaker Volume Level:** 3
Microphone Sensitivity Level: Middle

 **Night Light:** OFF

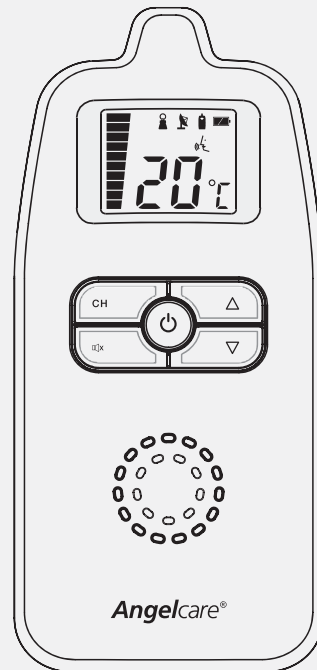

IMPORTANT

- Test your monitor before first use.
- Test your monitor regularly to ensure it is functioning correctly.

STEP 5 - ACTIVATE AND DEACTIVATE ADDITIONAL FUNCTIONS

The Angelcare® monitor can be used with the pre-program factory settings or you can also customize your settings to your preference.

5.1 - OUT-OF-RANGE

Your monitor has an Out-of-Range function that advises you when the Parent Unit cannot receive the signal from the Nursery Unit. Out-of-Range situations can be caused by distance or by physical interferences.

RANGE:

 
Up to 250 meters / 820 ft (open field)

TO ACTIVATE THIS FUNCTION:

Slide the **Out-of-Range** button on the Nursery Unit to turn it **ON** or **OFF**.



The Out-of-Range Indicator will blink on the Parent Unit.

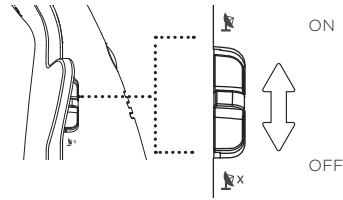

OUT-OF-RANGE ALARM

- Alarm activates when your two units are not communicating.
- The Parent Unit will emit a double beep every 8 seconds.
- Out of Range Icon will flash on the screen.

The Out-of range Icon will also flash when channel is being changed or the unit is reconnecting

IMPORTANT

 
If the Parent Unit is OFF after out of range function being set ON, it is needed to reset and reactivate the function to ON again. To reset it, make sure the Parent Unit is ON again and slide the Nursery Unit switch to OFF and then slide the switch to ON again as to reactivate the Out of range function.

TO STOP THE OUT-OF-RANGE ALARM:



Press 2 seconds to turn the Parent Unit OFF



OR

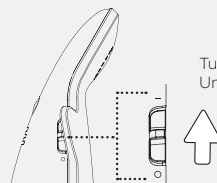


Turn the Nursery Unit ON

5.2 - NIGHT LIGHT

  Press the **Night Light** button on the back of the Nursery Unit to turn it **ON** or **OFF**.

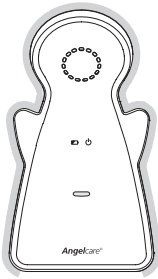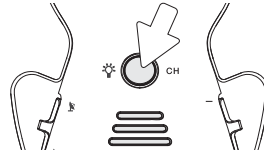

 When the Nursery Unit power source is the adapter, the night light is illuminated from all edge sides of the Nursery Unit body.

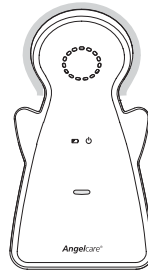

When it is used with battery only, the night light is illuminated only from top edge of the Nursery Unit.

5.3 - TEMPORARY MUTE

 
Allows you to put your monitor in temporary **Mute** mode.

TO ACTIVATE MUTE:

Press the **Mute** button.


TO DEACTIVATE MUTE:

Press the **Mute** button again to hear sounds.

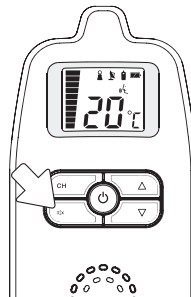

After 2 minutes the sound function will be automatically reactivated.

 If you press too long on the Sound/OFF button it will shut down the Parent Unit.

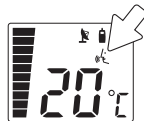

NOTE:

The Sound Icon will blink on the Parent Unit whilst the Temporary MUTE is activated.

TROUBLESHOOTING

TAKING CARE OF YOUR RECHARGEABLE BATTERIES

- Ensure that you fully charge your batteries for 15hrs before their first use.
- To maintain maximum battery life it is recommended that you fully discharge your batteries periodically. Battery performance can be diminished by leaving the batteries constantly charging. If your parent unit is not in use, please turn it off.
- Inadequate battery power can impair the performance of your monitor. If you are not happy with the performance of your Parent Unit/Monitor please replace the rechargeable batteries (4 x NiMH Rechargeable Batteries).
- It is advisable to change the batteries every 6 months.

NO SOUND IS BEING TRANSMITTED

- Change to the following as some text regarding MUTE is duplicated:
- Ensure that both units are switched ON.
- Check that the sound has not been turned down on the Parent Unit. Increase the volume level on the Parent Unit, refer to step 4.1.
- Check on the Parent Unit screen to see if the monitor is in temporary MUTE mode instead of ON mode. Deactivate the temporary MUTE function, refer to step 5.3.
- If there is no power to any unit check/replace the batteries, recharge the Parent Unit & check the AC Adaptors are working. Change electrical outlets if required.
- Bring the Parent Unit and Nursery Unit closer together.

NURSERY UNIT POWER ON INDICATOR (GREEN LIGHT) DOES NOT LIGHT UP

- Switch OFF and back ON the Nursery Unit.
- Check connections or change to another electrical outlet.

WEAK RECEPTION

- Bring units closer together.
- Change the position of one or both units.
- Place units on a flat surface away from baby's reach.
- Replace the batteries or recharge Parent Unit.

STATIC, DISTORTION, INTERFERENCES (FROM OTHER MONITORS, WIRELESS PHONES, WALKIE-TALKIES, ETC...)

- Rotate Parent Unit or move it away from source of interference.
- Try a different channel, refer to step 3.



FEEDBACK (LOUD NOISES EMITTED FROM THE PARENT UNIT)
.....

- Move units farther apart (at least 3 meters/10 feet apart).
- Decrease volume on Parent Unit.

THE PARENT UNIT SCREEN IS BLACK (PARENT UNIT IS OFF)
.....

- Turn the Parent Unit back ON by pushing and holding the power button.
- Replace the batteries or recharge Parent Unit.

If you experience a problem that is not noted in this manual, please do not return the product to the store. If you are not completely satisfied or have any questions:

United States and Canada: please contact us at: angelcare@cdecinc.ca

Other countries: please contact your local Distributor.

We may have a simple solution to your problem.

LIMITED WARRANTY

Angelcare® warrants to the original owner of this product that Angelcare® rechargeable, sound monitor (model AC423) is free from any material and workmanship defects, for a period of one (1) year (rechargeable batteries not included) from the date of the original purchase. If this monitoring system fails to function properly when used as directed under normal conditions within the one year period, Angelcare® will either repair or replace the product, at our discretion, free of charge. Please contact your distributor.

The product must be accompanied by a proof of purchase, either a bill of sale or other proof that the monitoring system is within the warranty period. Angelcare® will bear the cost of repairing or replacing the product and shipping it back to you.

This warranty does not apply to a product which has been damaged as a result of improper maintenance, an accident, improper voltage supply or any other form of misuse. The warranty is also void if the owner repairs or modifies the product in any way. Angelcare® is not liable for any incidental or consequential damages with regard to this product. The warranty also excludes any liability other than what is stated above. No other warranty is given.

LEGAL RIGHTS VARY FROM COUNTRY TO COUNTRY. SOME COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

WE ARE NOT IN ANY WAY RESPONSIBLE FOR ANY OUTCOME RESULTING FROM THE USE OF THIS PRODUCT.

IMPORTANT!

This Angelcare® monitor is a personal care product. Please do not return this product to the store. If you have questions or need help, please call your distributor before returning this product.



TECHNICAL SPECIFICATIONS

Range:

up to 820 ft. (250m)

Number of Channels:

USA/C anada: 8 channels.

Europe: 8 channels.

Power Supply:

4 AAA alkaline batteries (not included)
or 100-240V AC/7.5V DC adapter
for Nursery Unit.

3 AAA rechargeable batteries and
100-240V AC/7.5V DC adapter
for the Parent Unit.

Caution: To reduce the risk of electric shock, do not expose this product to rain or moisture.

Danger of explosion if batteries are incorrectly replaced. The included Batteries are 3 AAA NIMH rechargeable batteries, manufactured by GPI INTERNATIONAL LIMITED (GN60AAAHC, 1.2V 600mAh) or by HIGHPOWER TECHNOLOGY CO., LTD (HFR-44AAAJ600, 1.2V 600mAh).

They may only be replaced by 3 AAA NIMH rechargeable batteries.

Batteries:

- DO NOT mix old and new batteries.
- DO NOT mix alkaline standard (carbon-zinc), or rechargeable (NI-CD, NIMH, etc) batteries.

Transmission:

Transmission from the Nursery Unit to the Parent Unit is made on the 864 MHz frequency in Europe/Asia/Africa and on the 927 MHz frequency for North America/Ecuador/Oceania.

This Device complies with the requirements set out in the R&TTE 1999/05/EC Directive.

E
N



PROTECT THE ENVIRONMENT

This electronic equipment contains reusable material and must not be disposed with domestic waste. Please take it to a collecting point for electric and electronic equipment (ask your local authorities for details).

E r P COMPLIANCE

SOUTH AFRICA-BRAZIL-ECUADOR-EUROPEAN UNION

Use only Angelcare * Brand power supply-model number T07505V001

GERMANY

Use only Angelcare * Brand power supply-model number T07505F002

AUSTRALIA

Use only Angelcare * brand power supply-model number T07505S002

NORTH AMERICA

Use only Angelcare * brand power supply-model number T07505U002

UK-MALTA-ASIA-CYPRUS

Use only Angelcare * brand power supply-model number T07505B001



IM423-INT-101813