


LOVEGETY? for women

Each of part name and function

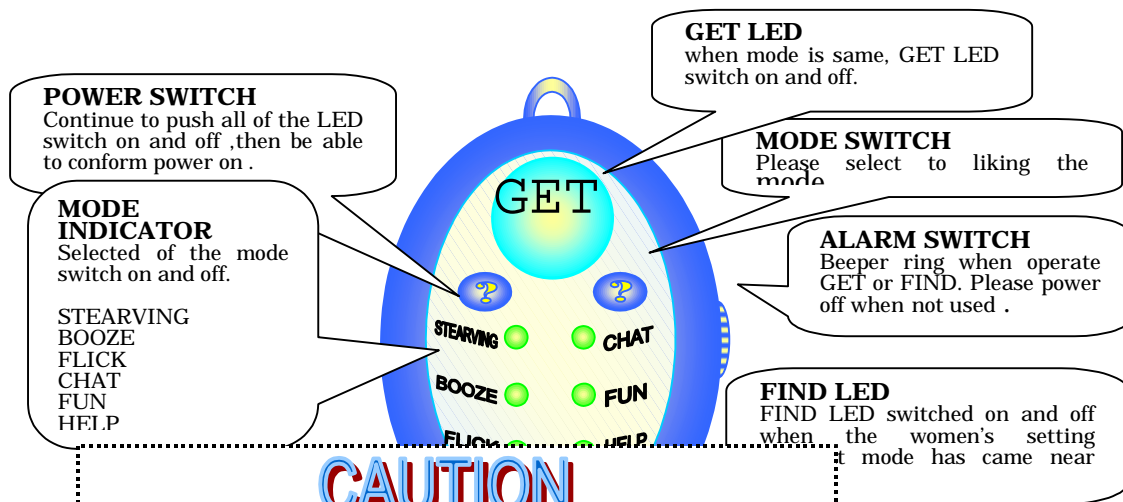

This equipment is **women's**. It respond to **men's**.

How to

1. Please power on ,select liking mode by mode button. Selected the mode can confirm by red indicator switch on and off .
2. when the men's equipment of power on condition come near , if mode is same , "GET LED" is switch on and off .
3. If not "FIND LED" is switch on and off , men's equipment will inform to be near . At that time , please change over mode switch . "GET LED" is switch on and off at one of these modes .

CAUTION

- Use 2 pcs UM-3 or "AA" 1.5V alkaline battery
- Please replace all batteries at the same time , do not mix old and new batteries .
- Don't mix with a different type of battery .
- Please do not try to recharge the battery or put it into the fire .

CHANGE OR MODIFICATIONS NOT EXPESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE : This equipment has been tested and found to comply with the limits for a Class B designed device, pursuant to Part 15 of the FCC Rules . These limits are designed to provide reasonable protection against harmful interference in a residential installation . This equipment generates, use and can radiate radio frequency energy . and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna .

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.