


Homeowners Guide

Bath Whirlpool

Remote Control

K-1703

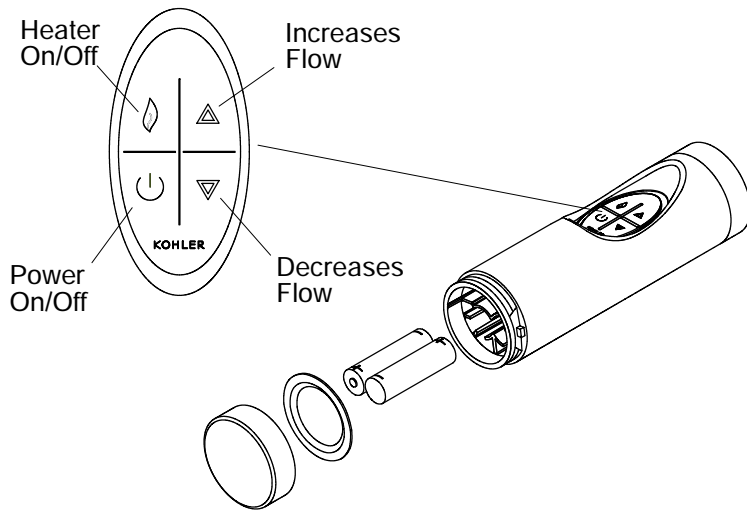

Remote Control

The remote control places the whirlpool functions at your fingertips to further enhance your bathing experience. The functions of the remote are identical to the user keypad. You may turn the whirlpool on and off, turn the heater on and off, and increase or decrease the water flow by the press of a button.

The waterproof remote control is designed to be used in the bath and will float in the water.

Two AAA batteries are used in the remote control. To replace, simply unscrew the end cap and insert the batteries, as shown above. Tighten the end cap securely, making sure the end cap makes contact with the seal.

FCC Compliance

FCC ID : N82-KOHLER001

Canada ID : 4554A-KOHLER001

Compliance Statement (Part 15.19)

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning (Part 15.21)

Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

Programming Your Remote Control

NOTE: Programming of the remote control is normally not required. If more than one device in your home, or in the near vicinity of your home, uses a remote control, it may be necessary to program this remote control to the user keypad. If you replace your remote control, or replace the pump control, it may be necessary to program the remote control.

- Turn power on to the whirlpool.
- Turn off all modes of operation. Wait approximately one minute until the keypad darkens (sleep mode).
- On the user keypad, press the up arrow, down arrow and the heater button simultaneously. The bottom LED, on the keypad's indicator bar, will begin flashing.
- While the LED is flashing, press the heater button on the keypad. A light sequence will illuminate up and down the indicator bar.
- While the indicator bar light sequence is active, press any button on the remote control. The program will download and the user keypad will darken. The user keypad will now respond only to this remote control.

Homeowners Guide

Bath Whirlpool Remote Control

USA: 1-800-4-KOHLER
Canada: 1-800-964-5590
Mexico: 001-877-680-1310
kohler.com

THE BOLD LOOK
OF **KOHLER**®

© 2003 Kohler Co.

1021550-5-A