


# FCC ID: N8F12706VC

## WIRELESS FM MICROPHONE TRANSMITTER WITH VOICE CHANGER

### OPERATION

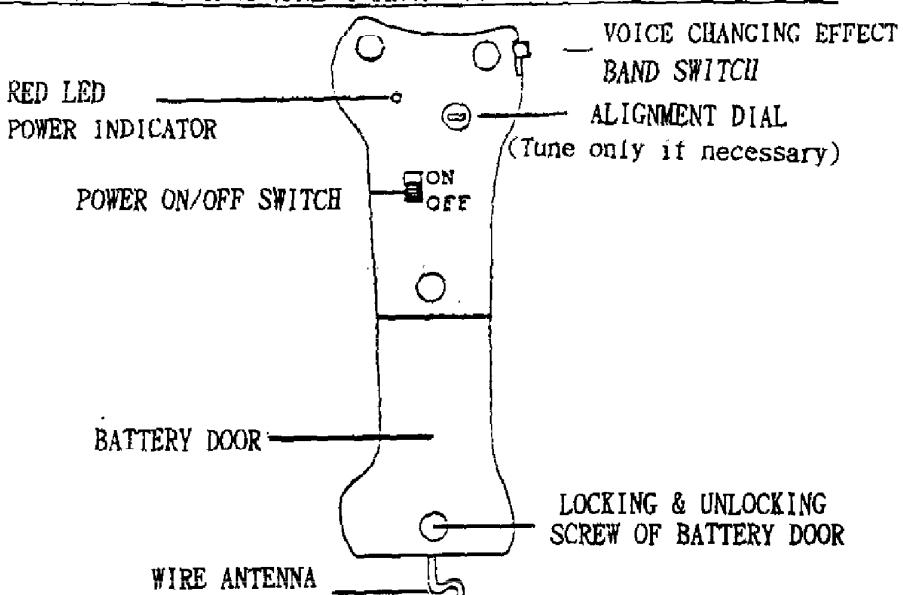

1. Use a good FM radio with speaker and install new batteries to it.
2. Turn the radio on and tune it to frequency 108 MHz or near.
3. Hold the microphone near the radio and turn on the power switch to see the red LED power indicator.
4. Talk into the top part of the microphone and at the same time fine tune the radio dial until your voice is clearly heard from the radio at maximum level.
5. Now you can play by holding your microphone standing 5 to 7 metres away from the radio and hear your own voice being broadcasted when spoken into the microphone.
6. Select the desired distorted voice effect by pushing the 'VOICE CHANGING EFFECT BAND SWITCH ' up or down.

Note : If a local radio station happens to be broadcasting with the same frequency as your microphone, tune the radio dial slightly away from it until it is clearly unheard. Use a small screwdriver and fine tune the ALIGNMENT' dial inside the microphone by turning it slightly, again, until your voice is clearly heard from the radio at maximum level. Take care not to press too hard with the screwdriver onto the dial as it may be damaged.


In case there is feedback sound like whistle heard, move the microphone away from the radio or lower the volume of the radio immediately.

This microphone has been fully tested by the factory and it should never be exposed to rain, splash or moisture.

## INSTRUCTIONS

### BATTERY INSTALLATION

1. Use a screwdriver to remove the screw at the lower part of the microphone and lift off the battery door.
2. Install one 9 volt (006P size) battery into the battery compartment according to polarities as shown by the diagrams engraved.
3. Replace the battery door and screw properly.
4. Untie the wire antenna and extend it fully.

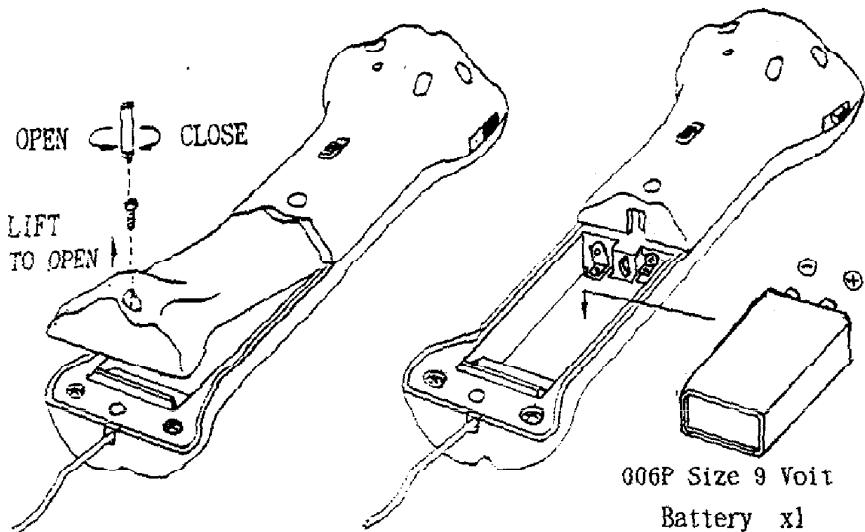

### IMPORTANT

- Not suitable for children under 36 months due to small parts.
- Replacing battery must be carried out by adult.
- Non-rechargeable battery is not to be recharged.
- Always remove battery from toy if not used for an extended period of time.
- Do not use rechargeable batteries.

Battery **must** be installed according to correct polarities.

### WARNING

Modifying or tampering with the transmitter or it's components is strictly prohibited and can cause a malfunction and void your FCC authorization to operate Your Wireless FM Microphone Transmitter.