

Module uses 3.3V power ,before into the module must pass the filter capacitor.uses two kinds of crystal 32.768k and 40M.RF signal transmitted by the external filter PCB antenna or an external antenna out;