

1、 Label Content



2、 Label Size

52mm(L)*62mm (W)


3、 Label Location

external



Note: External labels are pasted in the center of the front of the housing.

inside

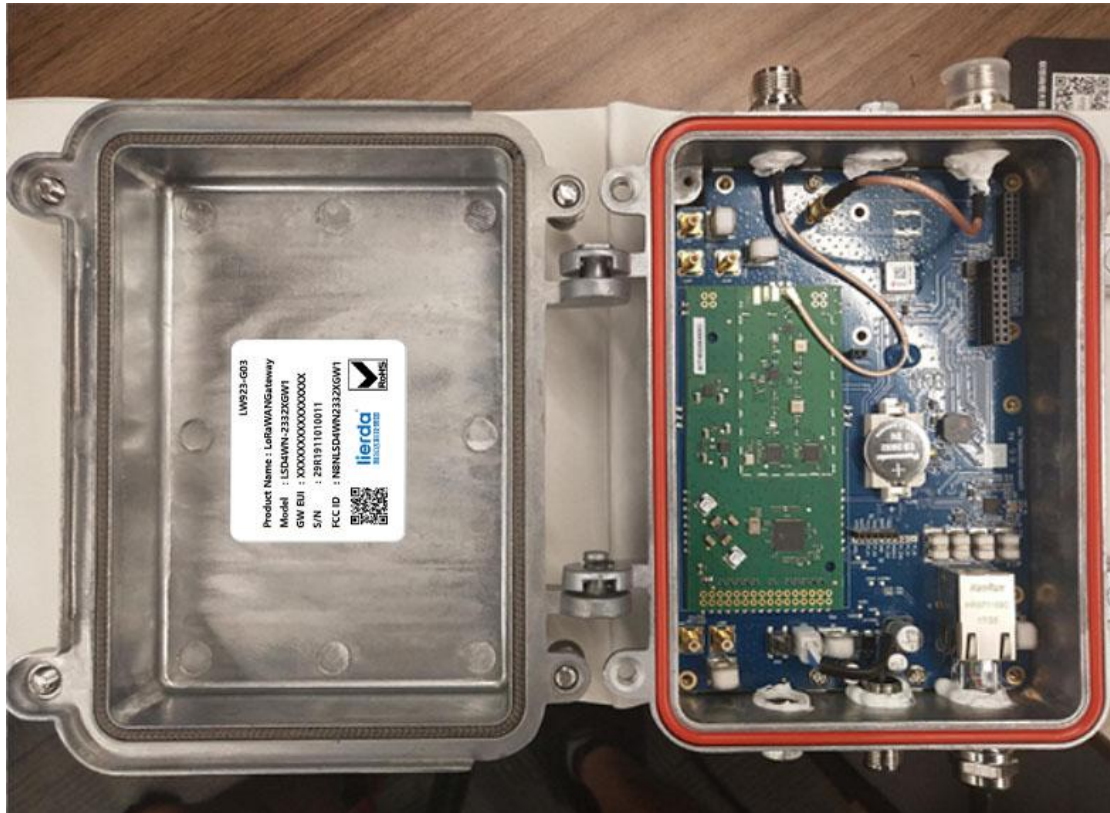

Note: The inner label is pasted in the center of the shell.