Circuit Description

Fuse: When input is shorted, it performs input shorted protect function.
L1□C1: Work together with to performs EMI function.
D1□D2□D3□D4: Performs rectification function.
Q1 □ Q4 □ RK: Performs Oscillating function, let low frequency switch high
frequency.
L2□C7: When switching power, the L2 and C7 take place series resonance
startup the lamp, then L1 restricting current.