User Manual:

Please read this user manual carefully before installation. Keep user manual for fature reference.

Technical Data:

Model	Rated Voltage	Input Frequency	Rated Wattage	Rated Current	Lamp Cap
EU-13W	120V	60Hz	13W	210mA	E26

Treatment of the lamp

- Please don't drop the lamp or push against it.
- Please don't disassemble the lamp, don't make alterations.2

Installation

- Can't be used in dimming circuit.
- Don't install inside a recessed area in the wall.
- Don't use lids without ventilation openings.
- Don't cover with a glass bowl.
- For lamps with a weight significantly higher than that of the lamps for which they are a replacement, attention should be drawn to the fact that the increased weitht may reduce the mechanical stability of certain luminaire.

Electrical connection

- Use only in indoor areas at an ambient temperature 25°C.
- Don't use as emergency lighting.
- To avoid electrical shock, don't install in damp or wet locations.

Remarks

- Don't touch the lamp directly with your hand or face when it is in use to avoid burns.
- If the lamp is damaged, replace it by a new one and don't try to repair it in order to avoid hazards.
- If this lamp should be replaced by a heavier one, please take care that the mechanical stability of the luminaire could be impaired by the increased weight.
- Energy saving lamps containing a small amount of quicksilver/mercury (ca. 5 mg). Nevertheless the toxicity of this small amount requires a disposal as hazarduse waste.
- In the case a lamp breaks, there is no direct risk for the healthiness, but don't touch powdery substances, improve air ventilation. Keep children away.

NOTE

This device complies with part 18 of the FCC Rules.

- 1, Before commissioning this oven please read this instruction manual and keep it carefully.
- 2, There must be more than 30cm high space necessary above the top surface of oven.
- 3, Do not repair the oven yourself, please consult an authorized expert.
- 4, The contents of feeding bottles and bay food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
- 5, Check the oven and the cable regularly for damage. If there is any kind of damage, the oven should not be used.

- Do not attempt to operate this oven with the door open since open-door operation can result in harmfulexposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Carefully clean door seala and sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the : (1) door(bent). (2) hinges and latches(broken or loosened). (3) door seals and sealing surfaces.
- Utensils sould be checked to ensure that they are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Egg in their shell and whole hard- bolled eggs shall not be heated in microwave ovens since they may explode.
- If the door or door seals are damaged. The oven must not be operated until it has been repaired by a trained person.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode. Warning:
- 1, It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover which gives protection against exposure to microwave energy.
- 2, Only allow children to use the oven without supervision when adequate instructions have been given so that the children is able to use the oven in a safe way and understands the hazards of improper use.
- 3, If the supply cord is damaged, it must be replaced by the manufacture of its service agent or a similarly qualified person in order to avoid a hazard.
- 4, This product will make disturbance in AV product, if any disturbance is occurred, use different electrical source jack to supply electricity or use low power or away from them.

Note: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZATED MODIFICATIONS TO THIS EQUIPMENT .SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.