




**RUN
GUARDIAN**



USER MANUAL

I. Parts Overview

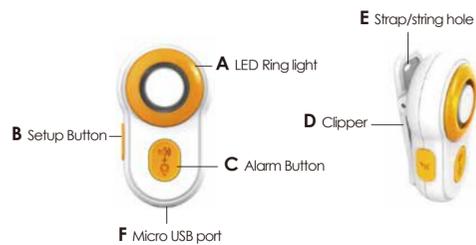

II. SPECIFICATIONS

Wireless Connectivity	Bluetooth 5.0
Battery	200mAh, 4.2V, Lithium
Voltage	3V~4.2V
Alarm Siren	Up to 120db
Charging	Micro USB cable
Working Temperature	-10 C ~45 C
IP Rating	IPX4, weatherproof
Dimension	65 x 38 x 30mm
Weight	20g

III. PARTS & FUNCTIONS

- A LED Ring Light**
This bright visible light serves as safety warning signal when out and about in the dark.
- B Setup Button**
Activate or deactivate the LED light with a short press using this button located on the left side of the device
- C Alarm Button**
 - 1) Trigger a loud audible 120db alarm to call for attention and help with a 2-second long press on this button. To cancel the audible sound, press the setup button together with the alarm button.
 - 2) When in danger, send location notification and ask for help from your listed emergency contacts. Trigger a silent alert with 2-short presses on this button. To cancel this silent alert, press the Setup Button together with the Alarm Button within 3-30secs as per App's setting.
- D Clipper**
Conveniently position the device with this easy clip on to your side pocket, collar, sleeve, belt, bag or anywhere you can visibly reach in case of danger and emergencies.
- E Strap/string hole**
Insert a fancy strap or string for a stylish convenience
- F Micro USB port**
Fast charge the device using a micro USB cable either plugged on a computer or direct power supply

IV. DOWNLOAD APP



V. CONNECTING DEVICE

Open the App and allow App to access to your location. Then permit App to send you notifications. You may be prompted by pop up screens according to the iOS or Android procedures. Click on "Connect Device" then "Add Device". Allow App to use Bluetooth if a pop up screen prompted.

On your alarm device, press the Setup Button for 2-sec. The LED will blink rapidly to indicate its ready for pairing. Click on "MD328E" while the LED is blinking.

Click OK then select the device you just added to go on the main screen of the App.




IMPORTANT
If pop up screens did not show up, go to your phone Settings then look for Run Guardian App. Check if Run Guardian settings are correct.

Is Location set as ALWAYS?
Have you turn ON notifications?
Have you ALLOW access to Bluetooth?

Location- **ALWAYS**
Notifications- **ON**
Bluetooth - **ON**

VI. SETTING THE DEVICE ON APP

While on the main screen, click on Settings (⚙️) to proceed setting up the device with the App

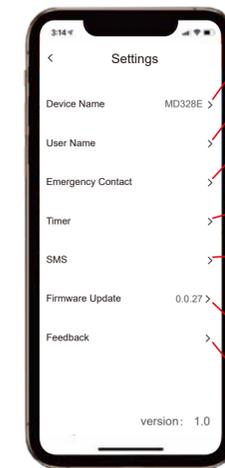

- Rename and personalized your device
- Enter a Name known to your contacts then Save
- Add up to 8 emergency contacts to be notified in case of emergencies
- Set the SOS countdown timer between 3-30s
- Customize the SMS notification sent to your emergency contacts in the event you triggered your alarm
- Check for the latest firmware update
- Send us feedback in case you encountered issues while using the APP or device

VII. CHARGING

Your device battery has been pre-charged enough to setup the device and the App after unboxing. Before using the device outdoor, make sure your device has been fully charged or have enough battery. Check the battery status on the main screen of the APP on your mobile phone.

*If the device is on standby mode, a fully charged battery will last up to 200 days.

When the battery power is low, the APP will display "Low Battery".

When charging, LED will flash to indicate the level of charge. Once 100% fully changed, all LED light will remain on.



VIII. HOW TO USE

1. Make sure your Run Guardian is setup with the App before you carry it around with you. We strongly recommend to setup this device with the App to fully utilize its full benefits.

However, even if the device is not connected to the App, you can press the Alarm Button and it will siren to draw attention. The LED light can also be activated and use as a warning signal.

2. Clip the Device to a convenient and reachable location.

1. Trousers' Pocket
2. Arm band
3. Belt/Waistband
4. Backpack handle/strap
5. Strap or hang like a necklace

3. If you will be out and about at night time or in dark areas, you may use the LED as a light warning device. Short press the setup button to activate or deactivate the LED.

4. How to Trigger Alarm
If you are in danger, in need of help or in case of emergencies, you can trigger the alarm through the device or App if your device is not on your hand.


I. Use Alarm Button on Device



🔊 Press the Alarm Button on the device for 2 second to sound the alarm and send the SOS positioning information to your emergency contacts. To cancel the alarm, press the alarm button and the setup button at same time. Your SOS message will not be transmitted if you cancelled the alarm within your defined countdown timer on the app settings.

🔇 Quick press the Alarm Button on the device twice to send SOS positioning information to your emergency contacts. To cancel the message transmission, press the alarm button and the setup button at same time and it must be done within your defined countdown timer on the app settings.

II. Use SOS button on App

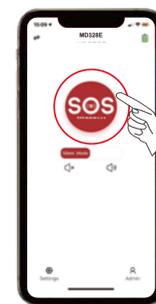

🔊 Select the Alarm Mode on the APP main screen and click the SOS. Your device will sound if it is within 15 meters range and it will send the SOS positioning information to your emergency contacts. To cancel the alarm, get hold of the device, press the alarm button and the setup button at same time. Your SOS message will not be transmitted if you cancelled the alarm within your defined countdown timer on the app settings.

🔇 Select Silent Mode on the APP main screen and click the SOS to send positioning information to your emergency contacts. To cancel the message transmission, click the timer and it must be done within your defined countdown timer on the app settings.

5. Find your Device
If your device is missing, you may use the APP to find it. Open the App and go to Admin, then click Find My Device.

Your device will alarm. Cancel the alarm sound from your device by pressing the Setup and Alarm button at the same time.

IX. CARE TIPS

- Never put the unit very close to your ears. The sound of the alarm is very loud.
- Keep it away from moist environment and flammable explosives.
- Keep the product dry and clean.
- If the unit becomes soiled, use damp cloth or paper towel to wipe it.
- Do not wash or soak in water.

X. WARNING

Battery warning: This device uses a lithium battery. If the following guidelines are not followed, the life of the lithium-ion battery in the device may be shortened or there is a risk of damage to the device, fire, chemical burn, electrolyte leakage and / or injury.

- Do not disassemble, puncture or damage the device or battery.
- Do not remove or try to remove the battery that the user cannot replace.
- Do not expose the battery to flames, explosions or other hazards.
- Do not use sharp objects to remove the battery.



FCC Warning:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: This product contains DEHP and other chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm. For more information go to www.P65Warnings.ca.gov