

## FS14P71M

## 6 PCB view

The following photographs show the printed circuit board that is common to all FS14P71M devices. Other versions using the same PCB with less components assembled, e.g. less buttons, may exist.



Picture 1: FS14P71M PCB top



Picture 2: FS14P71M PCB back