




5 FS191 PCB photographs

The following photographs show the printed circuit board of the FS191 devices with all 7 buttons and both sensors IC300 and IC310 assembled. Other versions using the same PCB with fewer buttons assembled or using different button positions will exist. In the series production devices either sensor IC300 or sensor IC310 or none of them (not both) will be assembled.



Picture 21: FS191 PCB top side

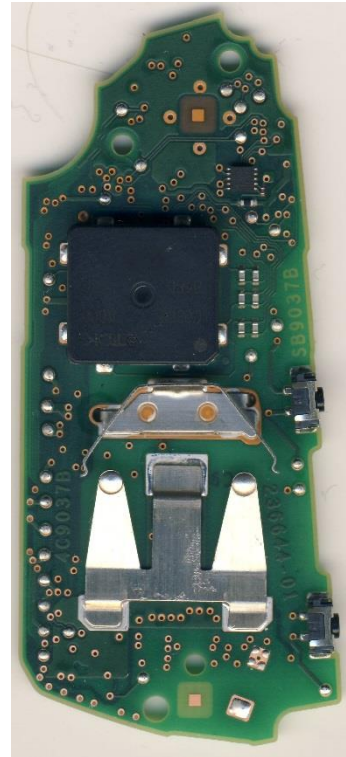

Picture 22: FS191 PCB bottom side