

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\title.fm
DELL CONFIDENTIAL – PRELIMINARY 4/30/07 – FOR PROOF ONLY

Dell™ Vostro™ 1700 Owner's Manual

Model PP22X

www.dell.com | support.dell.com

Notes, Notices, and Cautions



NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.

© 2007 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *Vostro*, *Wi-Fi Catcher*, and *Dell MediaDirect* are trademarks of Dell Inc.; *Intel* is a registered trademark and *Core* is a trademark of Intel Corporation; *Microsoft*, *Windows*, *Outlook*, and *Windows Vista* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries; *Bluetooth* is a registered trademark owned by Bluetooth SIG, Inc. and is used by Dell under license.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model PP22X

May 2007

P/N TT565

Rev. A00

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

Contents

1	Finding Information	15
2	About Your Computer	21
	Determining Your Computer's Configuration	21
	Front View	22
	Left Side View	27
	Right Side View	28
	Back View	31
	Bottom View	33
3	Setting Up Your Computer	35
	Connecting to the Internet	35
	Setting Up Your Internet Connection	36
	Transferring Information to a New Computer	37
	Microsoft® Windows® Easy Transfer	37
	Setting Up a Printer	37
	Printer Cable	38
	Connecting a USB Printer	38
	Power Protection Devices	39
	Surge Protectors	39

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

Line Conditioners	40
Uninterruptible Power Supplies	40
4 Using the Display	41
Adjusting Brightness	41
Switching the Video Image From Your Computer Display to a Projector	41
Setting Display Resolution and Refresh Rate	41
5 Using the Keyboard and Touch Pad	43
Numeric Keypad	43
Key Combinations	43
System Functions	43
Display Functions	43
Battery	43
Power Management	44
Microsoft® Windows® Logo Key Functions	44
Dell™ QuickSet Key Combinations	44
Adjusting Keyboard Settings	44
Touch Pad	45
Customizing the Touch Pad	46
6 Using a Battery	47
Battery Performance	47
Checking the Battery Charge	48
Dell™ QuickSet Battery Meter	48

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

Microsoft® Windows® Battery Meter	49
Charge Gauge	49
Low-Battery Warning	50
Conserving Battery Power	50
Configuring Power Management Settings	50
Using the Sleep Power State	51
Charging the Battery	51
Replacing the Battery	52
Storing a Battery	53
7 Using Multimedia	55
Playing Media	55
Copying CD and DVD Media	57
How to Copy a CD or DVD	57
Using Blank CD or DVD Media	57
Helpful Tips	58
Adjusting the Volume	59
Adjusting the Picture	60
Using Dell MediaDirect™	60
Connecting Your Computer to a TV or Audio Device	61
S-Video and Standard Audio	64
S-Video and S/PDIF Digital Audio	65
Composite Video and Standard Audio	67
Composite Video and S/PDIF Digital Audio	69
Component Video and Standard Audio	71
Component Video and S/PDIF Digital Audio	74
Enabling the Display Settings for a TV	77

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

8	Using ExpressCards	79
	ExpressCard Blanks	79
	Installing an ExpressCard	80
	Removing an ExpressCard or Blank	81
9	Using the Memory Card Reader	83
	Memory Card Blanks	83
	Installing a Memory Card	83
	Removing a Memory Card or Blank	84
10	Setting Up and Using Networks	85
	Connecting a Network or Broadband Modem Cable	85
	Setting Up a Network	86
	Wireless Local Area Network	86
	What You Need to Establish a WLAN Connection	86
	Checking Your Wireless Network Card	87
	Setting Up a New WLAN Using a Wireless Router and a Broadband Modem	88
	Connecting to a WLAN	89
	Mobile Broadband (or Wireless Wide Area Network)	90
	What You Need to Establish a Mobile Broadband Network Connection	91
	Checking Your Dell™ Mobile Broadband Card	91
	Connecting to a Mobile Broadband Network	92
	Enabling/Disabling the Dell Mobile Broadband Card	93

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

Dell Wi-Fi Catcher™ Network Locator	93
11 Securing Your Computer	95
Security Cable Lock	95
Passwords	95
If Your Computer Is Lost or Stolen	96
12 Troubleshooting	99
Dell™ Technical Update Service	99
Dell Diagnostics	99
Dell Support Utility	103
Drive Problems	104
Optical drive problems	105
Hard drive problems	106
E-Mail, Modem, and Internet Problems	106
Error Messages	108
ExpressCard Problems	113
IEEE 1394 Device Problems	113
Keyboard Problems	114
External Keyboard problems	114
Unexpected characters	115
Lockups and Software Problems	115
The computer does not start	115
The computer stops responding	115

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

A program stops responding or crashes repeatedly	116
A program is designed for an earlier Microsoft® Windows® operating system	116
A solid blue screen appears	116
Dell MediaDirect problems	116
Other software problems	117
Memory Problems	118
Network Problems	119
Mobile Broadband (Wireless Wide Area Network [WWAN])	119
Power Problems	120
Printer Problems	121
Scanner Problems	122
Sound and Speaker Problems	122
No sound from integrated speakers	123
No sound from external speakers	123
No sound from headphones	123
Touch Pad or Mouse Problems	124
Video and Display Problems	125
If the display is blank	125
If the display is difficult to read	125
If only part of the display is readable	126
Drivers	126
What Is a Driver?	126
Identifying Drivers	127
Reinstalling Drivers and Utilities	127
Troubleshooting Software and Hardware Problems	130
Restoring Your Operating System	130

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

Using Microsoft Windows System Restore	131
Using Dell Factory Image Restore	131
Using the Operating System Media	133

13 Adding and Replacing Parts 135

Before You Begin 135

Recommended Tools	135
Turning Off Your Computer	135
Before Working Inside Your Computer	136

Hard Drive 137

Removing the Hard Drive	138
Replacing the Hard Drive	139
Returning a Hard Drive to Dell	140

Optical Drive 140

Removing the Optical Drive	140
--------------------------------------	-----

Hinge Cover 141

Removing the Hinge Cover	142
Replacing the Hinge Cover	142

Keyboard 143

Removing the Keyboard	143
Replacing the Keyboard	144

Memory 145

Removing the DIMM A Memory Module	146
Replacing the DIMM A Memory Module	147
Removing the DIMM B Memory Module	148
Replacing the DIMM B Memory Module	150

Subscriber Identity Module 151

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

Wireless Mini-Cards	152
Removing a WLAN Card	153
Replacing a WLAN Card	155
Removing a Mobile Broadband or WWAN Card	156
Replacing a Mobile Broadband or WWAN Card	159
Removing a WPAN Card	160
Replacing a WPAN Card	161
Flash Cache Module	161
Removing the FCM	161
Replacing the FCM	162
Internal Card With Bluetooth® Wireless Technology	163
Removing the Card	163
Coin-Cell Battery	164
Removing the Coin-Cell Battery	164
Replacing the Coin-Cell Battery	165
14 Dell™ QuickSet Features	167
15 Traveling With Your Computer	169
Identifying Your Computer	169
Packing the Computer	169
Travel Tips	170
Traveling by Air	170
16 Getting Help	171
Obtaining Assistance	171

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

Technical Support and Customer Service	172
DellConnect	172
Online Services	172
AutoTech Service	173
Automated Order-Status Service	173
Problems With Your Order	173
Product Information	174
Returning Items for Warranty Repair or Credit	174
Before You Call	174
Contacting Dell	177
17 Specifications	179
18 Appendix	187
Using the System Setup Program	187
Viewing the System Setup Screen	188
System Setup Screen	188
Commonly Used Options	188
Cleaning Your Computer	190
Computer, Keyboard, and Display	190
Touch Pad	191
Mouse	191
Media	192
Dell Technical Support Policy (U.S. Only)	192
Definition of "Dell-Installed" Software and Peripherals	193
Definition of "Third-Party" Software and Peripherals	193

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

FCC Notice (U.S. Only)	193
FCC Class B	193
Macrovision Product Notice	195



Glossary 197


Index 215

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

**FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\bookTOC.fm**

Finding Information

-  **NOTE:** Some features may be optional and may not ship with your computer. Some features may not be available in certain countries.
-  **NOTE:** Additional information may ship with your computer.

What Are You Looking For?	Find It Here
<ul style="list-style-type: none">• A diagnostic program for my computer• Drivers for my computer• Device documentation• Notebook System Software (NSS)	<p>Drivers and Utilities Media</p> <p>Documentation and drivers are already installed on your computer. You can use the <i>Drivers and Utilities</i> media to reinstall drivers (see "Reinstalling Drivers and Utilities" on page 127) or run the Dell Diagnostics (see "Dell Diagnostics" on page 99).</p> <p>Readme files may be included on your <i>Drivers and Utilities</i> media to provide last-minute updates about technical changes to your computer or advanced technical-reference material for technicians or experienced users.</p> <p>NOTE: Drivers and documentation updates can be found at support.dell.com.</p>
<ul style="list-style-type: none">• Warranty information• Terms and Conditions (U.S. only)• Safety instructions• Regulatory information• Ergonomics information• End User License Agreement	<p>Dell™ Product Information Guide</p> 

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\findinfo.fm

What Are You Looking For?	Find It Here
<ul style="list-style-type: none">• How to set up my computer	Setup Diagram
<ul style="list-style-type: none">• Service Tag and Express Service Code• Microsoft® Windows® Product Key	Service Tag and Microsoft Windows Product Key

These labels are located on your computer.

- Use the Service Tag to identify your computer when you use support.dell.com or contact support.



- Enter the Express Service Code to direct your call when contacting support.

NOTE: As an increased security measure, the newly designed Microsoft Windows license label incorporates a "security portal," which looks like a missing portion of the label, to discourage removal of the label.



DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\findinfo.fm

What Are You Looking For?	Find It Here
<ul style="list-style-type: none">• Solutions — Troubleshooting hints and tips, articles from technicians, online courses, and frequently asked questions• Community — Online discussion with other Dell customers• Upgrades — Upgrade information for components, such as the memory, hard drive, and operating system• Customer Care — Contact information, service call and order status, and warranty and repair information• Service and support — Service call status, support history, service contract, and online discussions with support• Dell Technical Update Service — Proactive e-mail notification of software and hardware updates for your computer• Reference — Computer documentation, details on my computer configuration, product specifications, and white papers• Downloads — Certified drivers, patches, and software updates• Notebook System Software (NSS) — If you reinstall the operating system on your computer, you should also reinstall the NSS utility. NSS automatically detects your computer and operating system, and installs the updates appropriate for your configuration, providing critical updates for your operating system and support for Dell 3.5-inch USB floppy drives, Intel® processors, optical drives, and USB devices. NSS is necessary for correct operation of your Dell computer.	<p>Dell Support Website — support.dell.com</p> <p>NOTE: Select your region or business segment to view the appropriate support site.</p> <p>To download Notebook System Software:</p> <ol style="list-style-type: none">1 Go to support.dell.com, select your country/region, and then click Drivers & Downloads.2 Enter your Service Tag or product model, and then click Go.3 Select your operating system and language, and then click Find Downloads, or under Downloads Search, search for the keyword <i>Notebook System Software</i>. <p>NOTE: The support.dell.com user interface may vary depending on your selections.</p>

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\findinfo.fm

What Are You Looking For?	Find It Here
<ul style="list-style-type: none">• Software upgrades and troubleshooting hints — Frequently asked questions, hot topics, and general health of your computing environment	<p>Dell Support Utility</p> <p>The Dell Support Utility is an automated upgrade and notification system installed on your computer. This support provides real-time health scans of your computing environment, software updates, and relevant self-support information. Access the Dell Support Utility from the  icon on the taskbar. For more information, see "Dell Support Utility" on page 103.</p>
<ul style="list-style-type: none">• How to use Microsoft Windows Vista™• How to work with programs and files• How to personalize my desktop	<p>Windows Help and Support</p> <ol style="list-style-type: none">1 Click the Windows Vista Start button , and then click Help and Support.2 In <i>Search Help</i>, type a word or phrase that describes your problem, and then press <Enter> or click the magnifying glass.3 Click the topic that describes your problem.4 Follow the instructions on the screen.
<ul style="list-style-type: none">• Information on network activity, the Power Management Wizard, hotkeys, and other items controlled by Dell QuickSet.	<p>Dell QuickSet Help</p> <p>To view Dell QuickSet Help, right-click the Dell QuickSet icon in the Windows notification area.</p> <p>For more information on Dell QuickSet, see "Dell™ QuickSet Features" on page 167.</p>

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\findinfo.fm

What Are You Looking For?	Find It Here
<ul style="list-style-type: none">• How to reinstall my operating system	<p data-bbox="829 495 1240 527">Operating System Media</p> <p data-bbox="829 537 1240 653">The operating system is already installed on your computer. To reinstall your operating system, use one of the following methods:</p> <ul data-bbox="829 663 1240 1052" style="list-style-type: none">• Microsoft Windows System Restore — Microsoft Windows System Restore returns your computer to an earlier operating state without affecting data files.• Dell PC Restore — Dell PC Restore returns your computer to its original operating state. Dell PC Restore may not ship with your computer.• Operating System Installation Media — If you received operating system media with your computer, you can use it to restore your operating system. <p data-bbox="829 1062 1240 1115">For more information, see "Restoring Your Operating System" on page 130.</p> <p data-bbox="829 1125 1240 1241">After you reinstall your operating system, use the <i>Drivers and Utilities</i> media to reinstall drivers for the devices that came with your computer.</p> <p data-bbox="829 1251 1240 1304">Your operating system product key label is located on your computer.</p> <p data-bbox="829 1314 1240 1400">NOTE: The color of your operating system installation media varies according to the operating system you ordered.</p>

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\findinfo.fm


DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

2

About Your Computer

Determining Your Computer's Configuration

Based on selections that you made when purchasing your computer, your computer has one of several different video controller configurations. To determine your computer's video controller configuration:

- 1 Click **Start** , and then click **Help and Support**.
- 2 Under **Pick a Task**, click **Use Tools** to view your computer information and diagnose problems.
- 3 Under **My Computer Information**, select **Hardware**.

From the **My Computer Information - Hardware** screen, you can view the type of video controller installed in your computer, as well as the other hardware components.

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

Front View



- | | | | |
|---|-----------------------------|---|-------------------|
| 1 | camera indicator (optional) | 2 | camera (optional) |
| 3 | display latch | 4 | display |
| 5 | power button | 6 | keyboard |
| 7 | device status lights | 8 | touch pad |

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

- | | | | |
|----|------------------------|----|---------------------------|
| 9 | consumer IR sensor | 10 | media control buttons |
| 11 | touch pad buttons | 12 | Dell™ MediaDirect™ button |
| 13 | keyboard status lights | 14 | digital array microphones |


CAMERA INDICATOR — Indicates that the camera is turned on. Based on configuration selections you made when ordering your computer, your computer may not include a camera.

CAMERA — Built-in camera for video capture, conferencing, and chat. Based on configuration selections you made when ordering your computer, your computer may not include a camera.

DISPLAY LATCH — Keeps the display closed.

DISPLAY — For more information about your display, see "Using the Display" on page 41.

POWER BUTTON — Press the power button to turn on the computer or exit a power management mode (see "Configuring Power Management Settings" on page 50).

 **NOTICE:** To avoid losing data, turn off your computer by performing a Microsoft® Windows® operating system shutdown rather than by pressing the power button.

If the computer stops responding, press and hold the power button until the computer turns off completely (may take several seconds).







KEYBOARD — For more information about the keyboard, see "Using the Keyboard and Touch Pad" on page 43.

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

DEVICE STATUS LIGHTS



The blue lights located to the right of the keyboard indicate the following:

	Power light – Turns on when you turn on the computer, and blinks when the computer is in a power management mode.
	Hard-drive activity light – Turns on when the computer reads or writes data.
	NOTICE: To avoid loss of data, never turn off the computer while the  light is flashing.
	Battery status light – Turns on steadily or blinks to indicate battery charge status.
	WiFi status light – Turns on when wireless networking is enabled. To enable or disable wireless networking, use the wireless switch (see "wireless switch" on page 27).

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with RED\GreatBelt_OM_A00\Source\about.fm

-
- ✧ Bluetooth® status light – Turns on when an internal card with Bluetooth wireless technology is enabled.
- NOTE:** The internal card with Bluetooth wireless technology is an optional feature. The ✧ light turns on only if you ordered the card with your computer. For more information, see the documentation that came with your card.
- To turn off only the Bluetooth wireless technology functionality, right-click the ✧ icon in the notification area, and then click **Disable Bluetooth Radio**.
- To quickly enable or disable all wireless devices, use the wireless switch (see "wireless switch" on page 27).
-

If the computer is connected to an electrical outlet, the  light operates as follows:

- Solid blue: The battery is charging.
- Flashing blue: The battery is almost fully charged.
- Off: The battery is adequately charged.

If the computer is running on a battery, the  light operates as follows:

- Off: The battery is adequately charged (or the computer is turned off).
- Flashing amber: The battery charge is low.
- Solid amber: The battery charge is critically low.

TOUCH PAD — Provides the functionality of a mouse (see "Touch Pad" on page 45).

TOUCH PAD BUTTONS — Use these buttons much like the buttons on a mouse when you use the touch pad to move the cursor on the display (see "Touch Pad" on page 45).



MEDIA CONTROL BUTTONS — Control CD, DVD, and Media Player playback.



-
- | | |
|---|--|
|  Mute the sound. |  Play the previous track. |
|  Turn the volume down. |  Play the next track. |
-

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

 Turn the volume up.  Stop.

 Play or pause.


DELL™ MEDIADIRECT™ BUTTON — Press the Dell MediaDirect button to launch Dell MediaDirect (see "Using Dell MediaDirect™" on page 60).


KEYBOARD STATUS LIGHTS



The blue lights located above the keyboard indicate the following:

 Turns on when the numeric keypad (Num Lock) is enabled.

 Turns on when the uppercase letter (Caps Lock) function is enabled.


 Turns on when the scroll lock function is enabled.

DIGITAL ARRAY MICROPHONES — Built-in microphone for conferencing and chat.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

Left Side View

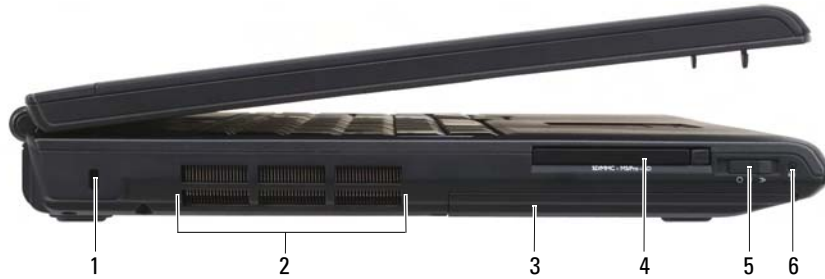

- | | | | |
|---|---------------------|---|---|
| 1 | security cable slot | 2 | air vents |
| 3 | hard drive | 4 | ExpressCard slot |
| 5 | wireless switch | 6 | Dell Wi-Fi Catcher™ Network Locator light |

SECURITY CABLE SLOT — Lets you attach a commercially available antitheft device to the computer (see "Security Cable Lock" on page 95).

⚠ CAUTION: Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire.

AIR VENTS — The computer uses an internal fan to create airflow through the vents, which prevents the computer from overheating. The computer turns the fan on when the computer gets hot. Fan noise is normal and does not indicate a problem with the fan or the computer.

HARD DRIVE — Stores software and data.

EXPRESSCARD SLOT — Supports one ExpressCard. The computer ships with a plastic *blank* installed in the slot. For more information see "Using ExpressCards" on page 79.

WIRELESS SWITCH — When enabled through Dell QuickSet, this switch can scan for a wireless local area network (WLAN) in your vicinity. You can also use it to rapidly turn off or on any wireless devices such as WLAN cards and internal cards with Bluetooth wireless technology (see "Dell Wi-Fi Catcher™ Network Locator" on page 93).

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with RED\GreatBelt_OM_A00\Source\about.fm



1	off position	Disables wireless devices.
2	on position	Enables wireless devices.
3	momentary position	Scans for WLAN networks (see "Dell Wi-Fi Catcher™ Network Locator" on page 93).
4	Dell Wi-Fi Catcher™ Network Locator light	<ul style="list-style-type: none"> • Flashing green: Searching for networks • Solid green: Strong network found • Solid yellow: Weak network found • Flashing yellow: Error • Off: No signal found

Right Side View



- | | | | |
|---|---------------------------|---|---------------------------|
| 1 | battery status light | 2 | hard-drive activity light |
| 3 | power light | 4 | USB connectors (2) |
| 5 | network connector (RJ-45) | 6 | video connector |


DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY


FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

- | | | | |
|----|---------------------|----|---------------------------|
| 7 | IEEE 1394 connector | 8 | 8-in-1 memory card reader |
| 9 | eject button | 10 | optical drive |
| 11 | audio connectors | | |

AUDIO CONNECTORS



Attach headphones to the  connector.

Attach a microphone to the  connector.

OPTICAL DRIVE — For more information about the optical drive, see "Using Multimedia" on page 55.

EJECT BUTTON — Press the eject button to open the optical drive.

8-IN-1 MEMORY CARD READER — Provides a fast and convenient way to view and share digital photos, music, and videos stored on a memory card. The computer ships with a plastic *blank* installed in the slot. The 8-in-1 memory card reader reads the following digital memory cards:

- Secure Digital (SD) memory card
- SDIO card
- MultiMediaCard (MMC)
- Memory Stick
- Memory Stick PRO
- xD-Picture Card

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

- Hi Speed-SD
- Hi Density-SD


IEEE 1394 CONNECTOR — Connects devices supporting IEEE 1394 high-speed transfer rates, such as some digital video cameras.

 
VIDEO CONNECTOR

Connects video devices, such as a monitor.



NETWORK CONNECTOR (RJ-45)


 **NOTICE:** The network connector is slightly larger than the modem connector. To avoid damaging the computer, do not plug a telephone line into the network connector.



Connects the computer to a network. The two lights next to the connector indicate status and activity for wired network connections.

For information on using the network adapter, see the device user's guide supplied with your computer.

 USB CONNECTORS



Connect USB devices, such as a mouse, keyboard, or printer.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

Back View




- | | | | |
|---|--------------------------|---|-------------------------|
| 1 | S-video TV-out connector | 2 | USB connectors (2) |
| 3 | AC adapter connector | 4 | modem connector (RJ-11) |
| 5 | USB connector | | |

S-VIDEO TV-OUT CONNECTOR



Connects your computer to a TV. Also connects digital audio-capable devices using the TV/digital audio adapter cable.

 
USB CONNECTORS




Connect USB devices, such as a mouse, keyboard, or printer.


FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with RED\GreatBelt_OM_A00\Source\about.fm

AC ADAPTER CONNECTOR — Attaches an AC adapter to the computer. The AC adapter converts AC power to the DC power required by the computer. You can connect the AC adapter with your computer turned on or off.

 **NOTE:** Ensure the power cord is firmly attached to the AC adapter. A green LED light on the AC adapter indicates a proper connection.



 **CAUTION:** The AC adapter works with electrical outlets worldwide. However, power connectors and power strips vary among countries. Using an incompatible cable or improperly connecting the cable to the power strip or electrical outlet may cause fire or equipment damage.

 **NOTICE:** When you disconnect the AC adapter cable from the computer, grasp the connector, not the cable itself, and pull firmly, but gently to help prevent damage to the cable.

MODEM CONNECTOR (RJ-11)



Connect the telephone line to the modem connector.

For information on using the modem, see the online modem documentation supplied with your computer.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

Bottom View



- | | |
|---|-------------------------------|
| 1 left speaker | 2 consumer IR sensor |
| 3 memory module/coin-cell battery cover | 4 right speaker |
| 5 Mini-Card cover | 6 battery |
| 7 battery charge/health gauge | 8 battery release latches (2) |
| 9 air vents | 10 hard drive |

LEFT SPEAKER — To adjust the volume of the integrated speaker, press the volume control buttons or the mute button.

CONSUMER IR SENSOR — Receives the signal from the Dell travel remote controller for basic multimedia navigation control.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\about.fm

MEMORY MODULE/COIN-CELL BATTERY COVER — Covers the DIMM B memory module and the coin-cell battery. For additional information, see "Adding and Replacing Parts" on page 135.

RIGHT SPEAKER — To adjust the volume of the integrated speaker, press the volume control buttons or the mute button.

MINI-CARD COVER — Covers Mini-Cards (WLAN, WWAN, or WPAN) or a Flash Cache Module (FCM) (see "Wireless Mini-Cards" on page 152 and "Flash Cache Module" on page 161).

BATTERY — When a battery is installed, you can use the computer without connecting the computer to an electrical outlet (see "Using a Battery" on page 47).

BATTERY CHARGE/HEALTH GAUGE — Provides information on the battery charge (see "Checking the Battery Charge" on page 48).

BATTERY RELEASE LATCHES — Releases the battery (see "Replacing the Battery" on page 52 for instructions).



CAUTION: Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire.


AIR VENTS — The computer uses an internal fan to create airflow through the vents, which prevents the computer from overheating. The computer turns the fan on when the computer gets hot. Fan noise is normal and does not indicate a problem with the fan or the computer.

HARD DRIVE — Stores software and data.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

Setting Up Your Computer

Connecting to the Internet

 **NOTE:** ISPs and ISP offerings vary by country.

To connect to the Internet, you need a modem or network connection and an Internet service provider (ISP). Your ISP will offer one or more of the following Internet connection options:

- DSL connections that provide high-speed Internet access through your existing telephone line or cellular telephone service. With a DSL connection, you can access the Internet and use your telephone on the same line simultaneously.
- Cable modem connections that provide high-speed Internet access through your local cable TV line.
- Satellite modem connections that provide high-speed Internet access through a satellite television system.
- Dial-up connections that provide Internet access through a telephone line. Dial-up connections are considerably slower than DSL, cable, and satellite modem connections.
- Wireless Wide Area Network (WWAN) or Mobile Broadband technology provides a connection to the Internet using cellular technology at broadband rates.
- Wireless Local Area Network (WLAN) connections use high-frequency radio waves to communicate. Typically, a wireless router is connected to the broadband cable or DSL modem that broadcasts the Internet signal to your computer.

If you are using a dial-up connection, connect a telephone line to the modem connector on your computer and to the telephone wall connector before you set up your Internet connection. If you are using a DSL, cable, or satellite modem connection, contact your ISP or cellular telephone service for setup instructions.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

Template Last Updated - 2/7/2007


Setting Up Your Computer | 35


FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\setting.fm

Setting Up Your Internet Connection


To set up an Internet connection with a provided ISP desktop shortcut:


- 1 Save and close any open files, and exit any open programs.
- 2 Double-click the ISP icon on the Microsoft® Windows® desktop.
- 3 Follow the instructions on the screen to complete the setup.

 **NOTE:** If you are having problems connecting to the Internet, see "E-Mail, Modem, and Internet Problems" on page 106. If you cannot connect to the Internet, but have successfully connected in the past, the ISP may have a service outage. Contact your ISP to check the service status, or try connecting again later.

 **NOTE:** Have your ISP information ready. If you do not have an ISP, the **Connect to the Internet** wizard can help you obtain one.

If you do not have an ISP icon on your desktop or if you want to set up an Internet connection with a different ISP:

- 1 Save and close any open files, and exit any open programs.
- 2 Click **Start** , and then click **Control Panel**.
- 3 Under **Network and Internet**, click **Connect to the Internet**.
The **Connect to the Internet** window appears.
- 4 Click either **Broadband (PPPoE)**, **Wireless**, or **Dial-up**, depending on how you want to connect:
 - Choose **Broadband** if you will use a DSL modem, cable TV modem, or satellite modem.
 - Choose **Wireless** if you will use a wireless connection through a WLAN card.
 - Choose **Dial-up** if you will use a dial-up modem or ISDN.

 **NOTE:** If you do not know which type of connection to select, click **Help me choose** or contact your ISP.

- 5 Follow the instructions on the screen and use the setup information provided by your ISP to complete the setup.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\setting.fm

Transferring Information to a New Computer


You can transfer the following types of data from one computer to another:

- E-mail messages
- Toolbar settings
- Window sizes
- Internet bookmarks


Use one of the following methods for transferring data:

- Windows Easy Transfer wizard, an Easy Transfer Cable, and a USB port
- Over a network
- Removable media, such as a writable CD

Microsoft® Windows® Easy Transfer

- 1 Click Start  → All Programs → Accessories → System Tools → Windows Easy Transfer.
- 2 In the User Account Control dialog box, click **Continue**.
- 3 Click **Next**.
- 4 Click **Start a new transfer** or **Continue a transfer in progress**.
- 5 Follow the instructions in the Windows Easy Transfer wizard.

Setting Up a Printer

 **NOTICE:** Complete the operating system setup before you connect a printer to the computer.

See the documentation that came with the printer for setup information, including how to:

- Obtain and install updated drivers.
- Connect the printer to the computer.
- Load paper and install the toner or ink cartridge.

For technical assistance, refer to the printer owner's manual or contact the printer manufacturer.


DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY


FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\setting.fm

Printer Cable

Your printer connects to your computer with a USB cable. Your printer may not come with a printer cable, so if you purchase a cable separately, ensure that it is compatible with your printer and computer. If you purchased a printer cable at the same time you purchased your computer, the cable may arrive in the computer's shipping box.

Connecting a USB Printer

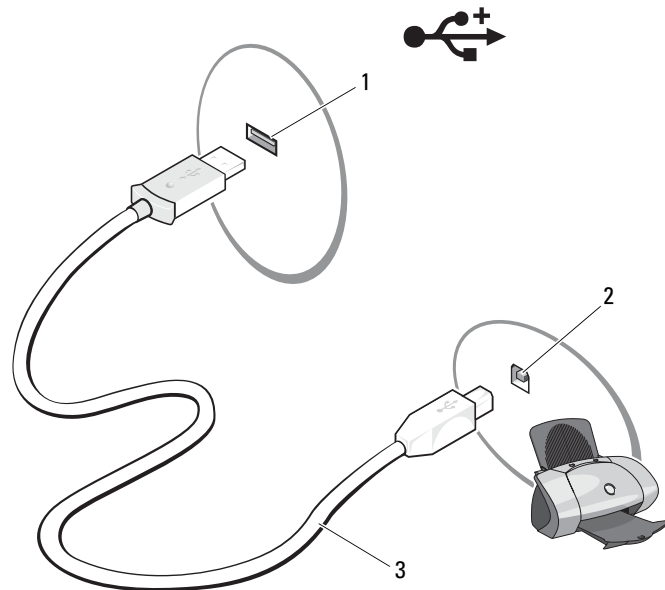

-  **NOTE:** You can connect USB devices while the computer is turned on.
- 1 Complete the operating system setup if you have not already done so.
 - 2 Attach the USB printer cable to the USB connectors on the computer and the printer. The USB connectors fit only one way.



- | | | | |
|---|---------------------------|---|--------------------------|
| 1 | USB connector on computer | 2 | USB connector on printer |
| 3 | USB printer cable | | |

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\setting.fm

- 3 Turn on the printer, and then turn on the computer.
If the Add New Hardware Wizard window appears, click **Cancel**.
- 4 Click **Start** , and then click **Network**.
- 5 Click **Add a printer** to start the Add Printer Wizard.
-  **NOTE:** To install the printer driver, see "Reinstalling Drivers and Utilities" on page 127 and the documentation that came with your printer.
- 6 Click **Add a local printer or Add a network, wireless, or Bluetooth printer**.
- 7 Follow the instructions in the Add Printer Wizard.


Power Protection Devices

Several devices are available to protect against power fluctuations and failures:


- Surge protectors
- Line conditioners
- Uninterruptible power supplies (UPS)

Surge Protectors

Surge protectors and power strips equipped with surge protection help prevent damage to your computer from voltage spikes that can occur during electrical storms or after power interruptions. Some surge protector manufacturers include warranty coverage for certain types of damage. Carefully read the device warranty when choosing a surge protector. A device with a higher joule rating offers more protection. Compare joule ratings to determine the relative effectiveness of different devices.


 **NOTICE:** Most surge protectors do not protect against power fluctuations or power interruptions caused by nearby lightning strikes. When lightning occurs in your area, disconnect the telephone line from the telephone wall connector and disconnect your computer from the electrical outlet.

Many surge protectors have a telephone jack for modem protection. See the surge protector documentation for modem connection instructions.

 **NOTICE:** Not all surge protectors offer network adapter protection. Disconnect the network cable from the network wall connector during electrical storms.


FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\setting.fm


Line Conditioners

 **NOTICE:** Line conditioners do not protect against power interruptions.

Line conditioners are designed to maintain AC voltage at a fairly constant level.

Uninterruptible Power Supplies

 **NOTICE:** Loss of power while data is being saved to the hard drive may result in data loss or file damage.

 **NOTE:** To ensure maximum battery operating time, connect only your computer to a UPS. Connect other devices, such as a printer, to a separate power strip that provides surge protection.

A UPS protects against power fluctuations and interruptions. UPS devices contain a battery that provides temporary power to connected devices when AC power is interrupted. The battery charges while AC power is available. See the UPS manufacturer documentation for information on battery operating time and to ensure that the device is approved by Underwriters Laboratories (UL).

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY


4

Using the Display

Adjusting Brightness

When a Dell™ computer is running on battery power, you can conserve power by setting the display brightness to the lowest comfortable level.

- Press <Fn> and the up-arrow key to increase brightness on the integrated display only (not on an external monitor).
- Press <Fn> and the down-arrow key to decrease brightness on the integrated display only (not on an external monitor).


 **NOTE:** Brightness key combinations only affect the display on your portable computer, not monitors or projectors that you attach to your portable computer or docking device. If your computer is connected to an external monitor and you try to change the brightness level, the Brightness Meter may appear, but the brightness level on the external device does not change.

Switching the Video Image From Your Computer Display to a Projector

When you start the computer with an external device attached (such as an external monitor or projector) and turned on, the image may appear on either the computer display or the external device.

Press <Fn><F8> to switch the video image between the display only, the external device only, or the display and the external device simultaneously.

Setting Display Resolution and Refresh Rate

 **NOTE:** If you change the display resolution from the current settings, the image may appear blurry or text may be hard to read if you change the resolution to one not supported by your computer and display. Before you change any of the display settings, make a note of the current settings so you can change back to the previous settings if needed.


DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

Template Last Updated - 2/7/2007

Using the Display | 41


FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\display.fm


You can enhance the legibility of text and change the appearance of images on the screen by adjusting display resolution. As you increase resolution, items appear smaller on the screen. In contrast, lower resolution causes text and images to appear larger and can benefit people with vision impairments. To display a program at a specific resolution, both the video card and the display must support the program, and the necessary video drivers must be installed.

 **NOTE:** Use only the Dell-installed video drivers, which are designed to offer the best performance with your Dell-installed operating system.

If you choose a resolution or color palette that is higher than the display supports, the settings adjust automatically to the closest supported values.

To set the display resolution and refresh rate for your display:

- 1 Click Start  → Control Panel.
- 2 Under **Appearance and Personalization**, click **Adjust screen resolution**.
- 3 In the **Display Settings** window, under **Resolution**, move the slide bar to the left or right to decrease/increase the screen resolution.

 **NOTE:** For additional instructions, click **How do I get the best display?**


DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

5

Using the Keyboard and Touch Pad

Numeric Keypad

The numeric keypad functions like the numeric keypad on an external keyboard.

- To enable the keypad, press <Num Lk>. The  light indicates that the keypad is active.
- To disable the keypad, press <Num Lk> again.

Key Combinations

System Functions

<Ctrl><Shift><Esc>	Opens the Task Manager window.
--------------------	---------------------------------------

Display Functions

<Fn><F8>	Displays icons representing all currently available display options (display only, external monitor or projector only, both display and projector, etc). Highlight the desired icon to switch the display to that option.
----------	---

<Fn> and up-arrow key	Increases brightness on the integrated display only (not on an external monitor).
-----------------------	---

<Fn> and down-arrow key	Decreases brightness on the integrated display only (not on an external monitor).
-------------------------	---

Battery

<Fn><F3>	Displays the Dell™ QuickSet Battery Meter (see "Dell™ QuickSet Battery Meter" on page 48).
----------	--

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

Template Last Updated - 2/7/2007

Using the Keyboard and Touch Pad

| 43

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\keyboard.fm

Power Management

<Fn> <Esc>	Activates a power management mode. You can reprogram this keyboard shortcut to activate a different power management mode using the Advanced tab in the Power Options Properties window (see "Configuring Power Management Settings" on page 50).
------------	---

Microsoft® Windows® Logo Key Functions


Windows logo key and <m>	Minimizes all open windows.
Windows logo key and <Shift> <m>	Restores all minimized windows. This key combination functions as a toggle to restore minimized windows following the use of the Windows logo key and <m> combination.
Windows logo key and <e>	Starts Windows Explorer.
Windows logo key and <r>	Opens the Run dialog box.
Windows logo key and <f>	Opens the Search Results dialog box.
Windows logo key and <Ctrl> <f>	Opens the Search Results-Computer dialog box (if the computer is connected to a network).
Windows logo key and <Pause>	Opens the System Properties dialog box.

Dell™ QuickSet Key Combinations

If Dell QuickSet is installed, you can use other shortcut keys for functions such as the Battery Meter or activating power management modes. For more information about Dell QuickSet key combinations, right-click the QuickSet icon in the notification area, and then click **Help**.

Adjusting Keyboard Settings

To adjust keyboard operation, such as the character repeat rate:

- 1 Click **Start** , and then click **Control Panel**.
- 2 Click **Hardware and Sound**.
- 3 Click **Keyboard**.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with RED\GreatBelt_OM_A00\Source\keyboard.fm

Touch Pad

The touch pad detects the pressure and movement of your finger to allow you to move the cursor on the display. Use the touch pad and touch pad buttons as you would use a mouse.



- 1 touch pad 2 silk-screen scroll zones


- To move the cursor, lightly slide your finger over the touch pad.
- To select an object, lightly tap once on the surface of the touch pad or use your thumb to press the left touch-pad button.
- To select and move (or drag) an object, position the cursor on the object and tap twice on the touch pad. On the second tap, leave your finger on the touch pad and move the selected object by sliding your finger over the surface.
- To double-click an object, position the cursor on the object and tap twice on the touch pad or use your thumb to press the left touch-pad button twice.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\keyboard.fm

Customizing the Touch Pad


You can use the Mouse Properties window to disable the touch pad or adjust the touch pad settings.

- 1** Click **Start** , and then click **Control Panel**.
- 2** Click **Hardware and Sound**.
- 3** Click **Mouse**.
- 4** In the **Mouse Properties** window:
 - Click the **Device Select** tab to disable the touch pad.
 - Click the **Touch Pad** tab to adjust touch pad settings.
- 5** Click **OK** to save the settings and close the window.


DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY


Using a Battery


Battery Performance

 **NOTE:** For information about the Dell warranty for your computer, see the *Product Information Guide* or separate paper warranty document that shipped with your computer.

For optimal computer performance and to help preserve BIOS settings, operate your Dell™ portable computer with the main battery installed at all times. One battery is supplied as standard equipment in the battery bay.

 **NOTE:** Because the battery may not be fully charged, use the AC adapter to connect your new computer to an electrical outlet the first time you use the computer. For best results, operate the computer with the AC adapter until the battery is fully charged. To view battery charge status, place the mouse cursor over the battery icon in the Windows notification area.

 **NOTE:** Battery operating time (the time the battery can hold a charge) decreases over time. Depending on how often the battery is used and the conditions under which it is used, you may need to purchase a new battery during the life of your computer.

 **NOTE:** It is recommended that you connect your computer to an electrical outlet when writing to media.


Battery operating time varies depending on operating conditions. Operating time is significantly reduced when you perform operations including, but not limited to, the following:


- Using optical drives.
- Using wireless communications devices, ExpressCards, memory cards, or USB devices.
- Using high-brightness display settings, 3D screen savers, or other power-intensive programs such as complex 3D graphics applications.
- Running the computer in maximum performance mode (see "Configuring Power Management Settings" on page 50 for information about accessing Windows Power Options Properties or Dell QuickSet, which you can use to configure power management settings).


DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\battery.fm

You can check the battery charge before you insert the battery into the computer. You can also set power management options to alert you when the battery charge is low.


 **CAUTION:** Using an incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell. The battery is designed to work with your Dell computer. Do not use batteries from other computers with your computer.

 **CAUTION:** Do not dispose of batteries with household waste. When your battery no longer holds a charge, call your local waste disposal or environmental agency for advice on disposing of a lithium-ion battery (see "Battery Disposal" in the *Product Information Guide*).

 **CAUTION:** Misuse of the battery may increase the risk of fire or chemical burn. Do not puncture, incinerate, disassemble, or expose the battery to temperatures above 65°C (149°F). Keep the battery away from children. Handle damaged or leaking batteries with extreme care. Damaged batteries may leak and cause personal injury or equipment damage.

Checking the Battery Charge

You can check the battery charge on your computer using any one of the following methods:

- Dell QuickSet Battery Meter
- Microsoft Windows battery meter icon  located in the notification area
- Battery charge/health gauge located on the battery
- Low-battery warning pop-up window

Dell™ QuickSet Battery Meter

To view the Dell QuickSet Battery Meter:

- Double-click the Dell QuickSet icon in the taskbar, and then click **Battery Meter**

or

- Press <Fn><F3>

The Battery Meter displays the status, battery health, charge level, and charge completion time for the battery in your computer.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\battery.fm

For more information about QuickSet, right-click the QuickSet icon, and then click **Help**.

Microsoft® Windows® Battery Meter

The battery meter indicates the remaining battery charge. To check the battery meter, double-click the  icon in the notification area.

Charge Gauge

By either pressing once or pressing and holding the status button on the battery charge gauge, you can check:

- Battery charge (check by *pressing* and *releasing* the status button)
- Battery health (check by *pressing* and *holding* the status button)

The battery operating time is largely determined by the number of times it is charged. After hundreds of charge and discharge cycles, batteries lose some charge capacity—or battery health. Therefore, a battery can show a status of charged, but maintain a reduced charge capacity (health).

Check the Battery Charge

To check the battery charge, *press and release* the status button on the battery charge gauge to illuminate the charge indicator lights. Each light represents approximately 20 percent of the total battery charge. For example, if the battery has 80 percent of its charge remaining, four of the lights are on. If no lights are on, the battery has no charge.

Check the Battery Health




NOTE: You can check battery health in one of two ways: by using the charge gauge on the battery, as described below, and by using the Battery Meter in Dell QuickSet. For information about QuickSet, right-click the QuickSet icon in the notification area, and then click **Help**.

To check the battery health using the charge gauge, *press and hold* the status button on the battery charge gauge for at least 3 seconds to illuminate the health indicator lights. Each light represents incremental degradation. If no lights appear, the battery is in good condition, and more than 80 percent of its original charge capacity remains. If five lights appear, less than 60 percent of

FILE LOCATION: S:\systems\Great Belt\OM\Great Belt OM with
RED\GreatBelt_OM_A00\Source\battery.fm

the charge capacity remains, and you should consider replacing the battery (see "Battery" on page 183 for more information about the battery operating time).

Low-Battery Warning

 **NOTICE:** To avoid losing or corrupting data, save your work immediately after a low-battery warning, then connect the computer to an electrical outlet. If the battery runs completely out of power, Sleep state begins automatically.

A pop-up window warns you when the battery charge is approximately 90 percent depleted. The computer enters Sleep state when the battery charge is at a critically low level.

You can change the settings for the battery alarms in Dell QuickSet or the Power Options window (see "Configuring Power Management Settings" on page 50).

Conserving Battery Power

To conserve battery power on your portable computer, do any of the following:

- Connect the computer to an electrical outlet when possible; battery life is largely determined by the number of times the battery is used and recharged.
- Configure the power management settings using either Dell QuickSet or Microsoft Windows Power Options to optimize your computer's power usage (see "Configuring Power Management Settings" on page 50).
- Use the Sleep power state when you leave the computer unattended for long periods of time (see "Using the Sleep Power State" on page 51).

Configuring Power Management Settings

You can use Dell QuickSet or Windows Power Options to configure the power management settings on your computer.

- For information on how to use the Dell QuickSet Power Management wizard, right-click the QuickSet icon in the notification area, click **Help**, and then select **Power Management**.

DELL CONFIDENTIAL – PRELIMINARY 4/30/07 - FOR PROOF ONLY