

EXHIBIT C


User Manual

Control Buttons

Read button – message read , back-light , function confirmed.

Function button- function select.

Select button – select moving direction (right or left)

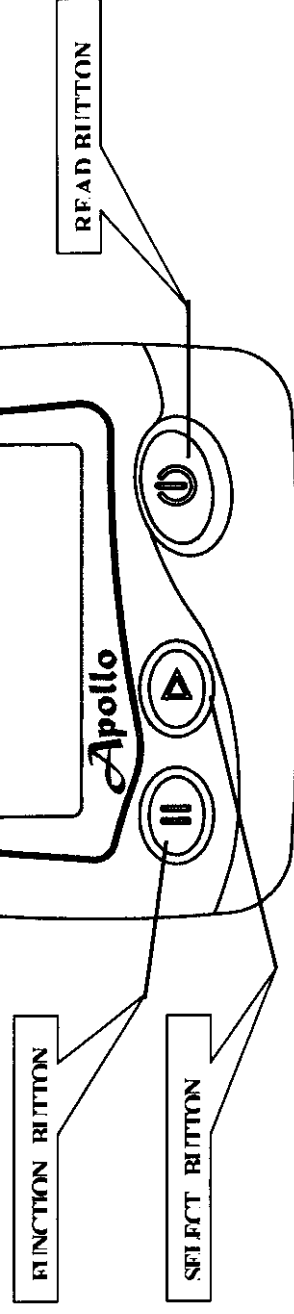


Features and Functions

- 7 Chinese Alpha Character or 42 English Alpha Character Memory
- Display Black Light
- 16 Memory Slots + Message Full 10 sets
- Personal Message Memory : 10 sets
- Mail Drop : 10 sets
- Time .Month. Date. Year Display
- User Selectable 12 / 24 Hour Clock
- Message-In Time Indication
- Incomplete Message-In Indication
- Manual On / Off operation
- Unread Message Indicator
- Duplicate Message Indicator
- Message Lock
- All or Individual Message Delete
- Low Battery Alert / Display
- Reminder Flashing

- Reminder Alerts
- Message Full Indication
- Message Full Auto Storage
- Message Auto Storage to Mail Drop (User selectable)
- Display Out Of Service Area
- Display 5 Daily Alarms Sets
- 4 Beep Alerts / Silent Vibration / 8 Musical / Sleep Mode
- Mail Drop Alerts
- Remain In Memory While Re-place Battery
-

LCD Display

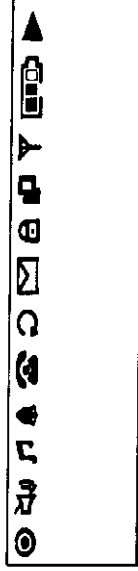

LCD DISPLAY

INDICATOR

FUNCTION SELECT

	POWER ON		UP OR ESCAPE
	VIBRATE OR SLEEP ALERT		SET ALERT
	MUSIC ALERT		PAGER OFF
	ALARM		SET ALARM
	TELEPHONE DIRECTORY		SET TIME
	AUTO SCROLL		SET SCROLL
	MESSAGE RECEIVING		MESSAGE LOCK
	MESSAGE LOCK		MESSAGE UNLOCK
	DUPLICATE MESSAGE		DELETE
	OUT OF SERVICE AREA		DELETE ALL
	BATTERY CAPACITY INDICATOR		MOVE TO MEMO
	MESSAGE CONTINUED		

	MESSAGE STORAGE AREA
	MESSAGE SELECTING
	MESSAGE LOCK FLASH
	MESSAGE UNLOCK FLASH
	PERSONAL MESSAGE LOT
	FULL MESSAGE LOT

Operation / Function Select

To Read a Message :

- (a) If no button is pressed after a message received , a reminder alert will emit every 2 minutes (except Sleep mode) , also display with a icon reminder .
- (b) Press the **Select** button to enter message slots selection
- (c) Press the **Read** button to read message . Press the **Read** button once to scroll to next page . (When uses the **Set Scroll** function , it is unnecessary to press any button, and the display will auto scroll to next page .)

Display Back-Light

Press and release the **Read** button 5 seconds continues, then , back-light flashes .

Function Operation

Press the **Function** button to enter functions operation condition.
(Display appears function symbols this time. If not, press the **Function** button again .)

(a) Function Select : 1. Press the **Function** button to enter the function selection , then press the **Select** button to select the desire function. 2. After make your selection , press the **Function** button once to continue function set up . 3. Then, press the **Read** button to complete.

(b) Set Alerts : Press the **Function** button to enter the function selection . To press the **Select** button to **ALERT MODE**, then press the **Selection** button to select the desired alert 1. Alert 2. Musical 3. Vibration 4. Sleep mode . Then, press the **Function** button to select the desired alert . Press the **Read**

button.

- (c) **Pager Off** : Press the ***Function*** button to enter the function selection . Press the ***Selection*** button to select the **OFF MODE**, then , press the ***Function*** button once. When the display appears **PAGER OFF ?** press the ***Read*** button .
- (d) **Set Alarm** : To press the ***Function*** button to enter the function selection to “Set Alarm” Mode. Adjust the desired sets by the ***Function*** button and to adjust the desired alarm time by the ***Select*** button .Then press the Read button .
- (e) **Set Time** : Press the ***Function*** button to the function selection until “Set Time “ appears on the LCD. Then press the ***Select*** button once to pick up the desired time. When complete , press the ***Read*** button to exit.
- (f) **Set Scroll** : Using the ***Function*** button , select message to be auto scroll . Press the ***Select*** button to set up the scroll

speedy . Press the ***Read*** button to complete .

- (g) **Message Lock or Message Unlock** : Using the ***Function*** button , select message to be locked or unlock. Press the ***Select*** button until the lock or unlock icon appears at the middle of the desired message .Then press the ***Read*** button . Message has been locked and cannot be deleted unless unlocked .
- (h) **Delete** : Press the ***Function*** button to the function selection , then, select “Delete” Mode by the ***Select*** button . Press the ***Read*** button . Message has been deleted .
- (i) **Delete All** : To press the ***Function*** button to the function selection area. Press the ***Select*** button until the works “Delete All “ appears on the display . Press the ***Read*** button once .All unlocked messages are deleted .
- (j) **Move To Memo** : While viewing the desired message , press the ***Function*** button to function selection area to select until “Move

To Memo “ appears on the display . Then press the ***Select*** button. The desired message or icon message has been move to personal message area .

INFORMATION TO THE USER

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device. Pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. Which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ___Consult the dealer or an experienced radio/TV technician for help.

This booklet is available from the US government Printing Office
*Washington, DC 20402, Stock NO. 004-000-00345-4.

CAUTION: Any changes of modifications not expressly approved by the grantee of this device could void the users authority to operate the equipment.