

IC-3040IWT User Manual V1.0

2013-11

I. Product Information.....	4
I-1. Package Contents.....	4
I-2. System Requirements.....	5
I-3. Back Panel	6
I-4. LED Status	6
I-5. Reset	7
II. Hardware Installation.....	8
III. Camera Setup & IP CAM Finder	10
III-1. IP CAM Finder Network Camera Setup	10
Windows.....	10
III-3. WPS (Wi-Fi Protected Setup)	15
IV. Web-Based Management Interface	17
IV-1. Basic.....	21
IV-1-1. Network	21
IV-1-2. Wireless.....	24
IV-1-2-1. Computer.....	25
IV-1-2-3. WPS	26
IV-1-3. Dynamic DNS.....	27
IV-1-4. RTSP	28
IV-1-5. Date & Time	29
IV-1-6. Users	30
IV-1-7. UPnP	32
IV-1-8. Bonjour	33
IV-2. Video.....	34
IV-2-1. Video Settings.....	34
IV-2-2. Image Appearance.....	36
IV-2-3. Night Vision	37
IV-3. Events.....	38
IV-3-1. Motion Detection	38
IV-3-2. Detection Region	40
IV-3-3. Schedule Settings	42
IV-3-4. SMTP	44
IV-3-5. FTP	46
IV-4. Storage Settings.....	47


The “Storage Settings” menu consists of five categories, “Storage Directory”, “Schedule Settings”, “NAS Settings”, “SD Card Settings” and “File Management”. Select a category and follow the

appropriate chapter for more information.....	47
IV-4-1. Storage Directory.....	47
IV-4-2. Schedule Settings	47
IV-4-3. NAS Settings	48
IV-4-4. SD card Settings.....	49
IV-4-5. File Management.....	49
IV-5. System.....	50
IV-5-1. Basic	50
IV-5-2. Advanced	51
IV-6. Status	52
IV-6-1. System Information	52
IV-6-2. System Log	54

- End-	55
---------------------	-----------

I. Product Information

I-1. Package Contents

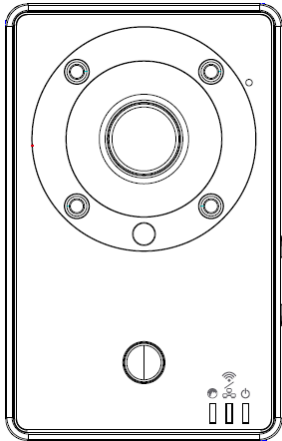

IC-3040IWT




QIG



CD-ROM



Power Adapter

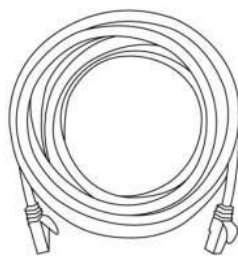


Ethernet Cable




I-2. System Requirements

- Intel Pentium 4 2.4GHz (above or similar)
- VGA card (1024*768 or above)
- CD-ROM Drive
- At least 128MB hard disk space (256 MB recommended)
- Windows 2000, XP, Vista, 7 or 8
- Web browser (Internet Explorer 7.0, Firefox 3.6, Chrome 10, Opera 11, Safari 5 or above)

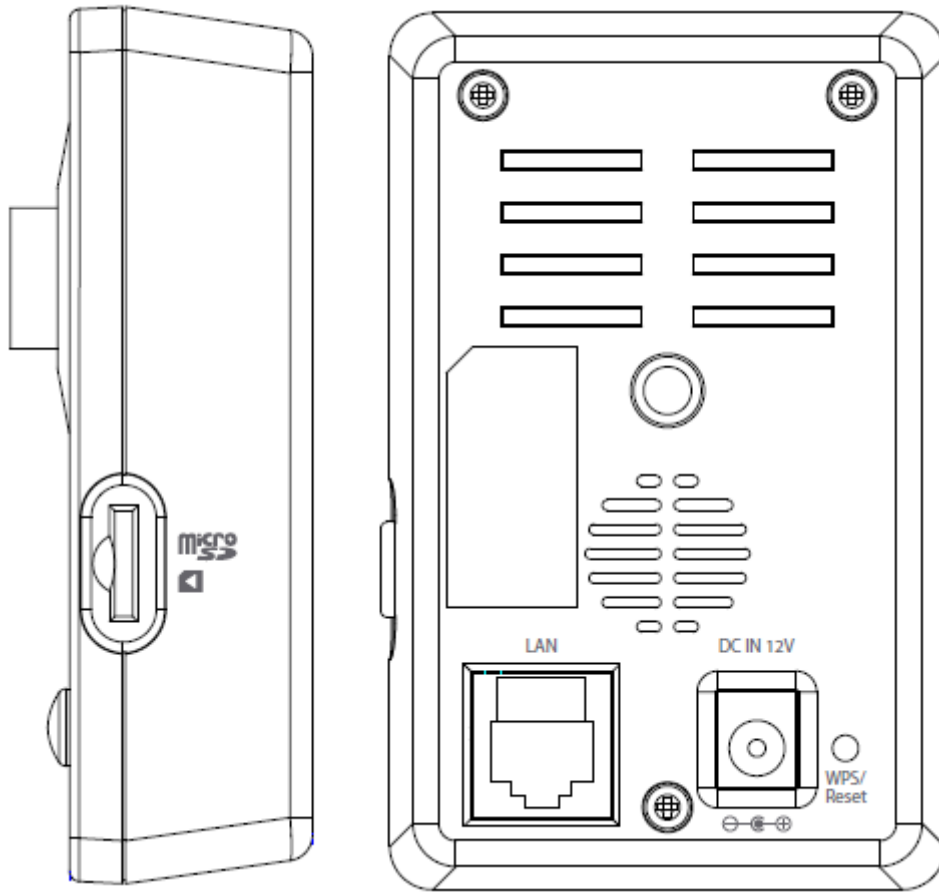I-3. Back Panel



I-4. LED Status

LED ICON	LED Status	Description
 (Power)	ON	Power On
	Slow Flashing	During Power Up Stage
	OFF	No Power Input
 (LAN/Wi-Fi)	ON	Connected to LAN and/or Wi-Fi
	Flashing	During data transmitting and receiving
	OFF	Neither LAN nor Wi-Fi connected
 (Internet)	ON	Connected to Internet
	Flashing	During Internet connection
	OFF	Not connected to Internet

I-5. Reset

If you experience problems with your network camera, you can reset the camera back to its factory default settings. This resets **all** settings back to default.



- 1.** Press and hold the WPS button found on the back panel for at least 10 seconds
- 2.** Release the button when the **orange** LED is **flashing quickly**.
- 3.** Wait for the network camera to restart. The camera is ready when the **green** LED is **on** or **flashing**.




After reset, the LED will display off if there is no Ethernet connection to the network camera from a router/access point/switch.


II. Hardware Installation

Follow the instructions below to ensure your camera is properly connected and ready for setup.

- 1.** Use an Ethernet cable to connect the network camera's LAN port to a router/switch/access point's LAN port, as shown below.

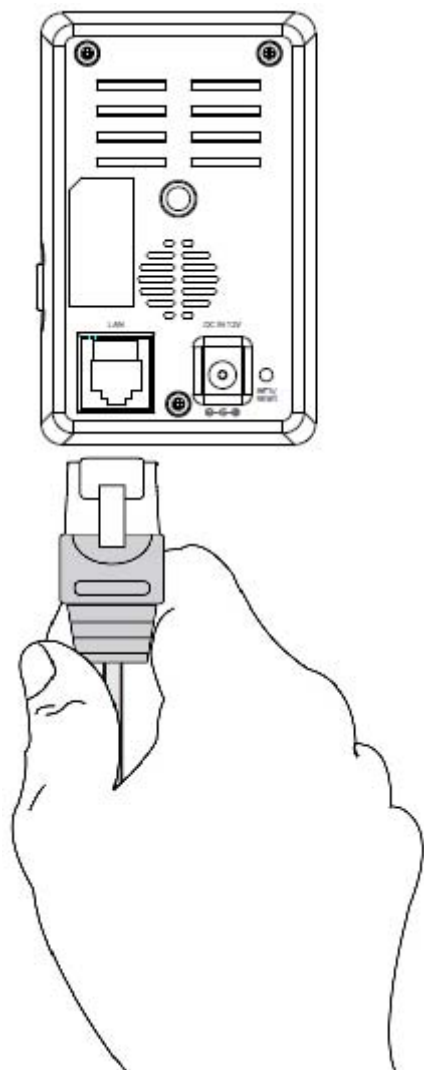

- 2.** Connect the power adapter to the network camera's power port and to a power supply, as shown below.

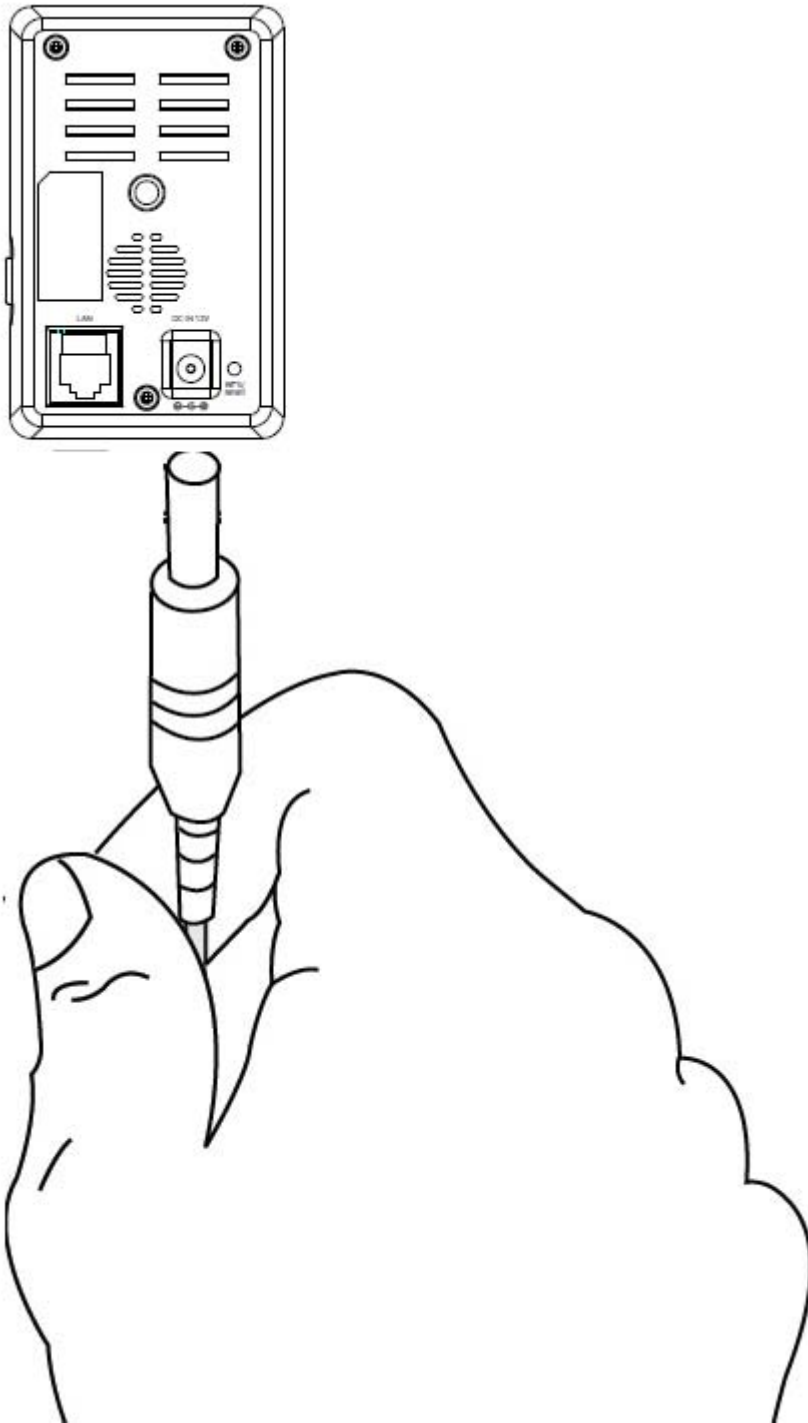

- 3.** Wait a moment for the camera to power on. The camera is ready when the **Power** LED of the camera displays **on** or **flashing**. Please refer to **III. Camera Setup** to setup your network camera.

III. Camera Setup & IP CAM Finder

Your network camera can be up and running in just a few minutes. First, please follow the instructions below for **Windows** in **III-1. Installing & Using IP CAM Finder** to install the IP CAM Finder software and connect your camera to your wireless network.

Or you can follow **III-3. WPS** as an alternative method to connect your network camera to your wireless network.

Then, you can use the web based management interface to watch a live stream and further configure the camera if you need (see **IV.**).

Additionally, you can view the camera's live image using either the cloud ID (see **V.**), the 16 channel viewer software (see **VI.**), or the IP CAM smartphone app (see **VII.**).

III-1. IP CAM Finder Network Camera Setup




Ensure your computer is connected to the same router as the network camera.

Windows


- 1.** Insert the included CD into your CD-ROM drive
- 2.** Find the "Internet Camera Admin Software" filename "Setup_Admin_3.0.35_GLP.exe" and execute it
- 3.** Find the IP CAM IP Address from the "Internet Camera Admin Software" detail as the figure in below



4. Select the IP CAM found

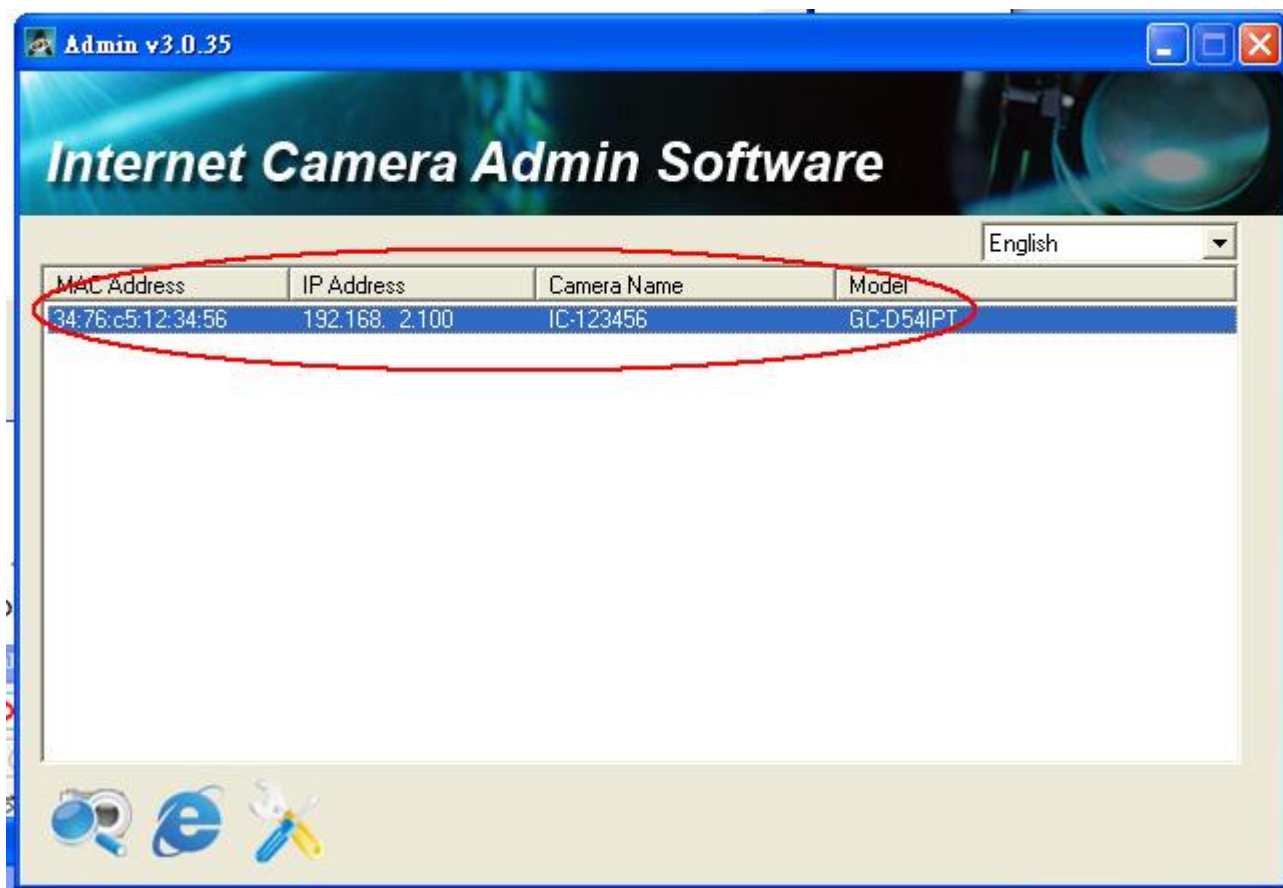


5. (1) Click the “Configure Camera” ICON and (2)key in the password then
“OK”

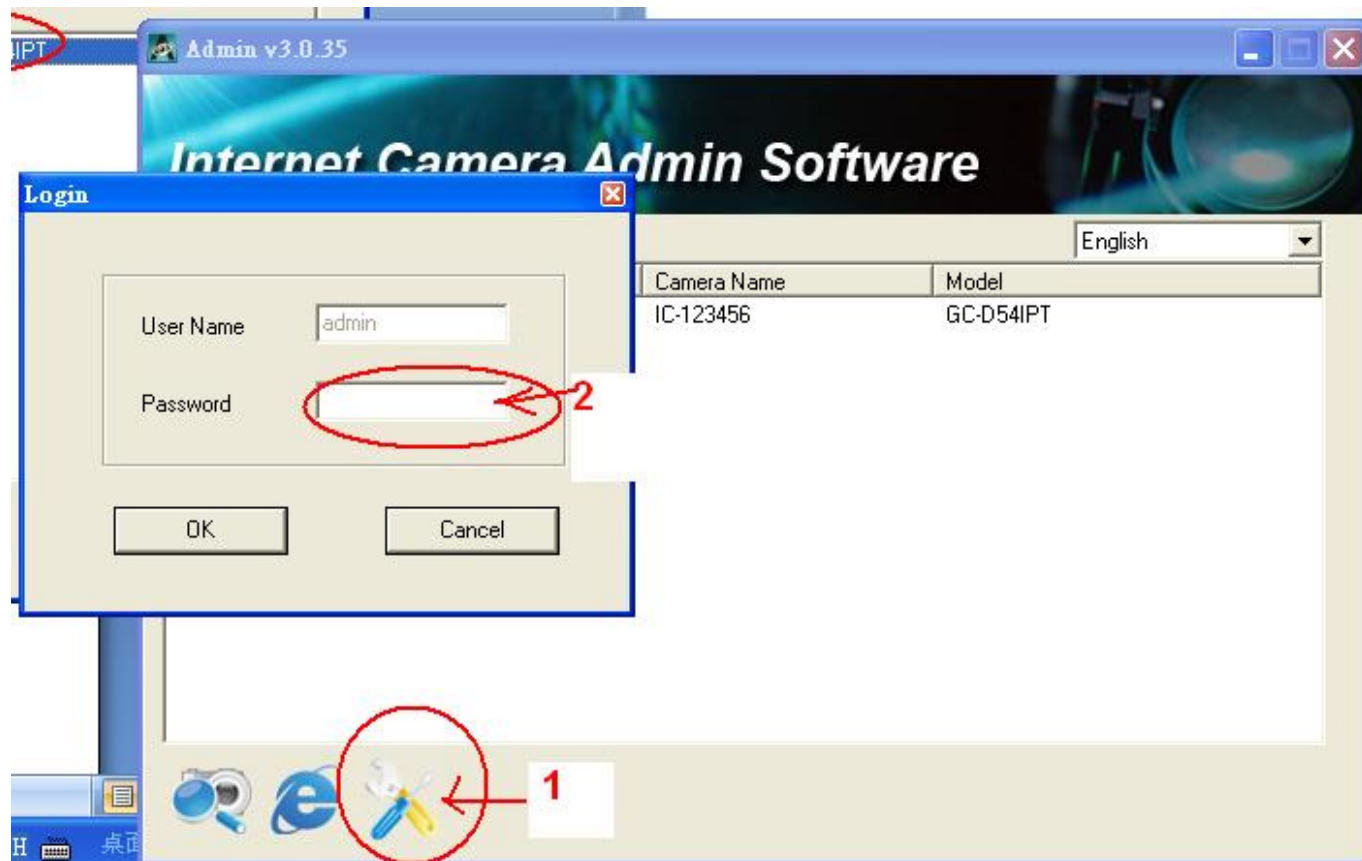

6. Press the “OK” button as the figure in below



7. Select the “Browse Camera via Web” ICON to access the IP CAM

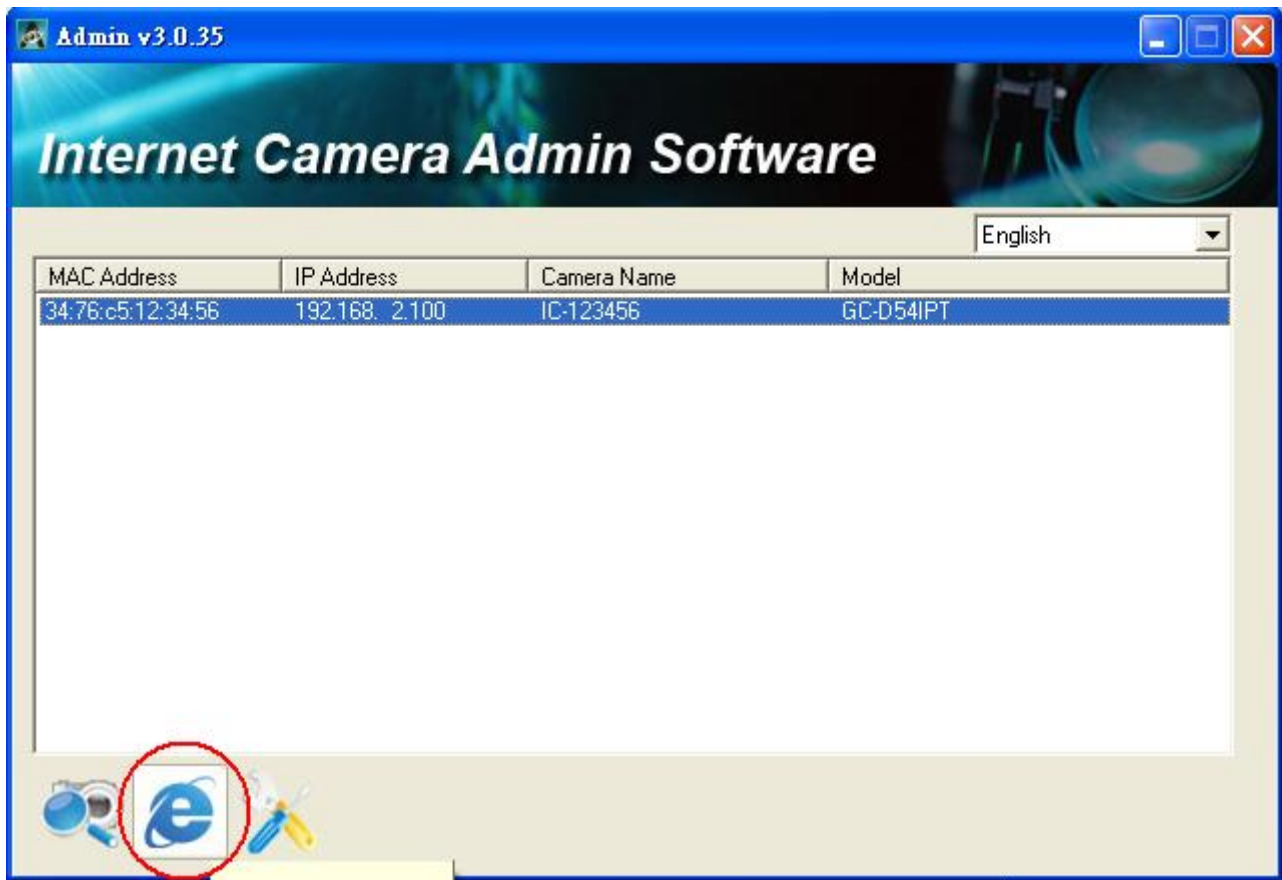


III-3. WPS (Wi-Fi Protected Setup)

The WPS button is a quick and easy method to establish a secure wireless connection between your network camera and your wireless router/access point.

1. Press and hold the WPS button on your **wireless router/access point** for the correct length of time to activate its WPS.



Please check the instructions for your wireless router/access point for how long you need to hold down its WPS button to activate WPS.

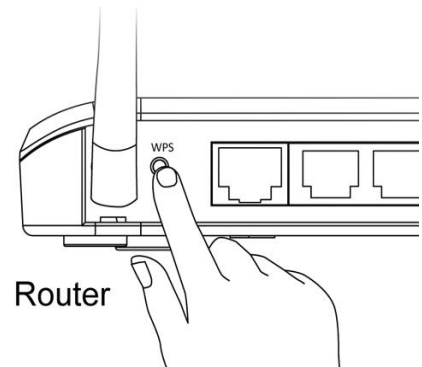

2. Within two minutes, press the WPS/Reset button on the network camera for 2 – 5 seconds to activate WPS. The **LAN/Wi-Fi LED** will **flash slowly** to indicate that WPS is active.



Take care not to hold the WPS button too long and reset your network camera (see I-5.)



3. The devices will establish a connection. The **LAN/Wi-Fi** LED will display **on** or **flashing** to indicate a successful connection.


IV. Web-Based Management Interface

When you are using the **same** local network as your camera, you can use the web-based management interface to view or configure the camera.

You can access the web-based management interface with a web browser on a smartphone or computer. For smartphone users, the appearance of the interface will vary slightly to that which is displayed here, though the menu functions which are described later from **IV-1. Basic** onwards are essentially the same.

1. Enter the network camera's IP address into the URL bar of a web browser. The camera's IP address can be found by opening IP CAM Finder, as displayed below:


 **Internet Explorer is recommended.**

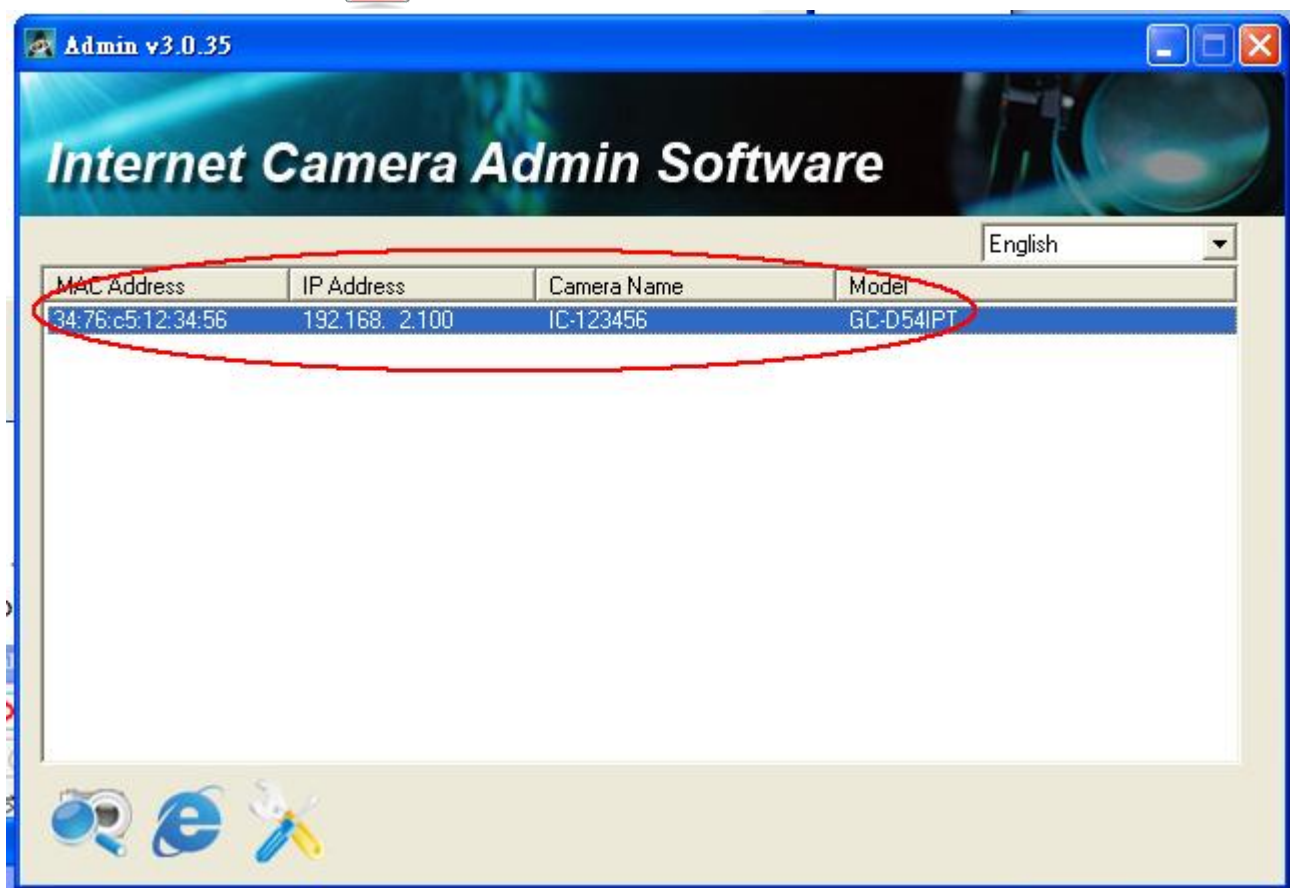






2. You may be prompted to allow ActiveX add-on to run. Please follow the instruction to execute ActiveX.
3. Enter the username and password for your network camera (default username: **admin** default password: **1234**). The network camera's web-based management interface will then be displayed in your browser.

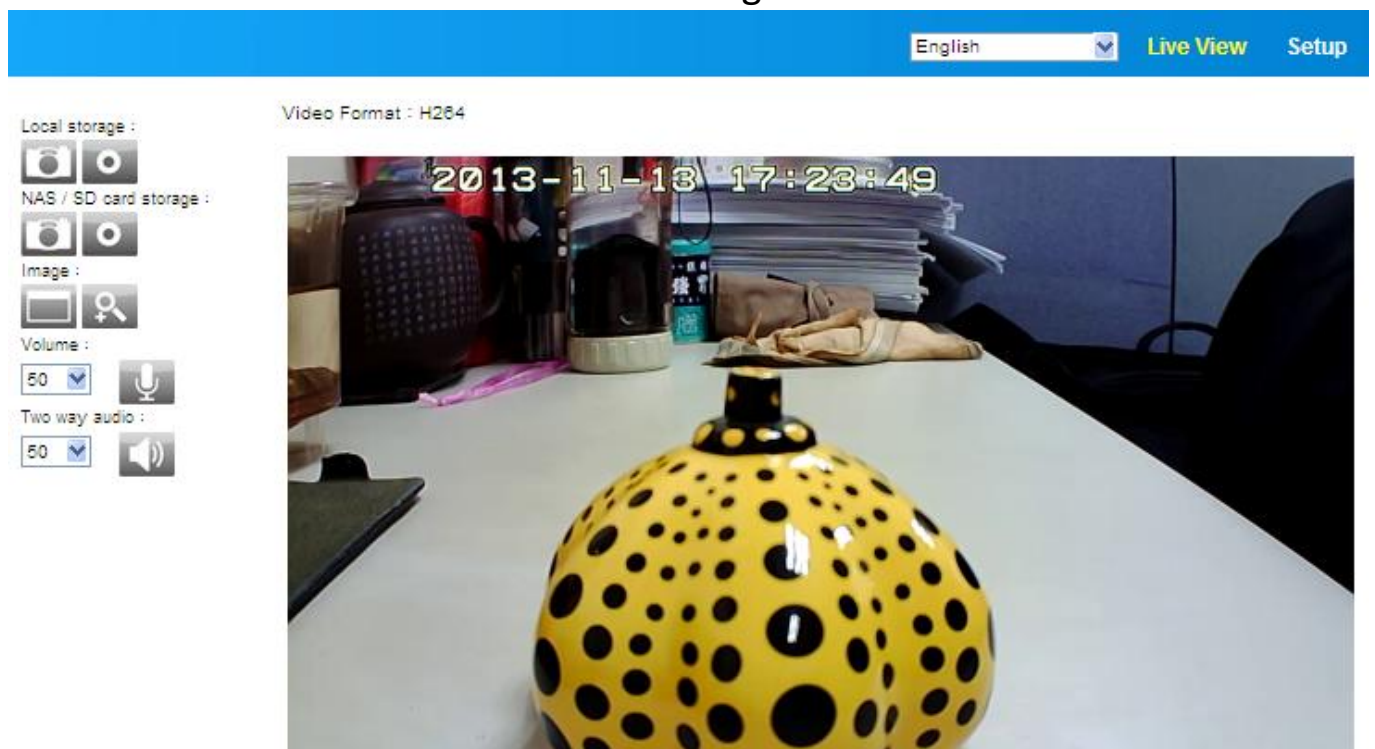


4. For computer users, the "Live View" screen will be displayed, as shown below. On the live view screen you can see a live stream from your camera and utilize various camera controls using the icons down the left side.




<p>Local Storage</p> <p>Local storage :</p> 	<p>Use your PC to storage the Picture or Video image</p>
<p>NAS/SD Card Storage</p> <p>NAS / SD card storage :</p> 	<p>Setting the Picture or Video image into NAS/SD Card</p>
<p>Image</p> <p>Image :</p> 	<p>To Full Screen Display or Zoom In/Zoom Out the Image</p>
<p>Volume</p> 	<p>Click the icon to mute the playback volume, or adjust the playback volume level according to your preference using the drop down menu.</p>
<p>Two-Way Audio</p> 	<p>Click the icon to disable two-way audio from the camera, or adjust the volume level according to your preference using the drop down menu.</p>


5. Select “Setup” in the top right corner and use the menu down the left side to navigate to the network camera’s various settings. Each menu item is described in the following chapters.

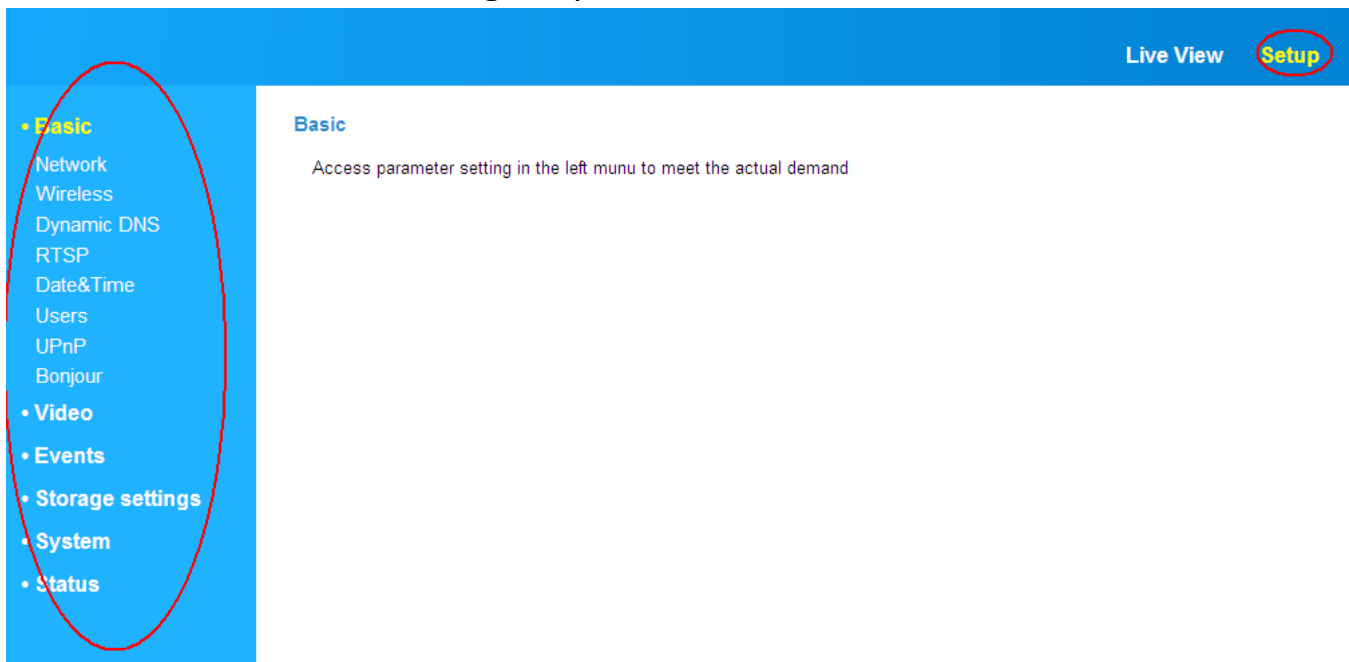

6. After making any changes, click “Save Settings” to save the settings and bring the changes into effect.

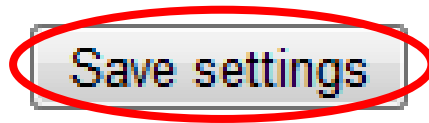

IV-1. Basic

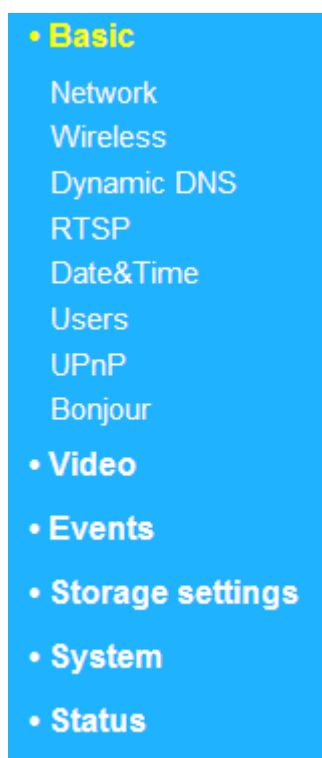

The “Basic” menu opens a submenu with eight categories of settings for your network camera’s basic operation.

Select a category and refer to the appropriate chapter.

IV-1-1. Network

Local network setting are displayed on this page, as shown below:

- **Basic**

- Network

- Wireless

- Dynamic DNS

- RTSP

- Date&Time

- Users

- UPnP

- Bonjour

- **Video**

- **Events**

- **Storage settings**

- **System**

- **Status**

Network

Network Type:

Static IP

IP address:

Subnet mask:

Gateway:

Primary DNS:

Secondary DNS:

HTTP Port:

PPPoE

User Name:

Password:

MTU:

(512<=MTU Value<=1492)

Network Type	Select “DHCP” to automatically assign an IP address to your network camera from your router, or “Static IP” to manually set a static IP address.
---------------------	--

IP Address	Specify an IP address here, which will be the IP address of your network camera.
Subnet Mask	Enter the subnet mask of the IP address.
Gateway	Enter the gateway address of your network.
Primary DNS	Enter the IP address of your primary DNS server.
Secondary DNS	Enter the IP address of your secondary DNS server (optional).
HTTP Port	You can edit the HTTP port number to any value between 1024 – 65535. The default value is 80.

IV-1-2. Wireless

The wireless page allows you to configure settings for your network camera's wireless connection. For Windows users, your wireless connection should have been set up already using IP CAM Finder, though you can still use this page to revise the settings if you need.

Mac users need to configure these settings manually since IP CAM Finder on Mac will not set up your camera's wireless connection. A quick guide to set up your network camera's wireless connection using a smartphone or a computer is included below.



Mac users setting their network camera's wireless connection for the first time please ensure your network camera is connected to your router/access point/switch via Ethernet cable.

You can also use the “wireless” page for Wi-Fi Protected Setup (WPS): to either activate push-button WPS (the same effect as physically pushing the hardware WPS button built into the camera), or PIN code WPS (using a PIN code for verification between the two wireless devices for additional security.)

<ul style="list-style-type: none">• Basic• Network• Wireless• Dynamic DNS• RTSP• Date&Time• Users• UPnP• Bonjour• Video• Events• Storage settings• System• Status	Wireless	
	Wireless Connection:	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
	Network Type:	Infrastructure
	Mode:	2.4GHz (B+G+N)
	Band:	20/40 MHZ
	Available Network:	<input type="button" value="Refresh"/> Click Refresh to see the available networks
	SSID:	<input type="text"/>
	Channel:	Auto
	Authentication:	None
	Encryption Type:	None
	WPA Pre Shared Key:	<input type="text"/>
	WEP Key Format:	HEX
	WEP Key Length:	64-Bit
	Default Key:	1
	WEP Key 1:	<input type="text"/>
	WEP Key 2:	<input type="text"/>
WEP Key 3:	<input type="text"/>	
WEP Key 4:	<input type="text"/>	
<input type="button" value="save setting"/>		

IV-1-2-1. Computer

1. Configure the wireless settings **A – E** shown in the table below:

The screenshot shows a 'Wireless' settings page. At the top, there are radio buttons for 'Wireless Connection' (labeled A) and 'Disable'. Below that are dropdown menus for 'Network Type' (Infrastructure), 'Mode' (2.4GHz (B+G+N)), and '20/40 MHz'. A 'Refresh' button (labeled B) is next to the 'Available Network' section. Below this is a table of available networks (labeled C) with columns for 'Connected', 'SSID', 'BSSID', 'Signal', 'Channel', 'Encryption', and 'Network Type'. The first row is selected. Below the table are fields for 'SSID' (edimax.setup), 'Channel' (Auto), 'Authentication' (WPA2 PSK), and 'Encryption' (AES). A 'WPA Pre Shared Key' field (labeled D) is followed by 'WEP Key Format' (HEX), 'WEP Key Length' (64-Bit), 'Default Key' (1), and three 'WEP Key' fields (labeled E). A 'save setting' button is at the bottom.

A	Wireless Connection	Select “Enable” to enable the wireless connection.
B	Available Network	Click “Refresh” to display all available Wi-Fi networks.
C	Connected	Select your Wi-Fi network from the list. This is the wireless network which your camera will connect to.
D	WPA Pre Shared Key	Enter your Wi-Fi password.
E	Save Settings	Click “Save Settings” to save your settings.

2. After the settings are saved, remove the Ethernet cable from your network camera. Your camera should now be connected to your Wi-Fi.

IV-1-2-3. WPS

WPS (Wi-Fi Protected Setup) is a quick and easy way to set up wireless connections between compatible devices. Use the “Start PBC” or “Start PIN” button to activate WPS on your network camera. Your network camera’s WPS PIN code is also listed next to “Self PinCode”.

WPS

Self PinCode: 90588235

Access PBC mode:

Configure via PinCode: Registrar SSID:

Self PinCode	Your network camera’s WPS PIN code is listed here.
Access PBC Mode	Click “Start PBC” to activate push-button WPS on your network camera. This has the same effect as physically pushing the built-in hardware WPS button.
Configure via PinCode	Enter the SSID you wish to connect to and click “Start PIN” to activate PIN code WPS. You will then need to enter the network camera’s “Self PinCode” into your wireless router’s web U.I. and activate your router’s PIN code WPS.



Please refer to your wireless router’s instructions for help accessing its web-based interface and activating WPS.

IV-1-3. Dynamic DNS

Dynamic DNS (DDNS) is a service which provides a hostname-to-IP service for dynamic IP users. If your Internet service provider didn't issue a fixed IP address, you can use a third-party dynamic DNS provider to map your current IP address to a fixed IP address. Several free or paid DDNS services are available online, please use the information provided by your DDNS provider to configure the settings on this page.

Dynamic DNS

Enable DDNS: Enable Disable

Provider:

Host Name:

Username:

Password:

Enable DDNS	Select "Enable" to enable DDNS functionality, or select "Disable" to disable DDNS functionality.
Provider	Select your dynamic DNS service provider from the dropdown menu.
Host Name	Enter the hostname you registered with the DDNS service provider.
User Name	Enter the user name you registered with the DDNS service provider.
Password	Enter the password you registered with the DDNS service provider.

IV-1-4. RTSP

Real Time Streaming Protocol (RTSP) enables the network camera to be used with a streaming media server. Enter the required RTSP settings.

RTSP Settings

RTSP Port:

MJPEG RTSP Path: .sdp

RTP Port Range: -

Verification:

RTSP Port	Enter the RTSP port.
MJPEG RTSP Path	Enter the MJPEG RTSP path.
RTP Port Range	Enter the RTSP port range.
Verification	Select a verification type from the drop down menu.

IV-1-5. Date & Time

You can set and adjust the network camera's system time and date on this page. Maintaining a correct system time is particularly important for recorded video organization/playback.

Date & Time

Mode: NTP Manual Setting

Set Time & Date Manually: / / : :

NTP Server:

Time Zone:

Daylight Saving: Enable Disable

Mode	Select "NTP" or "Manual Setting". NTP (Network Time Protocol) can set and maintain the time and date automatically via an NTP server on the local network, if available.
Set Time & Date Manually	For manual setting mode, enter the correct time and date in the following format: YYYY/MM/DD HH:MM:SS
Synchronize to PC time	Click here to automatically enter the same time and date as your computer.
NTP Server	For NTP mode, enter the NTP server's hostname or IP address.
Time Zone	Select the correct time zone.
Daylight Saving	Enable or disable daylight saving according your local time zone.

IV-1-6. Users

In addition to the default administrator account, you can configure several different login accounts for the network camera, with two different levels of access – operator and guest.

Operator accounts can configure all functions of the network camera in the same way as the administrator account, while guest accounts can only view the camera's image.

User List: max : Operator

User Name:

Password:

Confirm Password:

Authority: Operator Guest

Anonymous Login: Enable Disable

User List	Existing users are listed here. Select a user here to modify the settings.
User Name	Input user's name here.
Password	Input user's password here.
Confirm password	Input user's password here again for confirmation.
Authority	Select the user's authority: Operators can view video and configure all settings, while guests can only view video.
Add	Add a new user.
Modify	Save the changes to an existing, selected user.
Remove	Remove selected user.

Anonymous Login	Enable or disable anonymous login. Anonymous login allows anyone to login to the network camera and view images. This function is useful if you want to setup a remote video server.
------------------------	---

IV-1-7. UPnP

Universal plug-and-play (UPnP) is a set of networking protocols which enables network devices to communicate and automatically establish working configurations with each other. When enabled, Windows computers can automatically discover the network camera on the local area network. The network camera also supports IGD.

UPnP

Enable Disable

Save settings

IGD (UPnP Port Forward)

IGD Enable (UPnP Port Forward) : Enable Disable

IGD Configuration (External Port) : IGD Fully Automation (Auto) IGD Semi Automation (Manually)

External HTTP Port :

External RTSP Port :

Enable/Disable	Enable or disable UPnP.
-----------------------	-------------------------

IGD Enable (UPnP Port Forward)	Enable or disable Internet Gateway Device (IGD).
IGD Configuration (External Port)	Select fully-automated or semi-automated IGD.
External HTTP Port	Enter an external HTTP port.
External RTSP Port	Enter an external RTSP port.

IV-1-8. Bonjour

Bonjour is a feature of Mac computers which allows Safari web browser to discover devices and services on the local network and provide a quick shortcut for access. When enabled, Safari users on the local network can find a shortcut to the network camera under Safari's "Bonjour" menu. Select "Enable" or "Disable".


Bonjour

Enable Disable

Save settings

IV-2. Video

The “Video” menu consists of three categories for configuring the network camera’s video settings. Select an item from the submenu and refer to the appropriate following chapter.

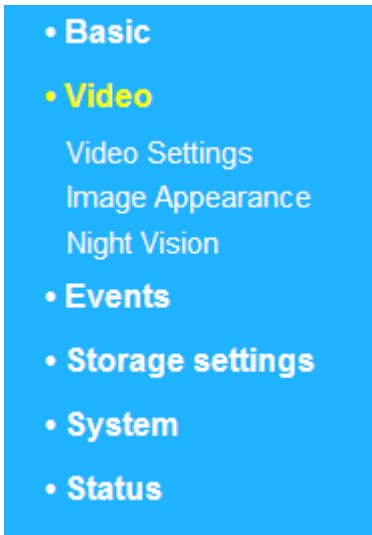

IV-2-1. Video Settings

The “Video Settings” page enables you to modify the network camera’s resolution and frame rate settings.

Video Settings

Resolution :	VGA (640 x 480) ▼
Quality :	Highest ▼
Maximum Frame Rate :	30 ▼
Power Frequency :	60 HZ ▼
Rotate Image :	0° ▼

Resolution	Select a video resolution from the dropdown menu. A higher resolution provides more detailed video but requires more bandwidth.
-------------------	---

Quality	Select a quality level from the drop down menu. Higher quality requires more bandwidth.
Maximum Frame rate	Select the maximum video frame rate. A higher frame rate provides smoother video, but also requires more bandwidth. <i>Note: In dark environments, the network camera will automatically lower the frame rate to provide a better video quality, by using a longer exposure time.</i>
Power frequency	Adjust the power frequency to 50 Hz or 60 Hz frequency depending on your local region, in order to reduce flicker/improve playback in your videos.
Rotate Image	Select 180 to rotate your network camera's video by 180 degrees.

IV-2-2. Image Appearance

The “Image Appearance” page allows you to adjust various parameters relating to the network camera’s image appearance using the sliders shown below.

Image Appearance



Brightness/ Contrast/ Saturation/ Sharpness/ Hue	Click and drag the blue lever to change the value according to your preference for each category.
Reset to default	Click to reset all settings back to the default value of 50.
Save value	Save changes.

IV-2-3. Night Vision

Night-vision allows your network camera to capture images in dark environments by using infra-red LEDs. Auto-switch will detect light levels in your network camera's environment and automatically switch to night-vision in low light. Select "Enable" or "Disable" for night-vision auto-switch.

Night Vision

Auto Switch : Enable Disable

IV-3. Events

Select an item from the “Events” menu and refer to the appropriate following chapter. You can configure settings for motion detection, scheduling, SMTP and FTP.



IV-3-1. Motion Detection

The network camera features a motion detection function and various options for (motion detection) events notification. On this page you can enable or disable motion detection, event FTP upload and event emails as well as set the motion detection time interval. Motion detection regions can be configured according to your preference on the “Detection Region” page (see next chapter).

Motion Detection

Motion Detection : Enable Disable

Interval Time To Detect : ▾

Upload Event File to FTP : Enable Disable


Send Event File to Email : Enable Disable

Motion Detection	Enable or disable the motion detection function of your network camera.
Motion Detection Interval	The motion detection interval time determines the length of time the camera must detect motion for in order to class the motion as an event. To detect minor motion,

	select a shorter time. A longer time will ignore minor motions. Select your desired time from the drop down menu.
Upload Event File to FTP	A snapshot image of a detected event can be sent to a designated FTP server. Select “Enable” or “Disable” for this function. When enabled, you need to configure the FTP server information on the “FTP” page of the “Events” menu.
Send Event File to Email	A snapshot image of a detected event can be sent to a designated email recipient. Select “Enable” or “Disable” for this function. When enabled, you need to configure the SMTP server information on the “SMTP” page of the “Events” menu.

IV-3-2. Detection Region

When using the network camera's motion detection function, you can specify the area in the video where the network camera should be sensitive to motion. Motion outside of the detection region will be ignored by the network camera. This is useful to avoid false alarms.

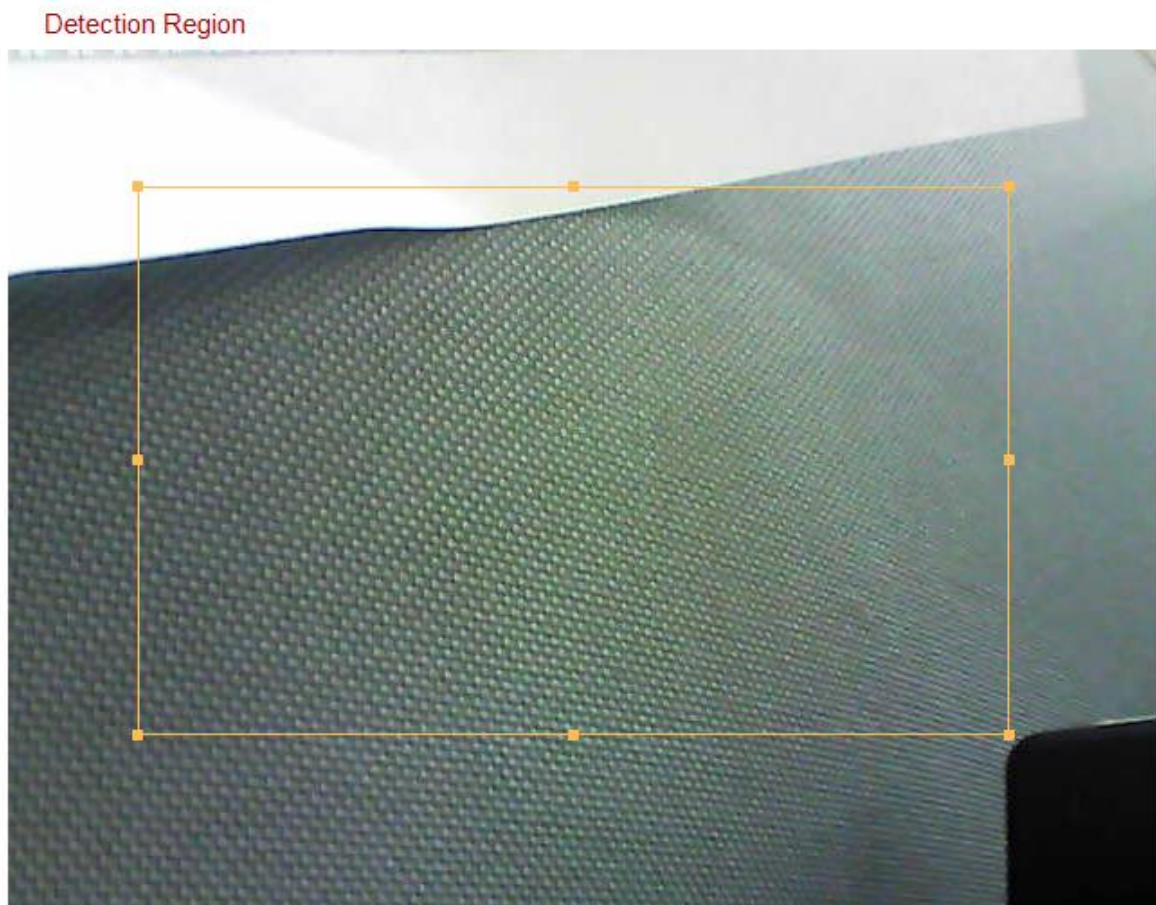

	<input checked="" type="checkbox"/> Region 1	<input type="checkbox"/> Region 2	<input type="checkbox"/> Region 3
Sensitivity	<input type="range"/> 90	<input type="range"/> 90	<input type="range"/> 90
Threshold	<input type="range"/> 3	<input type="range"/> 3	<input type="range"/> 3
			<input type="button" value="Save"/>

Item	Description
Region 1 / Region 2 / Region 3	Check the box to enable up to three motion detection regions. A color-coded rectangle will appear on the video view for each

	enabled region. Adjust the size and position of each box according to your preference by clicking and dragging inside the box (move) or on the edges (resize).
Sensitivity	Adjust the sensitivity level of motion detection for each region. A higher value will trigger the alarm for minor motion in the video and vice-versa. You can reduce the sensitivity level if you receive unnecessary event notifications.
Threshold	Adjust the motion detection threshold level for each region. A higher value will trigger the alarm for large objects in the video, a lower value will trigger the alarm for smaller objects.
Save	Save your settings.

IV-3-3. Schedule Settings

The network camera's motion detection function can be scheduled to switch on/off automatically on specified times and days. Select "Enable" to enable this feature and then define at which times the network camera will detect motion.

For each day, click and drag across the timeline on the times which you want to activate motion detection. A blue box indicates a scheduled motion detection period. In the example below, motion detection is scheduled for 8am – 6pm Monday to Saturday.

Schedule Settings

Schedule : Enable Disable



Delete	Delete the selected blue motion detection period on the timeline.
Delete All	Delete all blue motion detection periods on the timeline.
Select All	Select all blue motion detection periods.
Store	Store the motion detection settings on the timeline. Note: Schedule settings must also be enabled for the schedule to come into effect.

IV-3-4. SMTP

A snapshot image of a motion-detected event can be sent to a designated email recipient. This function must be enabled in “Motion Detection” settings in the “Events” menu. Enter the required information about your sender and recipient email accounts below.

SMTP

Email Service Provider:

SMTP Server:

SMTP Port:

Recipient Email Address:

Sender Email Address:

SSL/TLS:

SMTP Authentication: Enable Disable

Account:

Password:

Email Service Provider	Select “Manual Settings” to enter the information manually or select a common email provider to enter some of the information automatically.
SMTP Server	Input the host name or IP address of the SMTP server for the email sender. This information can be provided by your email service provider.
SMTP Port	Input the SMTP port number for the email sender. Most SMTP servers use port number 25, while some SMTP servers use encrypted connections with a port number of 465. This information can be provided by your email

	service provider.
Recipient E-Mail Address	Enter the email recipient's email address here.
Sender E-Mail Address	Enter the sender's email address here to avoid spam filter issues.
SSL/TLS	Select 'SSL or TLS' when your SMTP server requires encryption. Consult your mail server administrator when in doubt.
SMTP Authentication	Select 'Enable' when your SMTP server requires authentication. This information can be provided by your email service provider.
Account	Input the SMTP account name when your SMTP server requires authentication. This information can be provided by your email service provider.
Password	Input the password used for SMTP server authentication.
Send Test Email	Click here to send a test email with the current settings.

IV-3-5. FTP

A snapshot image of a detected event can be sent to a designated FTP server. This function must be enabled in “Motion Detection” settings in the “Events” menu. Enter the required information about your FTP server below.

FTP

FTP Server:

Username:

Password:

Port:

Path:

Passive mode: Enable Disable

FTP Server	Enter the IP address or host name of the FTP server.
User Name	Enter the user name required by the FTP server.
Password	Enter the password of the FTP server.
Port	Enter the port number of the FTP server. This value should be an integer between 1 and 65535. Please don't change this value unless advised by the FTP server's administrator.
Path	Enter a path (folder) to save files on the FTP server. If blank, files will be saved in the FTP server's default root folder.
Passive mode	Enable or disable passive mode according to your FTP server.

IV-4. Storage Settings

The “Storage Settings” menu consists of five categories, “Storage Directory”, “Schedule Settings”, “NAS Settings”, “SD Card Settings” and “File Management”. Select a category and follow the appropriate chapter for more information.

• Storage settings

- Storage directory
- Schedule Settings
- NAS settings
- SD card settings
- File Management

IV-4-1. Storage Directory

The Storage Directory allow you setting the destination of file storage either SD Card or NAS.

Storage

Please select one storage target:

SD Card ▼
NAS
SD Card

IV-4-2. Schedule Settings

The Schedule Settings allow you to enable or disable this function. After you enable the Schedule Settings, you can setting the interval time by quarter hour time unit.

Schedule Settings

Schedule : Enable Disable

save setting

	00:00	03:00	06:00	09:00	12:00	15:00	18:00	21:00	24:00
Sunday	[Schedule bar]								
Monday	[Schedule bar]								
Tuesday	[Schedule bar]								
Wednesday	[Schedule bar]								
Thursday	[Schedule bar]								
Friday	[Schedule bar]								
Saturday	[Schedule bar]								

Delete Delete All Select All Save Start : End :

IV-4-3. NAS Settings

The NAS Settings allow you to define the NAS location.

NAS settings

Status:	Disconnected
NAS IP & sharing resource :	\\ <input type="text" value="NAS server IP"/> \ <input type="text" value="Path"/> \ <input type="text" value="(Folder)"/>
Notification for space full :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Cycle recording :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Max Recording File Time :	5 minute ▼
Authentication :	Anonymous ▼
User Name :	<input type="text"/>
Password :	<input type="text"/>

save setting

IV-4-4. SD card Settings

The SD Card Setting allow you to format/unmount and save setting of the SD card. SD Card memory notify and cycle recording also configurable.

SD card settings

Status :	No SD card available	
Availbale space :		
Notify while space is not enough :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Cycle recording :	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Max Recording File Time :	5 minute ▼	
<input type="button" value="Format SD card"/>	<input type="button" value="Unmount"/>	<input type="button" value="save setting"/>

IV-4-5. File Management

The File Management let you manage files in SD Card.

- Basic
- Video
- Events
- **Storage settings**
 - Storage directory
 - Schedule Settings
 - NAS settings
 - SD card settings
 - File Management**
 - Event
 - Schedule
 - Manual
- System
- Status

File Management

You cloud manage files in SD card

Event :

The snapshot images would be stored in case of event

Schedule :


The schedule recording video would be stored in this folder of SD card

Manual :

The manual recording video would be stored in this folder of SD card

IV-5. System

The “System” menu consists of three categories, “Basic”, “Advanced” and “Cloud Service”. Select a category and follow the appropriate chapter for more information.

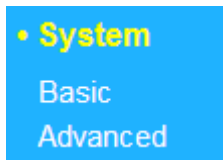

IV-5-1. Basic

The “Basic” menu enables you to set the camera’s name and administrator password, as well as switch the LED(s) on/off according to your preference.

Basic

Network Camera Name:

Administrator Password:

Confirm Password:

LED Indicators: On Off

Network Camera Name	Set the name of the network camera for reference/identification purposes. This is especially useful when managing multiple network cameras.
Administrator Password	Enter your desired administrator password here. This is the password used to log into the camera with the “admin” account.
Confirm Password	Confirm your desired administrator password here.
LED Indication	Select “On” or “Off” to switch the network camera’s LED(s) on or off. Switching off the LEDs can be a power saving measure or can be for security purposes, so that anybody who can see the network camera is unaware

if the camera is active.

IV-5-2. Advanced

The “Advanced” page allows you to upgrade the network camera’s firmware, backup or restore the network camera’s settings, and reset or restart the network camera.



Do not switch off or disconnect the device during a firmware upgrade, as this could damage the device.

Upgrade Firmware

Firmware Filename:

Backup/Restore Settings

Backup Settings:

Restore Settings:

Reset

Restart:


Reset to Default: Keep Network Settings Default Settings

Firmware Filename	Click “Browse” to locate the firmware file on your computer.
Upgrade Firmware	Click to upgrade the firmware to your selected file.
Backup Settings	Click “Apply” to save the current settings on your computer as config.bin file.
Restore Settings	Click “Browse” to find a previously saved config.bin file and then click “Upload” to replace your current settings.
Restart	Click “Restart Network Camera” to restart the network camera. Please wait a couple of minutes for network camera to boot up after

	a restart. Restarting will not affect the camera's current configuration.
Reset to default	<p>Select "Keep Network Settings" or "Default Settings" and then click "Reset to Default".</p> <p>When the camera resets, "Keep Network Settings" will reset all settings but keep the current network settings. The network camera's IP address will remain the same.</p> <p>"Default Settings" will reset all of the camera's settings, including network settings, back to the factory default status.</p>

IV-6. Status

The "Status" menu provides important information about the status of the network camera. This information is useful for troubleshooting purposes or for network configuration.

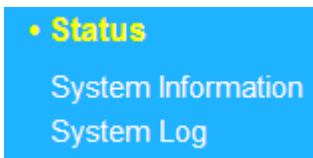

IV-6-1. System Information

A summary of system-wide information about the network camera is displayed on this page, displayed under four categories: System, LAN, Wireless LAN and IGD (UPnP Port Forward).

System

Firmware Version : v1.02 (Oct 15 2013 11:13:04)
Activex Version : v1.0.0.28
Device Uptime : 20 min 5 sec
System Time : 2013/10/15 06:57:41

LAN

IP Address : 192.168.2.105
Subnet Mask : 255.255.255.0
Gateway : 192.168.2.1
DNS Server 1 : 192.168.2.1
DNS Server 2 : 192.168.2.1
MAC Address : 80:1F:02:C4:62:42
HTTP Port : 80

Wireless LAN

Link Status : Disconnected
SSID :
Channel :
Encryption :
Access Point MAC Address :

IGD (UPnP Port Forward)

Link Status : Can not find device with UPnP IGD support
External IP Address :
External HTTP Port :
External RTSP Port :

IV-6-2. System Log

A system log provides information about the network camera's usage and actions. The system log can also be sent to a remote server for archiving.

System Log

Log Level:

Remote Log: Enable Disable

Remote Log Server:

```
Jan 1 00:00:20 syslogd started: BusyBox v1.13.4
Jan 1 00:00:20 kernel: klogd started: BusyBox v1.13.4 (2013-09-25 01:20:53 CST)
Jan 1 00:00:20 kernel: pcmac"
Jan 1 00:00:20 kernel: 0x000000780000-0x000000800000 : "jffs2"
Jan 1 00:00:20 kernel: ehci_hcd: USB 2.0 'Enhanced' Host Controller (EHCI) Driver
Jan 1 00:00:20 kernel: b8021000=10000001
Jan 1 00:00:20 kernel: b8021054=200000
Jan 1 00:00:20 kernel: reg e0=99
Jan 1 00:00:20 kernel: reg e1=ac
Jan 1 00:00:20 kernel: reg e2=98
Jan 1 00:00:20 kernel: reg e3=c1
Jan 1 00:00:20 kernel: reg e4=1
Jan 1 00:00:20 IPCam[1029]: *** IPCam main program started. ***
Jan 1 00:00:20 IPCam[1029]: Init random number generator...
Jan 1 00:00:20 IPCam[1029]: Init random number generator with value: 76432496
Jan 1 00:00:20 IPCam[1029]: Init gpio function...
Jan 1 00:00:20 IPCam[1029]: Init networking...
Jan 1 00:00:20 kernel: DWC_otg: Init: Port Power? op_state=1
Jan 1 00:00:20 kernel: DWC_otg: Init: Power Port (0)
Jan 1 00:00:20 kernel: usb usb3: configuration #1 chosen from 1 choice
Jan 1 00:00:20 kernel: usb 1-1: new high speed USB device using rtl8652-ehci and address 2
```

Log Level	Select a level of detail for the log from the dropdown list, from 0 - 4. 0 (minimum) will only log critical information, while 4 (maximum) will log everything.
Remote Log	Enable or disable the network camera's remote log function, to send the log to a remote server for archiving. The network camera supports syslog log servers.
Remote Log Server	Enter the IP address or host name of the log server you wish to use.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance **20cm** between the radiator & your body.