

Bottom of rack



I	1U Blanking Panel
J	BDA VHF Uplink Output Combiner 50-189209
K	BDA VHF Downlink Input Splitter 50-189207
L	VHF/UHF System PSU 24v 50-146512
M	2U Blanking Panel
N	3U Blanking Panel

Rack interconnections are on the top of the rack rack

Ant	Connection to RX Antenna
E1	D/L Channel 4 to Cavity Combiner Rack 2
E2	Combined D/L Channel 1 & 2 to Cavity Combiner Rack 2
E3	Combined D/L Channel 3 & 5 to Cavity Combiner Rack 2
G1	Combined U/L Channel 3 & 4 from first stage Cavity Combiner Rack 3
G2	U/L Channel 2 from first stage Cavity Combiner Rack 3
G3	Combined U/L Channel 1 & 5 from first stage Cavity Combiner Rack 3
H1	Combined U/L Channel 3 & 4 to second stage Cavity Combiner Rack 3
H2	U/L Channel 2 to second stage Cavity Combiner Rack 3
H3	Combined U/L Channel 1 & 5 to second stage Cavity Combiner Rack 3