

108Mbps Super-G™
Wireless LAN Router

CAMEO / WLG-2211

User's Manual

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

Europe – EU Declaration of Conformity

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

EN 60 950-1: 2001 +A11: 2004

Safety of Information Technology Equipment

EN50385 : (2002-08)

Product standard to demonstrate the compliance of radio base stations and fixed terminal stations for wireless telecommunication systems with the basic restrictions or the reference levels related to human exposure to radio frequency electromagnetic fields (110MHz - 40 GHz) - General public

EN 300 328 V1.7.1: (2006-10)

Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using spread spectrum modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

EN 301 489-1 V1.6.1: (2005-09)

Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN 301 489-17 V1.2.1 (2002-08)


Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

CE0560!

 Česky [Czech]	<i>[Jméno výrobce]</i> tímto prohlašuje, že tento <i>[typ zařízení]</i> je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
 Dansk [Danish]	Undertegnede <i>[fabrikantens navn]</i> erklærer herved, at følgende udstyr <i>[udstyrets typebetegnelse]</i> overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
 Deutsch [German]	Hiermit erkläre <i>[Name des Herstellers]</i> , dass sich das Gerät <i>[Gerätetyp]</i> in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
 Eesti [Estonian]	Käesolevaga kinnitab <i>[tootja nimi = name of manufacturer]</i> seadme <i>[seadme tüüp = type of equipment]</i> vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
 English	Hereby, <i>[name of manufacturer]</i> , declares that this <i>[type of equipment]</i> is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
 Español [Spanish]	Por medio de la presente <i>[nombre del fabricante]</i> declara que el <i>[clase de equipo]</i> cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
 Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ <i>[name of manufacturer]</i> ΔΗΛΩΝΕΙ ΟΤΙ <i>[type of equipment]</i> ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.
 Français [French]	Par la présente <i>[nom du fabricant]</i> déclare que l'appareil <i>[type d'appareil]</i> est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
 Italiano [Italian]	Con la presente <i>[nome del costruttore]</i> dichiara che questo <i>[tipo di apparecchio]</i> è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo <i>[name of manufacturer / izgatavotāja nosaukums]</i> deklarē, ka <i>[type of equipment / iekārtas tips]</i> atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo <i>[manufacturer name]</i> deklaruoją, kad šis <i>[equipment type]</i> atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
 Nederlands [Dutch]	Hierbij verklaart <i>[naam van de fabrikant]</i> dat het toestel <i>[type van toestel]</i> in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
 Malti [Maltese]	Hawnhekk, <i>[isem tal-manifattur]</i> , jiddikjara li dan <i>[il-mudel tal-prodott]</i> jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.







 Magyar [Hungarian]	Alulírott, <i>[gyártó neve]</i> nyilatkozom, hogy a <i>[... típus]</i> megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
 Polski [Polish]	Niniejszym <i>[nazwa producenta]</i> oświadczam, że <i>[nazwa wyrobu]</i> jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
 Português [Portuguese]	<i>[Nome do fabricante]</i> declara que este <i>[tipo de equipamento]</i> está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
 Slovensko [Slovenian]	<i>[Ime proizvajalca]</i> izjavlja, da je ta <i>[tip opreme]</i> v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]	<i>[Meno výrobcu]</i> týmto vyhlasuje, že <i>[typ zariadenia]</i> spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
 Suomi [Finnish]	<i>[Valmistaja = manufacturer]</i> vakuuttaa täten että <i>[type of equipment = laitteen tyyppimerkintä]</i> tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
 Svenska [Swedish]	Härmed intygar <i>[företag]</i> att denna <i>[utrustningstyp]</i> står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.



TABLE OF CONTENT

ABOUT THIS GUIDE	1
Purpose.....	1
Terms/Usage	1
Overview of this User's Guide.....	1
INTRODUCTION	2
Applications:	2
Features:	3
UNPACKING AND SETUP	4
Unpacking.....	4
Setup	4
HARDWARE INSTALLATION	5
Front Panel	5
Rear Panel	6
Hardware connections.....	7
Connecting the WLAN Router	7
Check the installation.....	7
PC NETWORK TCP/IP SETTING	8
Windows 95/98/ME	8
Windows 2000	9
Windows XP	10
CONFIGURATION	11
Login to the WLAN Router through Wireless LAN.....	11
Login to the WLAN Router	11
Using the Web Browser	11
Setup Wizard.....	12
Advanced configuration.....	21
LAN Setting	21
LAN & DHCP Server	21
WAN.....	22
Password	23
Time	23
Dynamic DNS	24
Wireless	25
Basic.....	25
Authentication.....	27
Advanced	29
Status.....	30
Device Information	30
Log.....	31
Log Setting.....	32
Statistic.....	33
Wireless	33
Routing.....	34
Static	34

Dynamic.....	35
Routing Table.....	35
Access	36
Filters	36
Virtual Server.....	42
Special AP.....	43
DMZ.....	44
Firewall Rule.....	45
Management.....	46
SNMP.....	46
This screen enables you to configure the SNMP.	46
Remote Management	47
Tools	48
Reset.....	48
<i>TECHNICAL SPECIFICATIONS.....</i>	50

ABOUT THIS GUIDE

Congratulations on your purchase of this 108Mbps Super-G™ Wireless LAN Router. This integrated access device combines Internet gateway functions with wireless LAN and Fast Ethernet switch. It provides a complete solution for Internet surfing and office resources sharing, and it is easy to configure and operate for every users.

Purpose

This manual discusses how to install the 108Mbps Super-G™ Wireless LAN Router.

Terms/Usage

In this guide, the term “the WLAN Router” refers to your 108Mbps Super-G™ Wireless LAN Router.

Overview of this User’s Guide

Introduction. Describes the 108Mbps Super-G™ Wireless LAN Router and its features.

Unpacking and Setup. Helps you get started with the basic installation of the 108Mbps Super-G™ Wireless LAN Router.

Identifying External Components. Describes the front panel, rear panel and LED indicators of the 108Mbps Super-G™ Wireless LAN Router.

Connecting the Router. Tells how you can connect the 108Mbps Super-G™ Wireless LAN Router to your xDSL/Cable Modem.

Technical Specifications. Lists the technical (general, physical and environmental, performance and Routers settings) specifications of the 108Mbps Super-G™ Wireless LAN Router.

INTRODUCTION

With the explosive growth of the Internet, accessing information and services at any time, day or night has become a standard requirement for most people. The era of the standalone PC is waning. Networking technology is moving out of the exclusive domain of corporations and into homes with at least two computers.

This integrated access device combines Internet gateway functions with wireless LAN and Fast Ethernet switch. Designed for the business and home, it saves you the cost of installing a separate modem and ISP line for each computer, while providing ready connection for the users, with or without the network wires.

Broadband network access is also gaining ground. However, allowing more than two computers to access the Internet at the same time means less affordable, higher costs. Thus, there is a need to share one legal IP address over a single Internet connection to link the home with the Internet.

The scarcity of IP addresses and using a shared Internet connection through an Internet sharing device can solve high network access costs. All linked computers can make full use of broadband capabilities over such a device.

This device not only comes equipped with a wide range of features, but also can be installed and configured right out of the box. This device supports a simple local area network and Internet access share, offering great cost savings.

The local area network connects up home computers while also allowing any of the computers to access the Internet, share resources, or play online games—the basis of the family computing lifestyle.

Applications:

Broadband Internet access:

Several computers can share one high-speed broadband connection through wireless or wired (WLAN, LAN and WAN-Internet).

Resource sharing:

Share resources such as printers, scanners and other peripherals.

File sharing:

Exchange data, messages, and distribute files thus making good use of hard disk space.

Online gaming:

Through the local area network, online gaming and e-commerce services can be easily setup.

Firewall:

A built-in firewall function — for security and anti-hack system.

Features:

- High speed data transfer rate
- Supports NAT for share 1 IP address to all LAN/WLAN users.
- Supports PPPoE and PPTP protocol for Dial-Up ADSL.
- Supports 64/128 bit WEP Encryption
- Supports WPA-PSK, WPA2-PSK, WPA, WPA2 security
- Supports DHCP Server / Client.
- Supports UPnP (Universal Plug and Play).
- Supports Virtual Server mapping.
- Supports Packet filtering.
- Supports Protocol filtering
- Support Domain filtering
- Supports DNS
- Simple Firewall protection.
- Upgradeable firmware for future function.
- Simple setting using Setup Wizard.
- Easy configuration via WEB Browser.

UNPACKING AND SETUP

This chapter provides unpacking and setup information for the 108Mbps Super-G™ Wireless LAN Router.

Unpacking

Open the box of the WLAN Router and carefully unpack it. The box should contain the following items:

- ◆ One 108Mbps Super-G™ Wireless LAN Router
- ◆ One dipole antenna
- ◆ One external power adapter
- ◆ One CD-ROM with this User's Guide

If any item is found missing or damaged, please contact your local reseller for replacement.

Setup


The setup of the WLAN Router can be performed properly using the following methods:

- ◆ The power outlet should be within 1.82 meters (6 feet) of the Broadband Router.
- ◆ Visually inspect the DC power jack and make sure that it is fully secured to the power adapter.
- ◆ Make sure that there is proper heat dissipation from and adequate ventilation around the Broadband Router. Do not place heavy objects on the Broadband Router.
- ◆ Fix the direction of the antennas. Try to place the Wireless Router in a position that can best cover your wireless network. Normally, the higher you place the antenna, the better the performance will be. The antenna's position enhances the receiving sensitivity.

HARDWARE INSTALLATION

Front Panel

The figure below shows the front panel of the 108Mbps Super-G™ Wireless LAN Router.

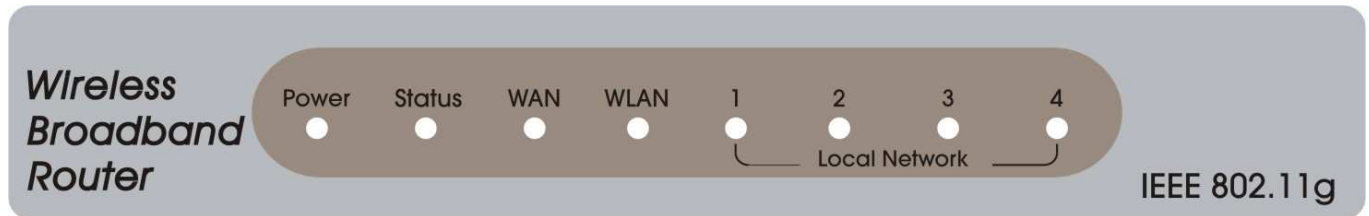

Front Panel

Power

This indicator lights green when the hub is receives power, otherwise it is off.

Status

This indicator blinking green means the WLAN Router is working successful. Otherwise, this indicator always on or off means the function of the WLAN Router is fail.

WAN (Link/ACT)

The indicators light green when the WAN port was connected to an xDSL/Cable modem successfully.

The indicators blink green while the WAN port was transmitting or receiving data on the xDSL/Cable modem.

WLAN (ACT)

This indicator lights green when there are wireless devices connected and transmitting data to the WLAN Router.


Local Network (Link/ACT)

These indicators light green when the LAN ports were connected successfully.

These indicators blinking green while the LAN ports were accessing data.

Rear Panel

The figure below shows the rear panel of the 108Mbps Super-G™ Wireless LAN Router.

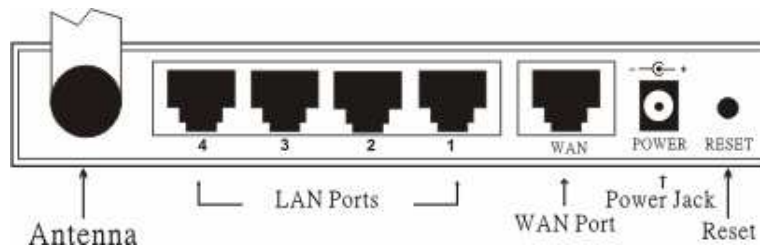

Rear Panel

Antenna

There is one 2dBi Gain Antenna in the rear panel for wireless connection.

LAN (1-4)

Four RJ-45 10/100Mbps Auto-MDIX ports for connecting to either 10Mbps or 100Mbps Ethernet connections.

WAN

In the four port broadband router, there is an RJ-45 10/100Mbps Auto-MDIX port for the WAN that will fit the xDSL/Cable modem's specification need.

DC IN


Plug the power adapter to this power jack

RESET

Use a pin-shape item to push to reset this device to factory default settings. It will be useful too when the manager forgot the password to login, but the setting will be back to default setting.

Hardware connections

Connecting the WLAN Router

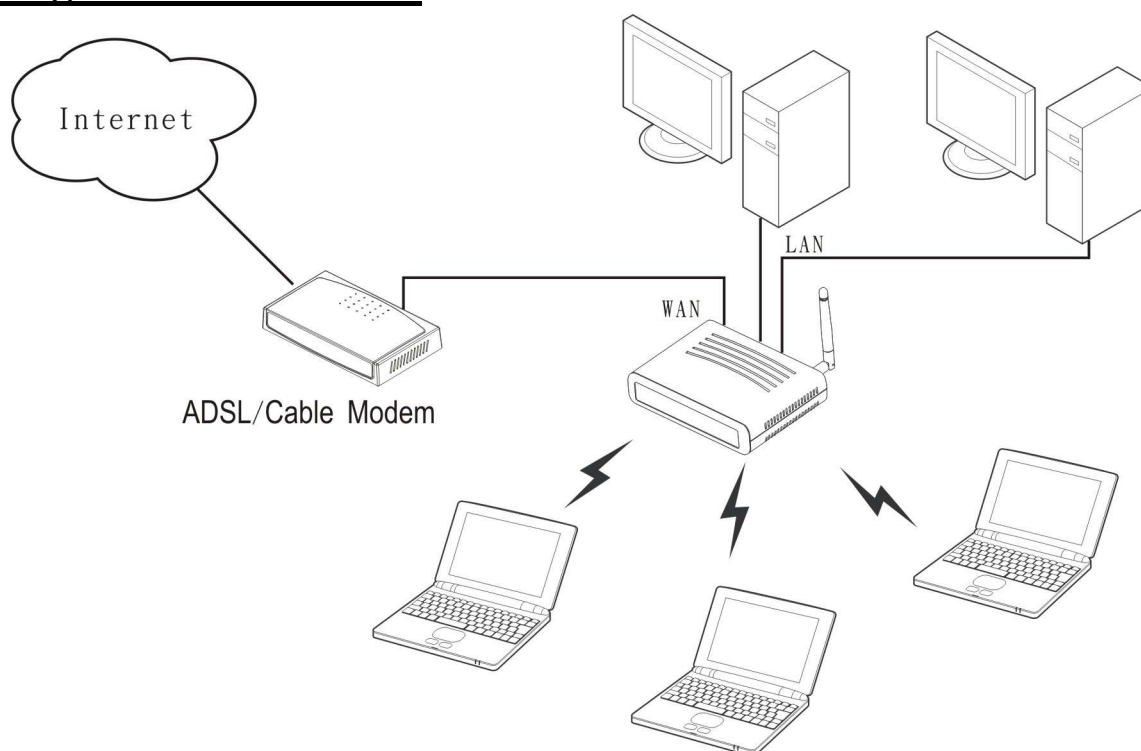

1. Plug in one end of the network cable to the WAN port of the WLAN Router.
2. Plug in the other end of the network cable to the Ethernet port of the xDSL or Cable modem.
3. Use another network cable to connect to the Ethernet card on the computer system; the other end of the cable connects to the LAN port of the WLAN Router. Since the 108Mbps Super-G™ Wireless LAN Router has four ports, you can connect up to four computers directly to the unit. There you do not have to buy a switch to connect these computers since one WLAN Router functions both as a connection-sharing unit and as a switch.

Check the installation

The control LEDs of the WLAN Router are clearly visible and the status of the network link can be seen instantly:


1. With the power source on, once the device is connected to the broadband modem, the Power, System, LAN, WLAN and WAN port LEDs of the WLAN Router will light up indicating a normal status.
2. While the WAN is link up to the ADSL/Cable modem, the WAN port's LED will light up.
3. While the LAN is link up to the computer system, the LAN port's LED will light up.

PC NETWORK TCP/IP SETTING


The network TCP/IP settings differ based on the computer's operating system (Win95/98/ME/NT/2000/XP) and are as follows.

Windows 95/98/ME


1. Click on the “**Network neighborhood**” icon found on the desktop.
2. Click the right mouse button and a context menu will be show.
3. Select “**Properties**” to enter the TCP/IP setting screen.
4. Select “**Obtain an IP address automatically**” on the “**IP address**” field.

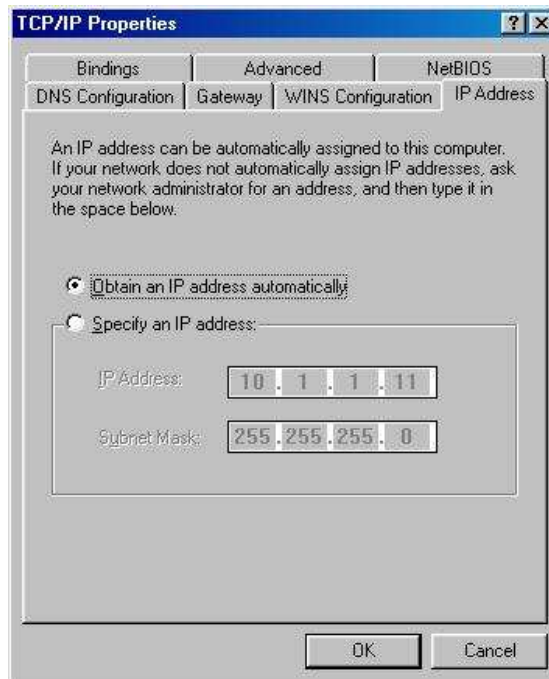

5. Select “**Disable DNS**” in the “**DNS**” field.

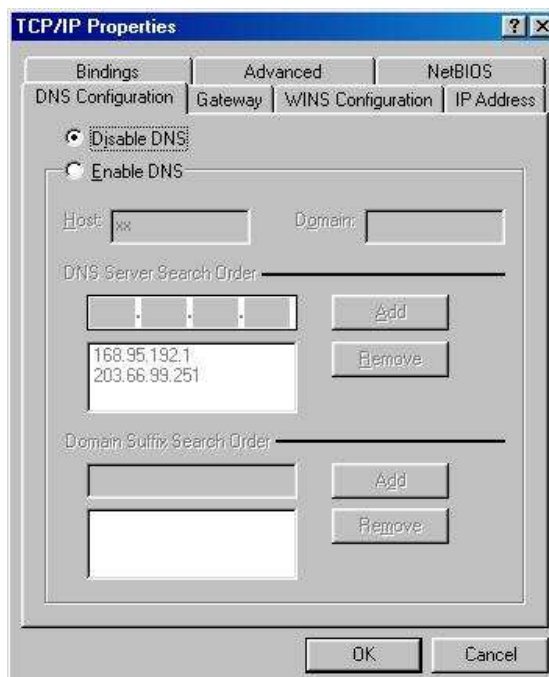


6. Select **“None”** for the **“Gateway address”** field.

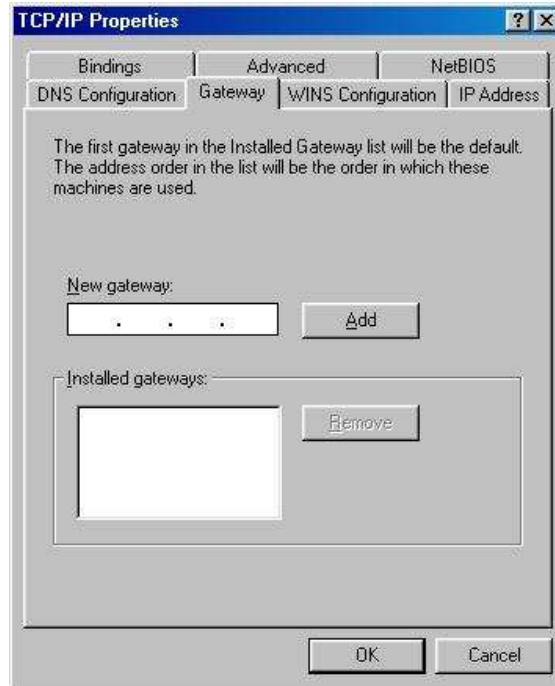

Windows 2000

Double click on the **“My computer”** icon on the desktop. When **“My computer”** window opens, open the **“Control panel”** and then open the **“Network dialup connection”** applet. Double click on the **“Local area network connection”** icon. Select **“Properties”** to enter the TCP/IP setting window.


1. In the **“Local area network status”** window, click on **“Properties.”**
2. In the **“Local area network connection”** window, first select TCP/IP setting and then select **“Properties.”**
3. Set both **“IP address”** and **“DNS”** to **Automatic configuration.**

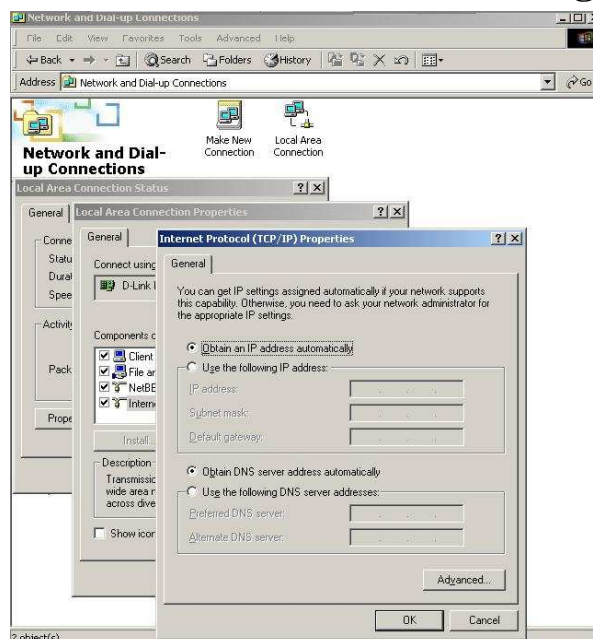

Windows XP

Point the cursor and click the right button on the “My Network Place” icon. Select “properties” to enter the TCP/IP setting window.

1. Set “**IP address**” to “**Obtain an IP address automatically.**”
2. Set “**DNS**” to “**Obtain DNS server address automatically.**”

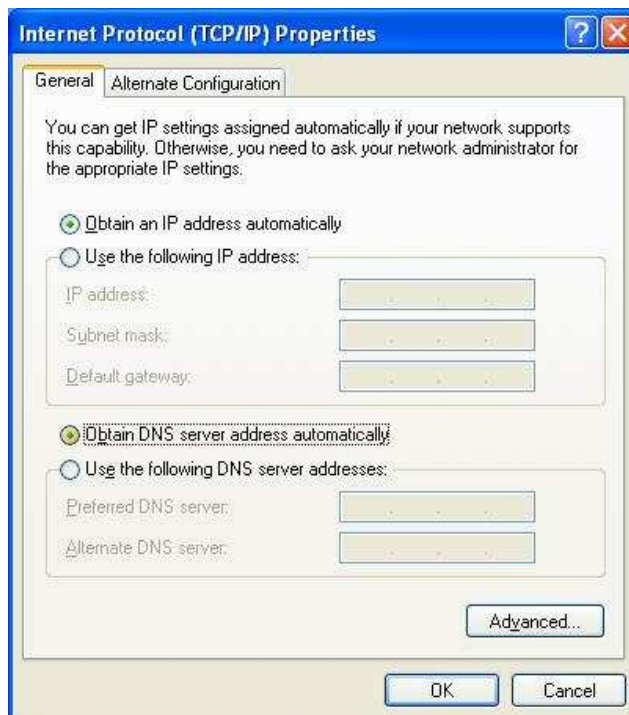

CONFIGURATION

First make sure that the network connections are functioning normally.

This WLAN Router can be configured using Internet Explorer 5.0 or newer web browser versions.

Login to the WLAN Router through Wireless LAN

Before configuring the WLAN Router through WLAN, make sure that the SSID, Channel and the WEP is set properly.

The default setting of the WLAN Router that you will use:

- ✓ SSID: default
 - ✓ Channel: 6
 - ✓ Security: disable
-

Login to the WLAN Router


Before you configure this device, note that when the WLAN Router, make sure the host PC must be set on the **IP subnetwork** that can be accessed by the xDSL/Cable modem. For example, when the default network address of the xDSL/Cable modem Ethernet interface is 192.168.1.x, then the host PC should be set at 192.168.1.xxx (where xxx is a number between 2 and 254), and the default subnet mask is 255.255.255.0.

Using the Web Browser

1. Open Internet Explorer 5.0 or above Internet browser.
2. Enter IP address **<http://192.168.1.1>** (the factory-default IP address setting) to the URL web address location.




3. When the following dialog box appears, enter the user name and password to login to the main configuration window, the default username and password is "***admin***".

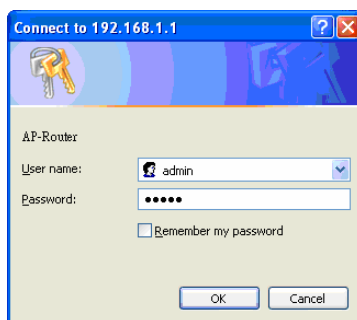

Setup Wizard

Setup wizard is provided as the part of the web configuration utility. User can simply follow the step-by-step process to get the wireless router configuration ready to run in 6 easy steps by clicking on the “Wizard” button on the function menu. The following screen will appear. Please click “Next” to continue.

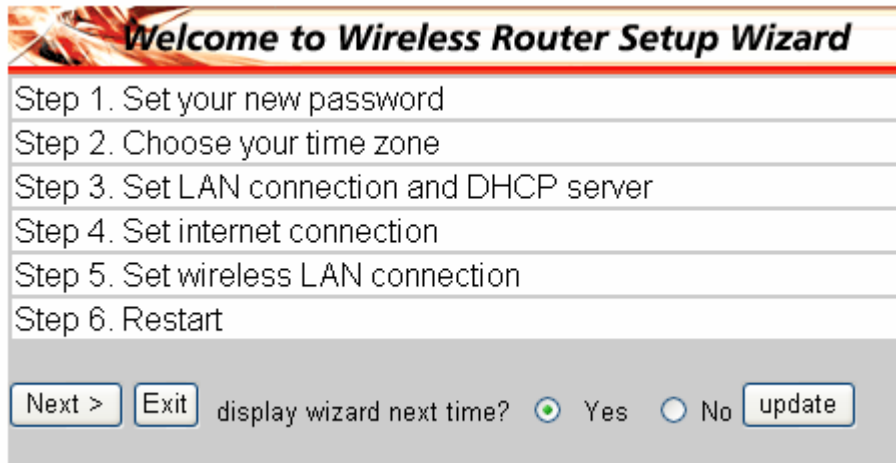


Welcome to Wireless Router Setup Wizard

Step 1. Set your new password
Step 2. Choose your time zone
Step 3. Set LAN connection and DHCP server
Step 4. Set internet connection
Step 5. Set wireless LAN connection
Step 6. Restart

display wizard next time? Yes No

Step 1: Set up new Password

User can change the password and then click “Next” to continue.

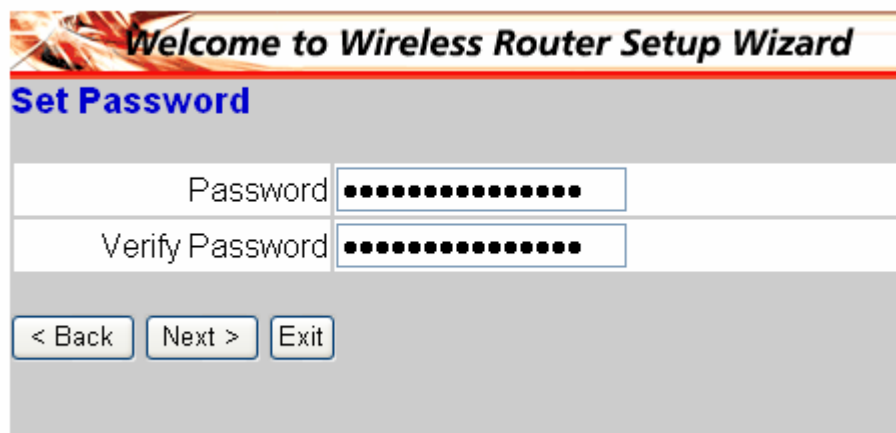

Welcome to Wireless Router Setup Wizard

Set Password

Password

Verify Password

Step 2: Choose time zone

Select the time zone from the drop down list. Please click “Next” to continue.



Welcome to Wireless Router Setup Wizard


Choose Time Zone

(GMT-08:00) Pacific Time (US & Canada) ▼

< Back Next > Exit

Step 3: Set LAN connection and DHCP server

Set user’s IP address and mask. The default IP is 192.168.1.1. If user likes to enable DHCP, please click “Enabled”. DHCP enabled is able to automatically assign IP addresses. Please assign the range of IP addresses in the fields of “Range start” and “Range end”. Please click “Next” to continue.

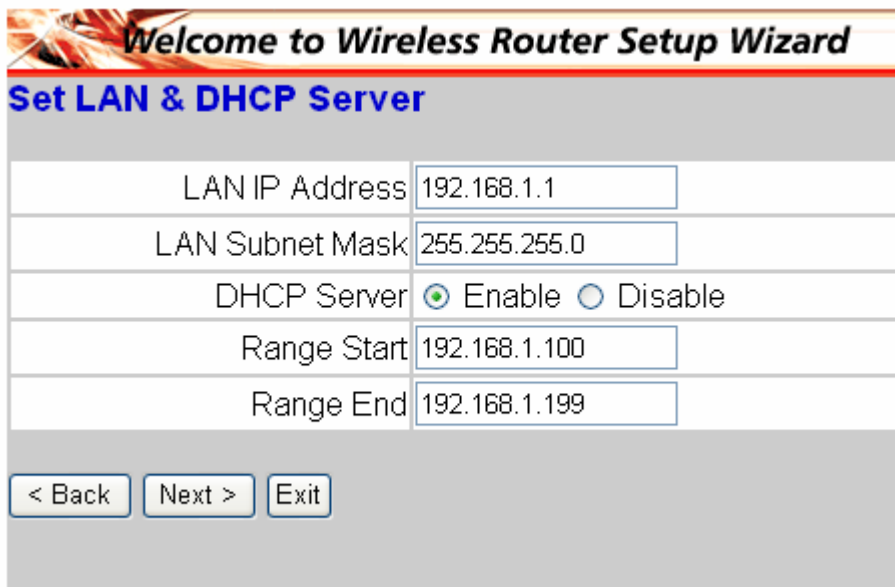

Welcome to Wireless Router Setup Wizard

Set LAN & DHCP Server

LAN IP Address	192.168.1.1
LAN Subnet Mask	255.255.255.0
DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Range Start	192.168.1.100
Range End	192.168.1.199


< Back Next > Exit

Step 4: Set Internet connection

Select how the router will set up the Internet connection: Obtained IP automatically; Fixed IP address; PPPoE to obtain IP automatically; PPPoE with a fixed IP address; PPTP.

Obtain IP automatically (DHCP client):

If user has enabled DHCP server, choose "Obtain IP automatically (DHCP client)" to have the WLAN Router assign IP addresses automatically.

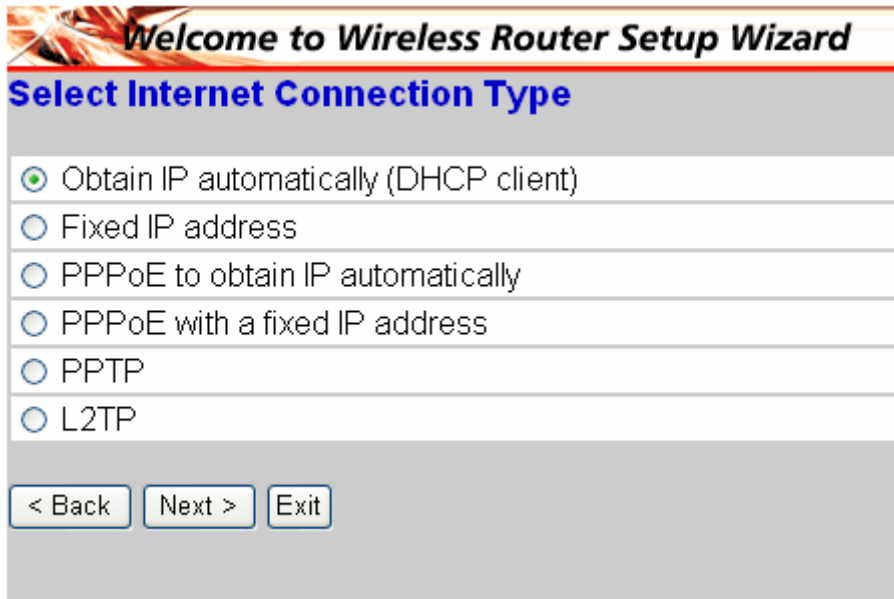


Welcome to Wireless Router Setup Wizard

Select Internet Connection Type

- Obtain IP automatically (DHCP client)
- Fixed IP address
- PPPoE to obtain IP automatically
- PPPoE with a fixed IP address
- PPTP
- L2TP

< Back Next > Exit

Fixed IP Address:

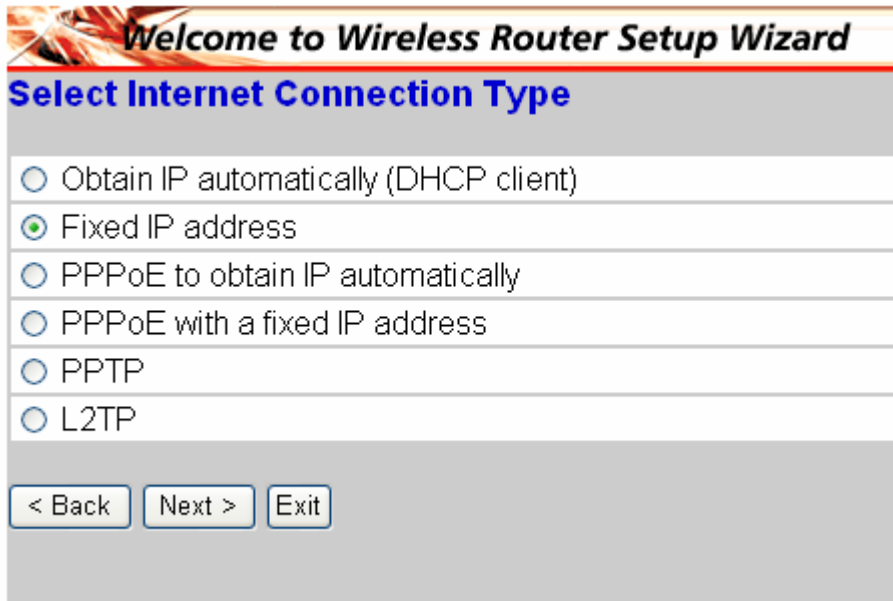


Welcome to Wireless Router Setup Wizard

Select Internet Connection Type

- Obtain IP automatically (DHCP client)
- Fixed IP address
- PPPoE to obtain IP automatically
- PPPoE with a fixed IP address
- PPTP
- L2TP

< Back Next > Exit

If the Internet Service Providers assign a fixed IP address, choose this option and enter the assigned IP address, subnet mask, gateway IP and DNS IP addresses for the WLAN Router.

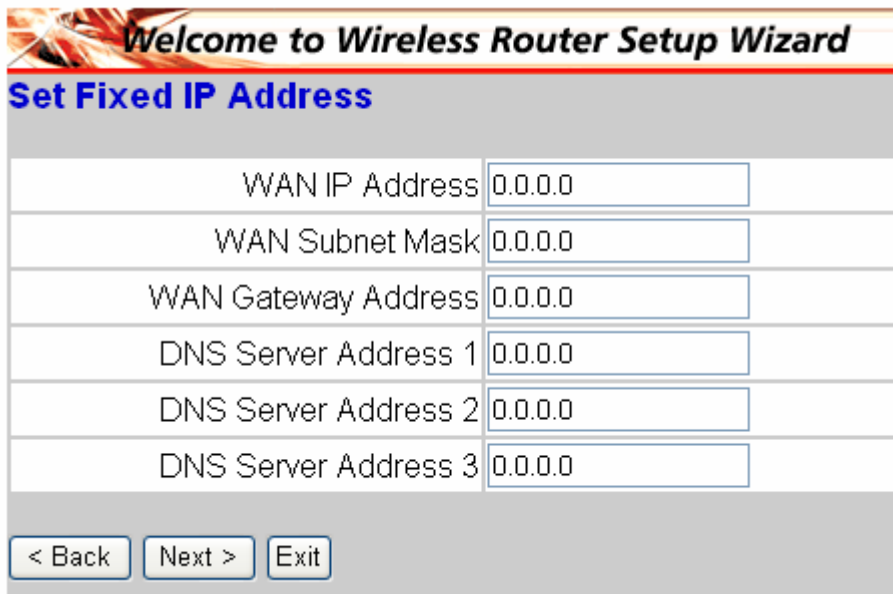


Welcome to Wireless Router Setup Wizard

Set Fixed IP Address

WAN IP Address	0.0.0.0
WAN Subnet Mask	0.0.0.0
WAN Gateway Address	0.0.0.0
DNS Server Address 1	0.0.0.0
DNS Server Address 2	0.0.0.0
DNS Server Address 3	0.0.0.0

< Back Next > Exit

PPPoE to obtain IP automatically:

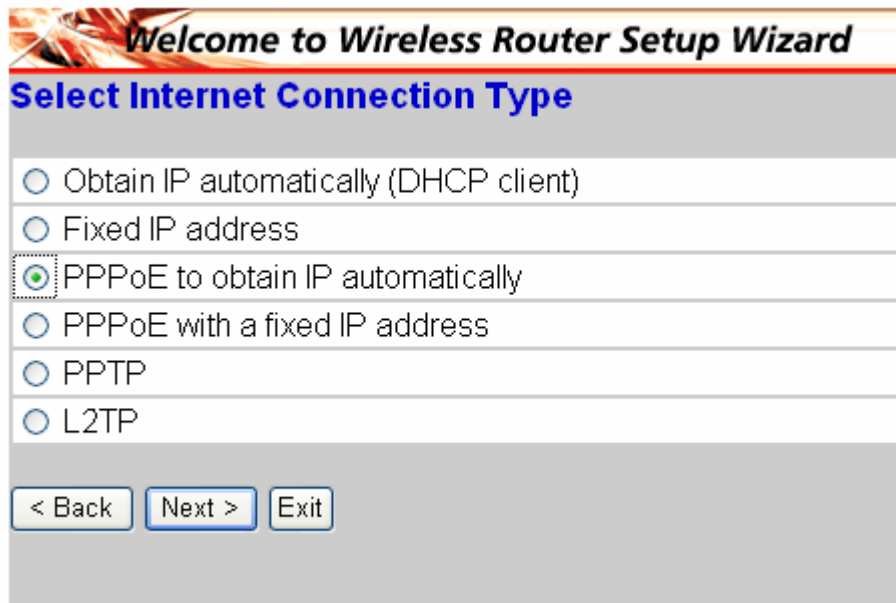


Welcome to Wireless Router Setup Wizard

Select Internet Connection Type

- Obtain IP automatically (DHCP client)
- Fixed IP address
- PPPoE to obtain IP automatically
- PPPoE with a fixed IP address
- PPTP
- L2TP

< Back Next > Exit

If connected to the Internet using a PPPoE (Dial-up xDSL) Modem, the ISP will provide a Password and User Name, and then the ISP uses PPPoE. Choose this option and enter the required information.

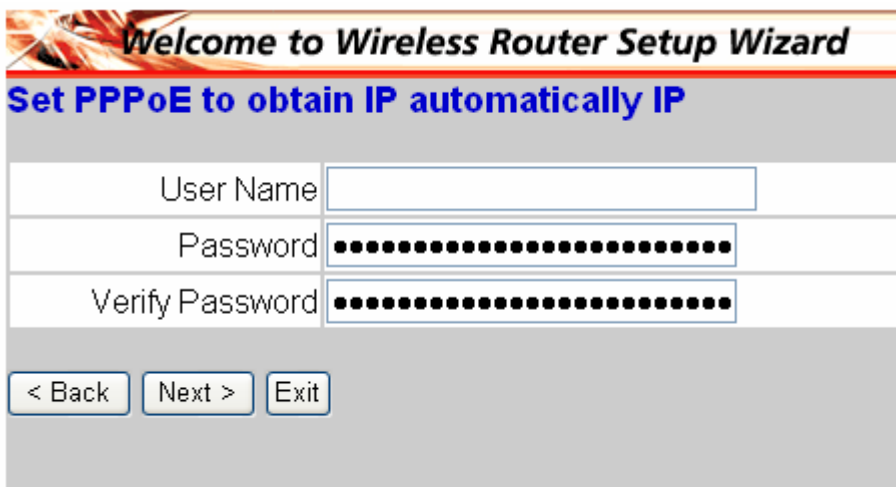


Welcome to Wireless Router Setup Wizard

Set PPPoE to obtain IP automatically IP

User Name	<input type="text"/>
Password	<input type="password"/>
Verify Password	<input type="password"/>

< Back Next > Exit

PPPoE with a fixed IP address:

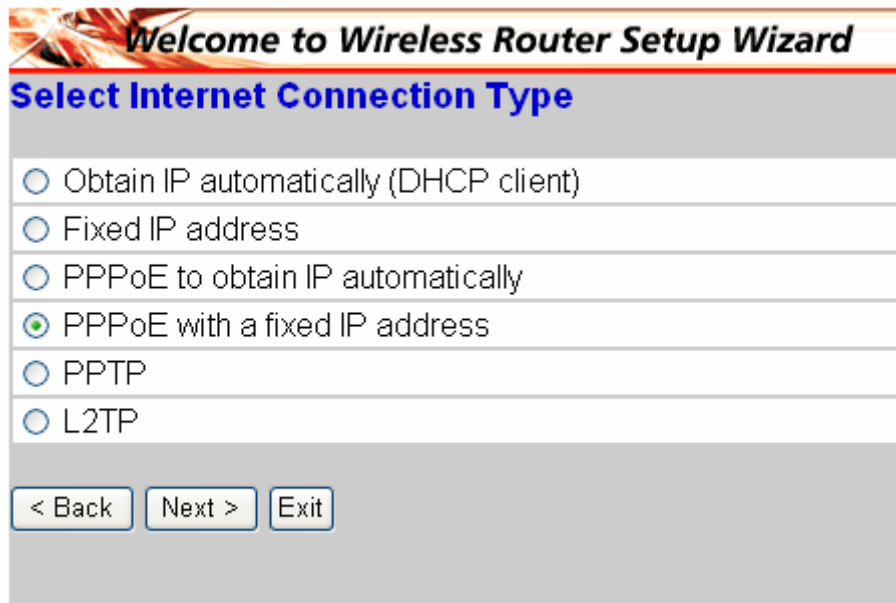


Welcome to Wireless Router Setup Wizard

Select Internet Connection Type

- Obtain IP automatically (DHCP client)
- Fixed IP address
- PPPoE to obtain IP automatically
- PPPoE with a fixed IP address
- PPTP
- L2TP

< Back Next > Exit

If connected to the Internet using a PPPoE (Dial-up xDSL) Modem, the ISP will provide a Password, User Name and a Fixed IP Address, choose this option and enter the required information.

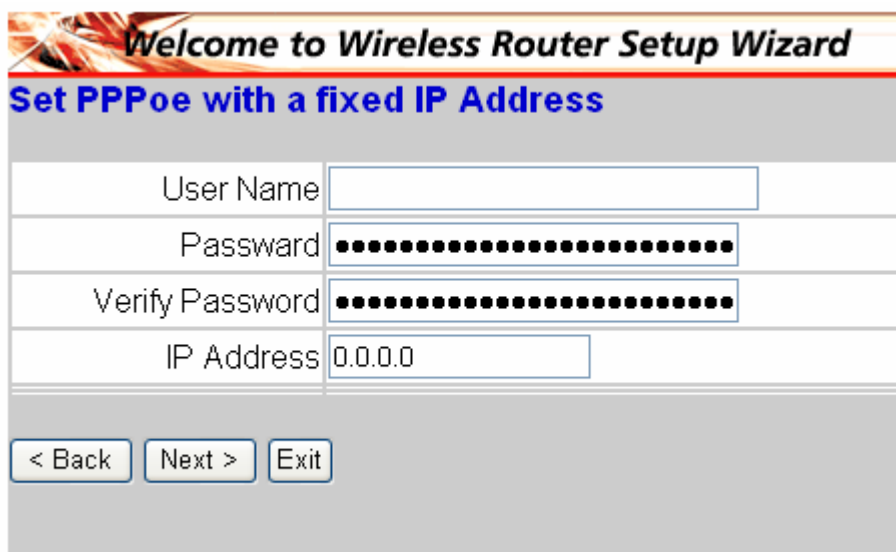


Welcome to Wireless Router Setup Wizard

Set PPPoe with a fixed IP Address

User Name	<input type="text"/>
Password	<input type="password"/>
Verify Password	<input type="password"/>
IP Address	<input type="text" value="0.0.0.0"/>

< Back Next > Exit

PPTP:

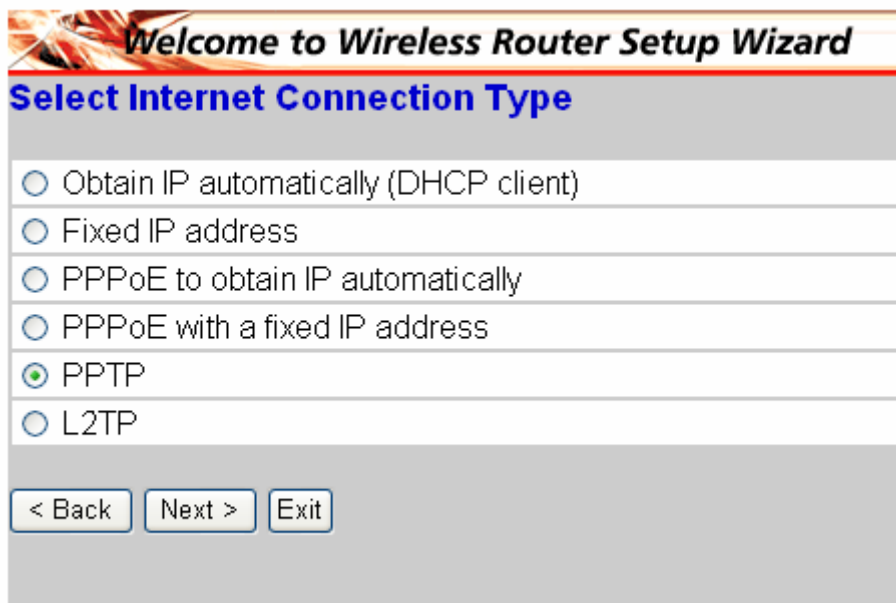


Welcome to Wireless Router Setup Wizard

Select Internet Connection Type

- Obtain IP automatically (DHCP client)
- Fixed IP address
- PPPoE to obtain IP automatically
- PPPoE with a fixed IP address
- PPTP
- L2TP

< Back Next > Exit

If connected to the Internet using a (PPTP) xDSL Modem, enter the your IP Address, Subnet Mask, Gateway, Server IP, PPTP Account and PPTP Password, Your Subnet Mask required by your ISP in the appropriate fields. If your ISP has provided you with a Connection ID, enter it in the Connection ID field, otherwise, leave it zero.

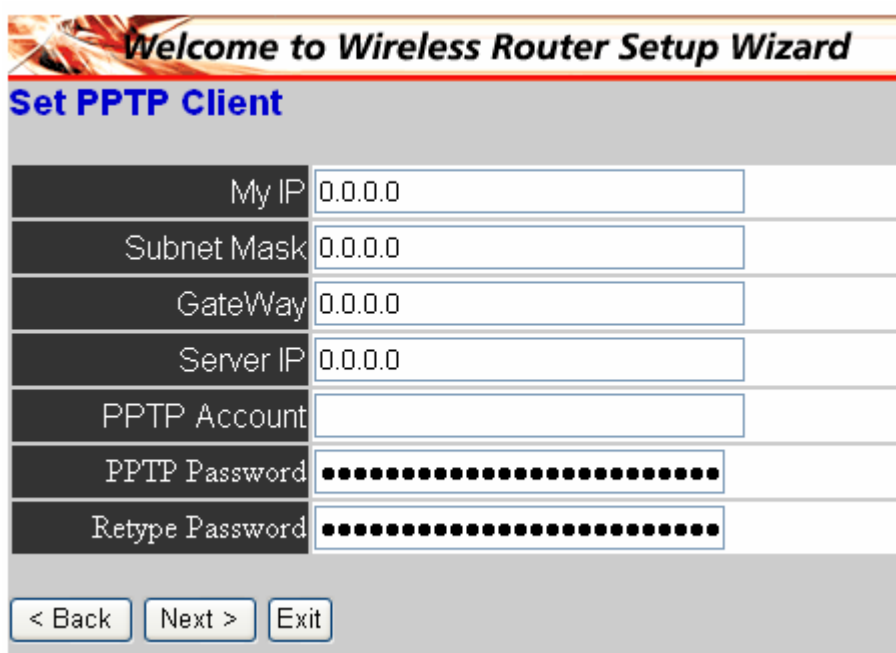


Welcome to Wireless Router Setup Wizard

Set PPTP Client

My IP	0.0.0.0
Subnet Mask	0.0.0.0
GateWay	0.0.0.0
Server IP	0.0.0.0
PPTP Account	
PPTP Password
Retype Password

< Back Next > Exit

L2TP:

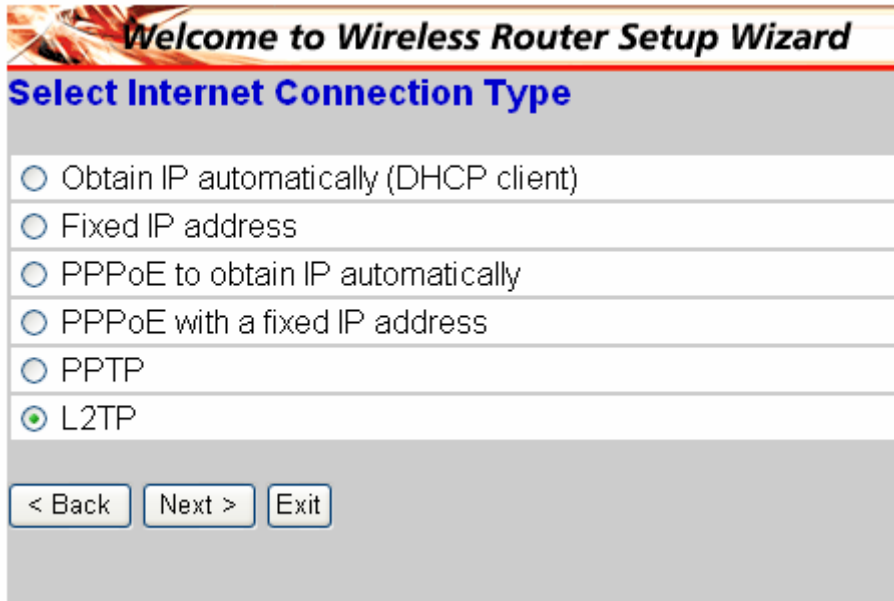


Welcome to Wireless Router Setup Wizard

Select Internet Connection Type

- Obtain IP automatically (DHCP client)
- Fixed IP address
- PPPoE to obtain IP automatically
- PPPoE with a fixed IP address
- PPTP
- L2TP

< Back Next > Exit

If connected to the Internet using a L2TP (Dial-up xDSL) Modem, the ISP will provide a Server IP, Account and Password. Choose this option and enter the required information.

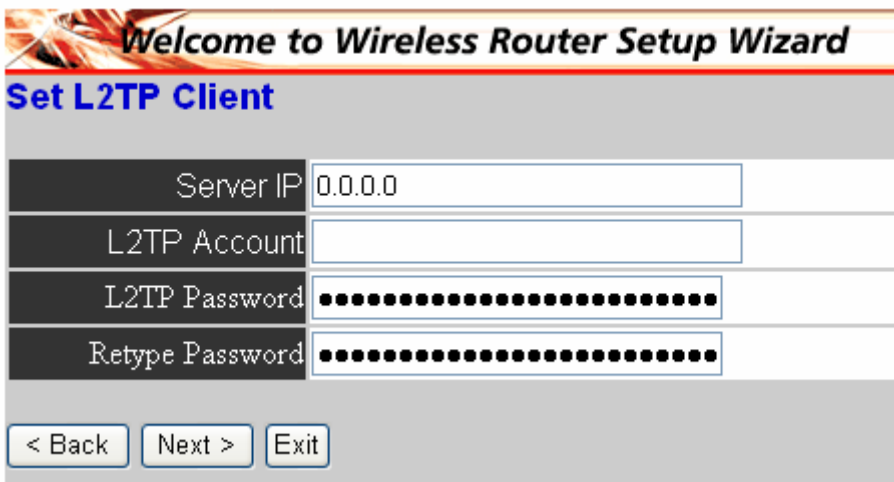

Welcome to Wireless Router Setup Wizard


Set L2TP Client

Server IP	<input type="text" value="0.0.0.0"/>
L2TP Account	<input type="text"/>
L2TP Password	<input type="password"/>
Retype Password	<input type="password"/>

< Back Next > Exit

Step 5: Set Wireless LAN connection


Click “Enable” to enable wireless LAN. If user enables the wireless LAN, type the SSID in the text box and select a communications channel. The SSID and channel must be the same as wireless devices attempting communication to the router.

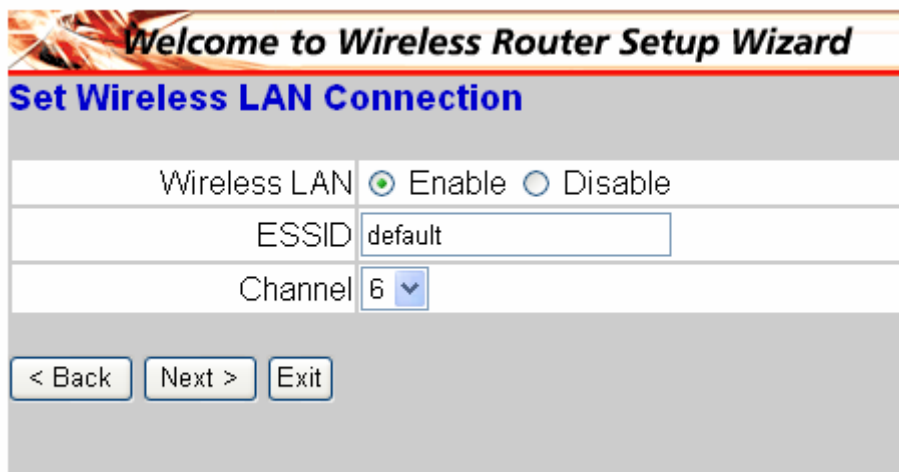

The screenshot shows a web-based configuration interface titled "Welcome to Wireless Router Setup Wizard" with a sub-header "Set Wireless LAN Connection". It features three input fields: "Wireless LAN" with radio buttons for "Enable" (selected) and "Disable"; "ESSID" with a text box containing "default"; and "Channel" with a dropdown menu showing "6". At the bottom, there are three buttons: "< Back", "Next >", and "Exit".

Step 6: Setup completed

The Setup wizard is now completed. The new settings will be effective after the Wireless router restarted. Please click “Restart” to reboot the router. If user does not want to make any changes, please click “Exit” to quit without any changes. User also can go back to modify the setting by clicking “Back”.

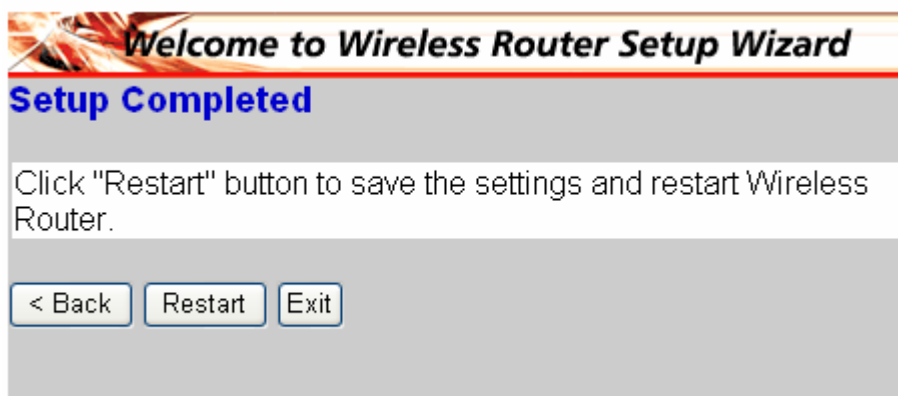

The screenshot shows the "Setup Completed" screen of the "Welcome to Wireless Router Setup Wizard". It contains a text instruction: "Click 'Restart' button to save the settings and restart Wireless Router." Below the text are three buttons: "< Back", "Restart", and "Exit".

Advanced configuration

LAN Setting

The screen enables user to configure the LAN & DHCP Server, set WAN parameters, create Administrator and User passwords, and set the local time, time zone, and dynamic DNS.

LAN & DHCP Server

This page leads to set LAN and DHCP properties, such as the host name, IP address, subnet mask, and domain name. LAN and DHCP profiles are listed in the DHCP table at the bottom of the screen.

The screenshot shows the configuration page for a Wireless Router. The page title is "Wireless Router" and "108 Mbps". The navigation menu includes: LAN Setting (selected), Wireless, Status, Routing, Access, Management, Tools, and Wizard. The main content area is titled "LAN&DHCP server" and contains the following settings:

Host Name	AP-Router
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP Server	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
Start IP	192.168.1.100
End IP	192.168.1.199
Domain Name	
Lease Time	1 Week

Buttons: Cancel, Apply

Host Name	IP Address	MAC Address
-----------	------------	-------------

Host Name: Type the host name in the text box. The host name is required by some ISPs. The default host name is "AP-Router."

IP Address: This is the IP address of the router. The default IP address is 192.168.1.1.

Subnet Mask: Type the subnet mask for the router in the text box. The default subnet mask is 255.255.255.0.

DHCP Server: Enables the DHCP server to allow the router to automatically assign IP addresses to devices connecting to the LAN. DHCP is enabled by default. All DHCP client computers are listed in the table at the bottom of the screen, providing the host name, IP address, and MAC address of the client.

Start IP: Type an IP address to serve as the start of the IP range that DHCP will use to assign IP addresses to all LAN devices connected to the router.

End IP: Type an IP address to serve as the end of the IP range that DHCP will use to assign IP addresses to all LAN devices connected to the router.

Domain Name: Type the local domain name of the network in the text box. This item is optional.

WAN

This screen enables user to set up the router WAN connection, specify the IP address for the WAN, add DNS numbers, and enter the MAC address.

The screenshot shows the WAN configuration interface for a wireless router. The page has a header with 'Wireless Router' and '108 Mbps'. A navigation bar contains 'LAN&DHCP server', 'WAN', 'Password', 'Time', 'Dynamic DNS', and a 'HELP' button. On the left is a sidebar menu with 'LAN Setting', 'Wireless', 'Status', 'Routing', 'Access', 'Management', 'Tools', and 'Wizard'. The main content area is titled 'WAN' and includes a 'Connection Type' dropdown menu set to 'DHCP Client or Fixed IP'. Below this are two radio buttons: 'Obtain IP Automatically' (selected) and 'Specify IP'. To the right of these are input fields for 'IP Address', 'Subnet Mask', and 'Default Gateway', all containing '0.0.0.0'. Further down are three 'DNS' fields, each containing '0.0.0.0'. At the bottom is a 'MAC Address' field with the value '00 - 10 - ab - cd - 12 - 35' and a 'Clone MAC Address' button. 'Cancel' and 'Apply' buttons are located at the very bottom of the form.

Connection Type: Select the connection type, either DHCP client, Fixed IP, PPPoE, PPTP or L2TP from the drop-down list.

WAN IP: Select whether user wants to specify an IP address manually, or want DHCP to obtain an IP address automatically. When Specify IP is selected, type the IP address, subnet mask, and default gateway in the text boxes. User's ISP will provide with this information.

DNS 1/2/3: Type up to three DNS numbers in the text boxes. User's ISP will provide with this information.

MAC Address: If required by user's ISP, type the MAC address of the router WAN interface in this field.

Password

This screen enables user to set administrative and user passwords. These passwords are used to gain access to the router interface.



The screenshot shows the 'Password' configuration page in the 'Wireless Router' interface. The page has a navigation menu on the left with options: LAN Setting (selected), Wireless, Status, Routing, Access, Management, Tools, and Wizard. The main content area is titled '108 Mbps' and has a breadcrumb trail: LAN&DHCP server > WAN > Password > Time > Dynamic DNS. There are two sections for password configuration: 'Administrator (The login name is "admin")' and 'User (The login name is "user")'. Each section has 'New Password' and 'Confirm Password' fields. At the bottom, there are 'Cancel' and 'Apply' buttons.

Administrator: Type the password the Administrator will use to log in to the system. The password must be typed again for confirmation. The authority if Administrator allow user configuration of the WLAN Router.

User: Type the password the User will use to log in to the system. The password must be typed again for confirmation. The authority if User only allow user viewing current configuration of the WLAN Router.

Time

This screen enables user to set the time and date for the router's real-time clock, select properly time zone, and enable or disable daylight saving.



The screenshot shows the 'Time' configuration page in the 'Wireless Router' interface. The page has the same navigation menu as the Password page. The main content area is titled '108 Mbps' and has a breadcrumb trail: LAN&DHCP server > WAN > Password > Time > Dynamic DNS. The page displays the following settings: 'Local Time' (Apr/01/2002 02:52:40), 'Time Zone' (GMT-08:00 Pacific Time (US & Canada)), 'Synchronize the clock with' (Automatic), 'Default NTP server' (empty field), 'Set the time' (Year: 2002, Month: Apr, Day: 01, Hour: 02, Minute: 52, Second: 40, with a 'Set Time' button), and 'Daylight Saving' (radio buttons for Enabled and Disabled, with 'Disabled' selected, and Start/End dates: Start Jan 01, End Jan 01). At the bottom, there are 'Cancel' and 'Apply' buttons.

Local Time: Displays the local time and date.

Time Zone: Select the time zone from the drop-down list.

Synchronize the clock with: Select the clock adjustment method from the drop-down list.

Automatic: Automatically adjust the system time from NTP Server.

Manual: Manually adjust the system time when you press the *Set Time* button.

Default NTP server: The Simple Network Time Protocol (SNTP) server allows the WLAN Router to synchronize the system clock to the global Internet through the SNTP Server. Specify the NTP domain name or IP address in the text box.

Set the time: Manually setting the WLAN Router system time, press the *Set Time* button to update the system time.

Daylight Saving: Enables user to enable or disable daylight saving time. When enabled, select the start and end date for daylight saving time.

Dynamic DNS

This allows the DDNS server what your current IP address is when you are on-line. You firstly need to register your preferred DNS on the DDNS providers. Then, please select the DDNS address in the Server Address and fill the related information in the below fields: Host Name, User Name and Password.


The screenshot shows the configuration interface for Dynamic DNS on a wireless router. The page has a header with 'Wireless Router' and '108 Mbps'. A breadcrumb trail indicates the current location: LAN&DHCP server > WAN > Password > Time > Dynamic DNS. The 'Dynamic DNS' section is currently selected. It features a 'DDNS' toggle set to 'Disabled'. Below the toggle are four input fields: 'Server Address' (a dropdown menu with 'DynDns.org', 'EasyDns.com', and 'No-IP.com' as options), 'Host Name', 'User Name', and 'Password'. At the bottom of the form are 'Cancel' and 'Apply' buttons. A 'HELP' button is also visible in the top right corner of the configuration area.

Wireless

This section enables user to configuration the wireless communications parameters for the WLAN Router.

Basic

This page allow user to enable and disable the wireless LAN function, create a SSID, and select the channel for wireless communications.

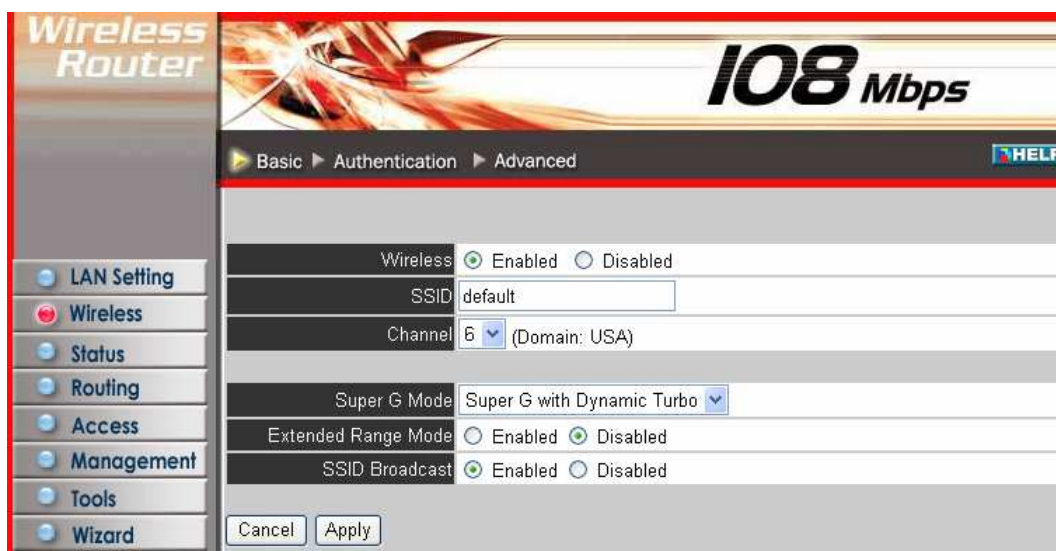

Enable/Disable: Enables and disables wireless LAN via the WLAN Router.

SSID: Type an SSID in the text box. The SSID of any wireless device must match the SSID typed here in order for the wireless device to access the LAN and WAN via the router.

Channel: Select a transmission channel for wireless communications. The channel of any wireless device must match the channel selected here in order for the wireless device to access the LAN and WAN via the router.(You could only choose 1~11 channel when the domain is FCC; You could only choose 1~13 channel when the domain is ETSI)

Super G mode: From the drop list, if you like to use Super-G™ to enhance the speed, there are three options on Super-G™ mode: *Super G without turbo*; *Super G with Dynamic turbo* and *Super G with Static turbo*. The turbo mode indicates the combination of two channels to enhance the throughput. Super G without turbo indicates that it is on Super G mode without the channel's combination. Dynamic turbo is able to automatically detect if any 'Super-G™ based' product is available. If no, the connection is via 'normal' G. Static turbo means it will not go back to 'normal' G once it starts.

Extended Range Mode: Enable and disable wireless LAN via router.

SSID Broadcast: While SSID Broadcast is enabled, all wireless clients will be able to communicate with the WLAN Router. For secure purpose, user may want to

disable SSID broadcast to allow only those wireless clients with the SSID to communicate with the WLAN Router.


Authentication

The authentication type default is set to disable. There are four options: Disable, WEP, WPA, and WPA2.



Authentication Type: The authentication type default is set to open system. There are three options: Open System; Shared Key, WPA and WPA-PKS.

WEP Encryption

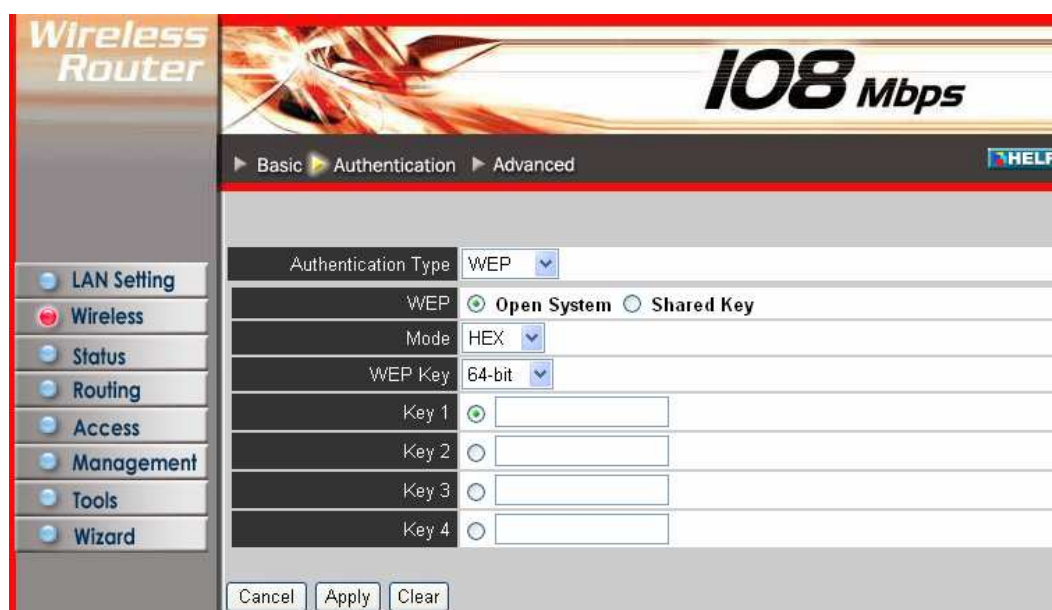


WEP: Open System allows public access to the router via wireless communications; Shared Key requires the user to set a WEP key to exchange data with other wireless clients that have the same WEP key..

Mode: Select the key mode in ASCII or HEX

WEP Key: Select the level of encryption from the drop-down list. The router supports, 64- and 128-bit encryption.

Key 1 ~ Key 4: Enables user to create an encryption scheme for Wireless LAN transmissions. Manually enter a set of values for each key. Select a key to use by clicking the radio button next to the key. Click **“Clear”** to erase key values.

WPA/WPA2 Security

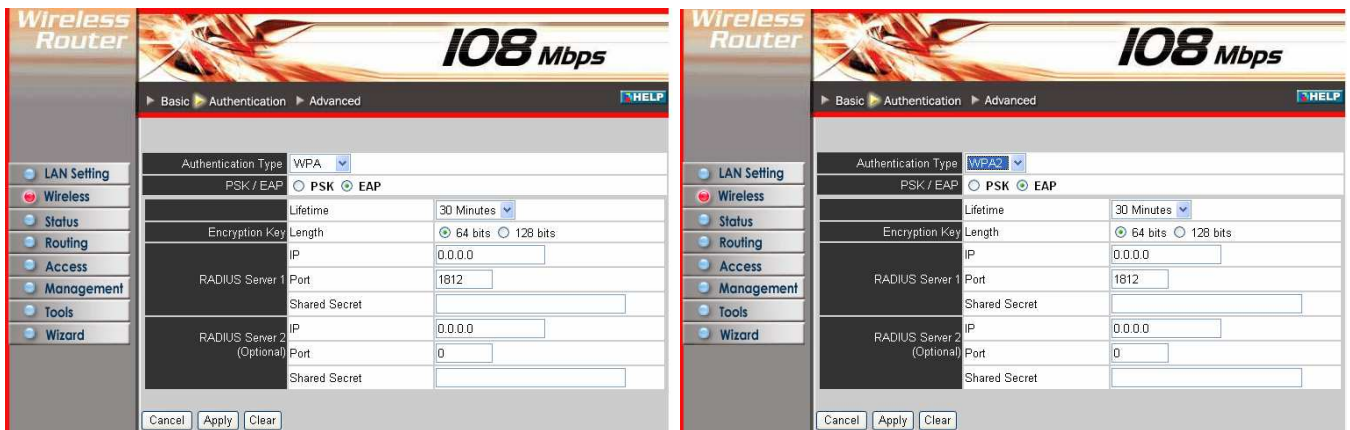

If WPA or WPA2 is selected, the below screen is shown. Please set the length of the encryption key and the parameters for the RADIUS server.

Lifetime: Select the Lifetime of the Encryption Key from 5 Minutes to 1 Day. As soon as the lifetime of the Encryption Key is over, the Encryption Key will be renewed by the Radius server.


Encryption Key: Select the Encryption Key Length Size ranging from 64 to 128 Bits that you would like to use.

RADIUS Server:

1. Enter the IP address, Port used and Shared Secret by the Primary Radius Server.
2. Enter the IP address, Port used and Shared Secret by the Secondary Radius Server.

WPA-PSK/WPA2-PSK Security

If WPA-PSK or WPA2-PSK is selected, please set the PSK key in the pass phrase field. The length should be 8 characters at least.

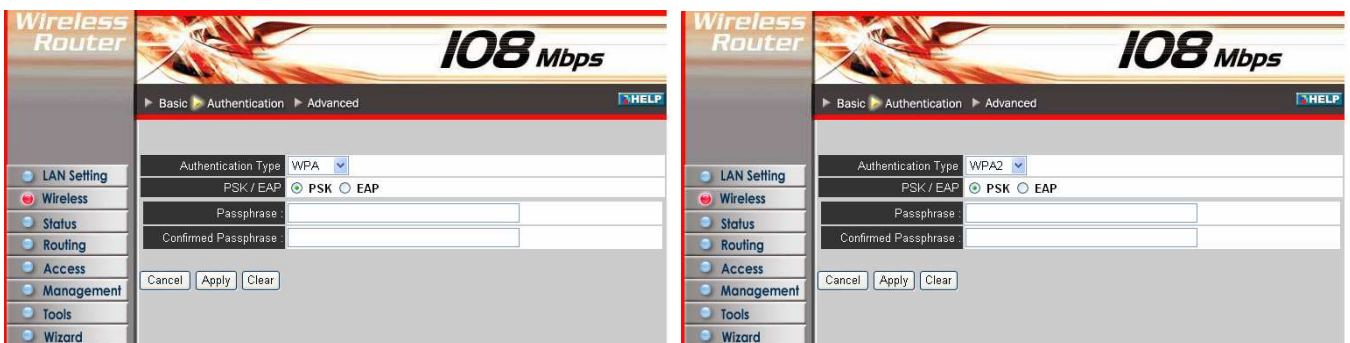

Advanced

This screen enables user to configure advanced wireless functions.

Setting	Value	Default/Range
Beacon Interval	100	(default: 100 msec, range: 20~1000)
RTS Threshold	2346	(default: 2346, range: 1500~2346)
Fragmentation Threshold	2346	(default: 2346, range: 256~2346, even number only)
DTIM Interval	1	(default: 1, range: 1~255)
TX Rates (Mbps)	Auto	
11g only mode	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Antenna transmit power	full	

Beacon Interval: Type the beacon interval in the text box. User can specify a value from 1 to 1000. The default beacon interval is 100.

RTS Threshold: Type the RTS (Request-To-Send) threshold in the text box. This value stabilizes data flow. If data flow is irregular, choose values between 256 and 2346 until data flow is normalized.

Fragmentation Threshold: Type the fragmentation threshold in the text box. If packet transfer error rates are high, choose values between 256 and 2346 until packet transfer rates are minimized. (NOTE: set this fragmentation threshold value may diminish system performance.)

DTIM Interval: Type a DTIM (Delivery Traffic Indication Message) interval in the text box. User can specify a value between 1 and 65535. The default value is 1.

TX Rates (Mbps): Select one of the wireless communications transfer rates, measured in megabytes per second, based upon the speed of wireless adapters connected to the WLAN.

11g only mode: If selected the Enable, only allow 802.11g WLAN client communicate with this WLAN Router.

Antenna Transmit Power: Adjust the power of the antenna transmission by selecting from the dropping list for full, half (-3dB), quarter (-6dB), eighth (-9dB) or min.

Note: Transmit power is regulated by international standard and users are forbidden to change its maximum limit.

Status

This selection enables user to view the status of the router LAN, WAN and Wireless connections, and view logs and statistics pertaining to connections and packet transfers.

Device Information

This screen enables user to view the router LAN, Wireless and WAN configuration.

The screenshot shows the status page of a Wireless Router. The page has a header with 'Wireless Router' and '108 Mbps'. Below the header is a navigation menu with 'Device information', 'Log', 'Log Setting', 'Statistic', and 'Wireless'. A 'HELP' button is also present. The main content area displays the 'Firmware Version: 4.00 , 14 Dec 2005'. The configuration is organized into three sections: LAN, Wireless, and WAN. The LAN section shows MAC Address (00-10-ab-cd-12-34), IP Address (192.168.1.1), Subnet Mask (255.255.255.0), and DHCP Server (Enabled) with a link to 'DHCP Table'. The Wireless section shows Connection (802.11g AP Enable), ESSID (default), Channel (6), and Authentication (Disabled). The WAN section shows MAC Address (00-10-ab-cd-12-35), Connection (DHCP Client Disconnected) with 'DHCP Release' and 'DHCP Renew' buttons, IP (0.0.0.0), Subnet Mask (0.0.0.0), Default Gateway (0.0.0.0), and DNS.

LAN	
MAC Address	00-10-ab-cd-12-34
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP Server	Enabled DHCP Table

Wireless	
Connection	802.11g AP Enable
ESSID	default
Channel	6
Authentication	Disabled

WAN	
MAC Address	00-10-ab-cd-12-35
Connection	DHCP Client Disconnected <input type="button" value="DHCP Release"/> <input type="button" value="DHCP Renew"/>
IP	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
DNS	

Firmware Version: Displays the latest build of the router firmware interface. After updating the firmware in Tools - Firmware, check this to ensure that the firmware was successfully updated.

LAN: This section displays the LAN interface configuration including the MAC address, IP address, subnet mask, and DHCP server status. Click “DHCP Table” to view a list of client stations currently connected to the router LAN interface.

Wireless: This section displays the wireless configuration information, including the MAC address, the Connection status, SSID, Channel and Authentication type.

WAN: This section displays the WAN interface configuration including the MAC address, Connection status, DHCP client status, IP address, Subnet mask, Default gateway, and DNS.

Click “*DHCP Release*” to release all IP addresses assigned to client stations connected to the WAN via the router. Click “*DHCP Renew*” to reassign IP addresses to client stations connected to the WAN.

Log

This screen enables user to view a running log of router system statistics, events, and activities. The log displays up to 200 entries. Older entries are overwritten by new entries. The Log screen commands are as follows:

Click “*First Page*” to view the first page of the log

Click “*Last Page*” to view the final page of the log

Click “*Previous Page*” to view the page just before the current page

Click “*Next Page*” to view the page just after the current page

Click “*Clear Log*” to delete the contents of the log and begin a new log

Click “*Refresh*” to renew log statistics

Time	Message	Source	Destination	Note
Apr/11/2006 00:50:07	DHCP Request success			172.21.81.178
Apr/11/2006 00:50:07	DHCP Request			172.21.81.178
Apr/11/2006 00:50:06	DHCP Discover			
Apr/11/2006 00:50:02	DHCP Discover			
Apr/11/2006 00:50:00	DHCP Discover			
Apr/11/2006 00:49:58	DHCP Discover no response			
Apr/11/2006 00:49:58	DHCP Discover			
Apr/11/2006 00:49:41	DHCP Discover			
Apr/11/2006 00:49:32	DHCP Discover			
Apr/11/2006 00:49:28	DHCP Discover			

Time: Displays the time and date that the log entry was created.

Message: Displays summary information about the log entry.

Source: Displays the source of the communication.

Destination: Displays the destination of the communication.

Note: Displays the IP address of the communication

Log Setting

This screen enables user to set router logging parameters.

The screenshot shows the 'Log Setting' page on a 'Wireless Router' interface. The page has a navigation menu on the left with options: LAN Setting, Wireless, Status, Routing, Access, Management, Tools, and Wizard. The main content area includes a breadcrumb trail: Device information > Log > Log Setting > Statistic > Wireless. A 'HELP' button is in the top right. The form contains the following fields and options:

SMTP Server	<input type="text"/>
Send to	<input type="text"/> Email Address
	<input type="button" value="Email Log Now"/>
Syslog Server	<input type="text" value="0.0.0.0"/>
Log Type	<input checked="" type="checkbox"/> System Activity
	<input type="checkbox"/> Debug Information
	<input checked="" type="checkbox"/> Attacks
	<input type="checkbox"/> Dropped Packets
	<input checked="" type="checkbox"/> Notice

At the bottom, there are 'Cancel' and 'Apply' buttons.

SMTP Server: Type the SMTP server address for the email that the log will be sent to in the next field.

Send to: Type an email address for the log to be sent to. Click “Email Log Now” to immediately send the current log.

Syslog Server: Type the IP address of the Syslog Server if user wants the router to listen and receive incoming Syslog messages.

Log Type: Enables user to select what items will be included in the log:

System Activity: Displays information related to router operation.

Debug Information: Displays information related to errors and system malfunction.


Attacks: Displays information about any malicious activity on the network.

Dropped Packets: Displays information about packets that have not been transferred successfully.

Notice: Displays important notices by the system administrator.

Statistic

This screen displays a table that shows the rate of packet transmission via the router LAN, Wireless and WAN ports (in bytes per second).

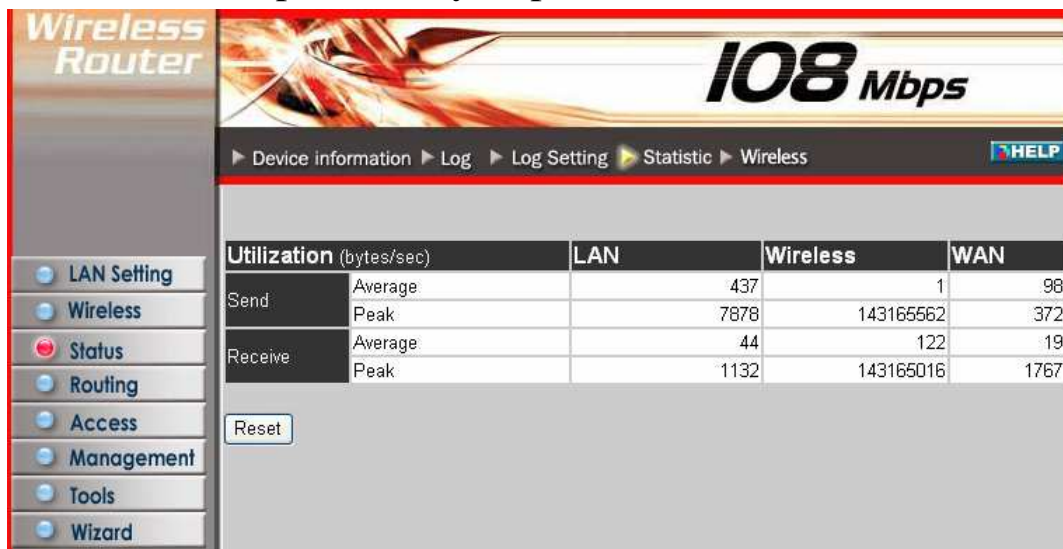


Utilization (bytes/sec)		LAN	Wireless	WAN
Send	Average	437	1	98
	Peak	7878	143165562	372
Receive	Average	44	122	19
	Peak	1132	143165016	1767

Reset

Click “Reset” to erase all statistics and begin logging statistics again.

Wireless

This screen enables user to view information about wireless devices that are connected to the WLAN Router.

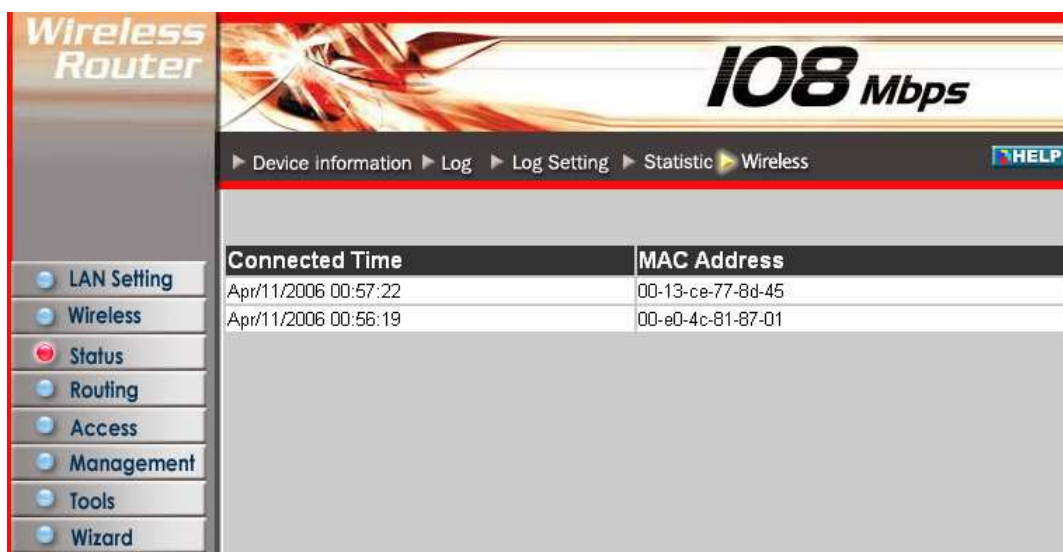

Connected Time	MAC Address
Apr/11/2006 00:57:22	00-13-ce-77-8d-45
Apr/11/2006 00:56:19	00-e0-4c-81-87-01

Connected Time: Displays how long the wireless device has been connected to the LAN via the router.

MAC Address: Displays the devices wireless LAN interface MAC address.

Routing

This selection enables user to set how the router forwards data: Static and Dynamic. Routing Table enables user to view the information created by the router that displays the network interconnection topology.

Static

It enables user to set parameters by which the router forwards data to its destination if user's network has a static IP address.

The screenshot shows the 'Static' configuration page for a wireless router. The interface includes a sidebar with navigation options: LAN Setting, Wireless, Status, Routing (highlighted), Access, Management, Tools, and Wizard. The main area features tabs for 'Static', 'Dynamic', and 'Routing Table'. Below the tabs are several input fields: 'Network Address', 'Network Mask', 'Gateway Address', 'Interface' (a dropdown menu currently showing 'LAN'), and 'Metric'. Below these fields are four buttons: 'Add', 'Update', 'Delete', and 'New'. At the bottom of the page, there is a table header with columns: 'Network Address', 'Mask', 'Gateway', 'Interface', and 'Metric'.

Network Address: Type the static IP address user's network uses to access the Internet. User's ISP or network administrator provides user with this information.

Network Mask: Type the network (subnet) mask for user's network. If user does not type a value here, the network mask defaults to 255.255.255.255. User's ISP or network administrator provides user with this information.

Gateway Address: Type the gateway address for network. User's ISP or network administrator provides user with this information.

Interface: Select an interface, WAN or LAN, to connect to the Internet.

Metric: Select which metric that user want to apply to this configuration.

Add: Click to add the configuration to the static IP address table at the bottom of the page.


Update: Select one of the entries in the static IP address table at the bottom of the page and, after changing parameters, click "Update" to confirm the changes.

Delete: Select one of the entries in the static IP address table at the bottom of the page and click "Delete" to remove the entry.

New: Click "New" to clear the text boxes and add required information to create a new entry.

Dynamic

This screen enables user to set NAT parameters.

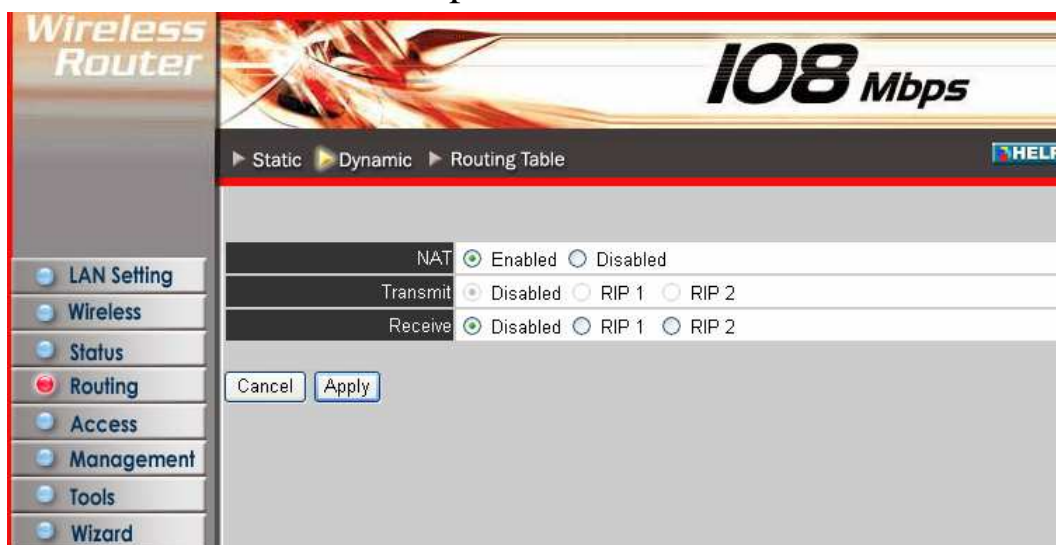

NAT: Click the radio buttons to enable or disable the NAT function.

Transmit: Click the radio buttons to set the desired transmit parameters, disabled, RIP 1, or RIP 2.

Receive: Click the radio buttons to set the desired transmit parameters, disabled, RIP 1, or RIP 2.

Routing Table

This screen enables user to view the routing table for the router. The routing table is a database created by the router that displays the network interconnection topology.



Network Address: Displays the network IP address of the connected node.

Network Mask: Displays the network (subnet) mask of the connected node.

Gateway Address: Displays the gateway address of the connected node.

Interface: Displays whether the node is connected via a WAN or LAN.

Metric: Displays the metric of the connected node.

Type: Displays whether the node has a static or dynamic IP address

Access

This page enables you to define access restrictions, set up protocol and IP filters, create virtual servers, define access for special applications such as games, and set firewall rules.

Filters

Using filters to deny or allow the users to access. Five types of filters to select: MAC, URL blocking, IP, Protocol filter and Domain blocking.

Wireless Router **108 Mbps**

Filter ▶ Virtual Server ▶ Special AP ▶ DMZ ▶ Firewall Rule **HELP**

Filters

Filters are used to allow or deny LAN users from accessing the Internet.

MAC Filters URL Blocking
 IP Filters Domain Blocking Protocol Filters

MAC Filter

Disabled
 Only **allow** computers with MAC address listed below to access the network
 Only **deny** computers with MAC address listed below to access the network

Apply

MAC Table

Name

MAC Address - - - - -

Add Update Delete Clear

Name	MAC Address	Connection
------	-------------	------------

MAC Filters

Wireless Router **108 Mbps**

Filter ▶ Virtual Server ▶ Special AP ▶ DMZ ▶ Firewall Rule **HELP**

Filters
Filters are used to allow or deny LAN users from accessing the Internet.

MAC Filters URL Blocking
 IP Filters Domain Blocking Protocol Filters

MAC Filter
 Disabled
 Only **allow** computers with MAC address listed below to access the network
 Only **deny** computers with MAC address listed below to access the network

Apply

MAC Table

Name

MAC Address - - - - -

Add Update Delete Clear

Name	MAC Address	Connection
------	-------------	------------

MAC Filter: Enables you to allow or deny Internet access to users within the LAN based upon the MAC address of their network interface. Click the radio button next to Disabled to disable the MAC filter.

Disable: Disable the MAC filter function.

Allow: Only allow computers with MAC address listed in the MAC Table.

Deny: All users are allowed Internet access except those computers in the MAC Table are deny Internet access.

MAC Table: Use this section to create a user profile which Internet access is denied or allowed. The user profiles are listed in the table at the bottom of the page. (Note: Click anywhere in the item. Once the line is selected, the fields automatically load the item's parameters, which you can edit.)

Name: Type the name of the user to be permitted/denied access.

MAC Address: Type the MAC address of the user's network interface.

Add: Click to add the user to the list at the bottom of the page.


Update: Click to update information for the user, if you have changed any of the fields.

Delete: Select a user from the table at the bottom of the list and click Delete to remove the user profile.

New: Click New to erase all fields and enter new information.

URL Blocking

You could enable URL blocking to deny the users from accessing the specified URL. Add those specified URL in the text box.

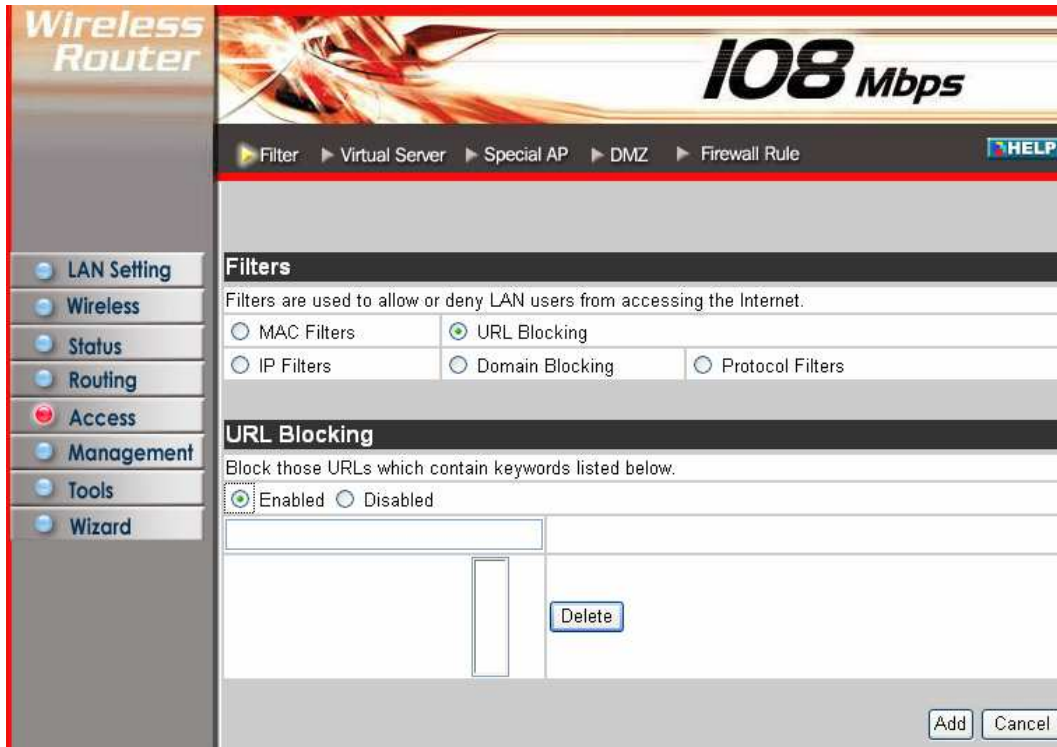

Enable / Disable: Enable or Disable the URL blocking function of the WLAN Router.

Add: Add the specific URL to the URL blocking list.

Delete: Selected a URL from the blocking list then click the *Delete* button to remove the URL from the URL Blocking list.

IP Filters

This screen enables you to define a minimum and maximum IP address range filter; all IP addresses falling in the range are not allowed Internet access. The IP filter profiles are listed in the table at the bottom of the page. (Note: Click anywhere in the item. Once the line is selected, the fields automatically load the item's parameters, which you can edit.)

The screenshot shows the configuration interface for IP Filters on a wireless router. The page title is "Wireless Router 108 Mbps". The navigation menu on the left includes "LAN Setting", "Wireless", "Status", "Routing", "Access", "Management", "Tools", and "Wizard". The main content area has a breadcrumb trail: "Filter > Virtual Server > Special AP > DMZ > Firewall Rule". Below the breadcrumb, there are radio buttons for "Filters": "MAC Filters", "IP Filters" (selected), "URL Blocking", "Domain Blocking", and "Protocol Filters". The "IP Filter" section has an "Enable" section with "Enable" and "Disabled" radio buttons. Below that are "Range Start" and "Range End" input fields. At the bottom, there are "Add", "Update", "Delete", and "Clear" buttons, and a table with "Start" and "End" columns.

Enable: Click to enable or disable the IP address filter.

Range Start: Type the minimum address for the IP range. IP addresses falling between this value and the Range End are not allowed to access the Internet.

Range End: Type the minimum address for the IP range. IP addresses falling between this value and the Range Start are not allowed to access the Internet.

Add: Click to add the IP range to the table at the bottom of the screen.


Update: Click to update information for the range if you have selected a list item and have made changes.

Delete: Select a list item and click Delete to remove the item from the list.

Clear: Click the *Clear* button to erase all fields and enter new information.

Domain Blocking

You could specify the domains that allow users to access or deny by clicking one of the two items. Also, add the specified domains in the text box.

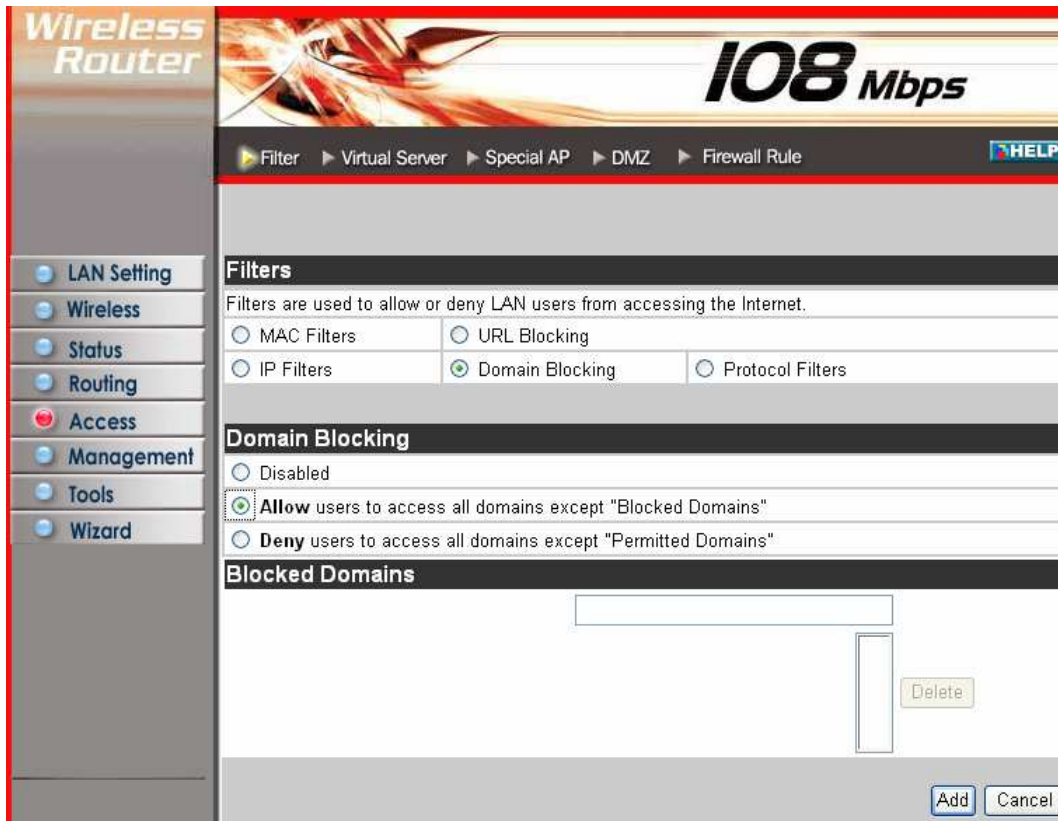

Disable: Disable the Domain Blocking function.

Allow: Allow users to access all domains except “Blocking Domains”.

Deny: Deny users to access all domains except “Permitted Domains”.

Blocked/Permitted Domains: List domains you will Blocked or Permotted.

Add: Click to *Add* button to add domain to the Blocked/Permitted Domains list.

Delete: Select a user from the table at the bottom of the list and click Delete to remove the user profile.

Protocol Filters

This screen enables you to allow and deny access based upon a communications protocol list you create. The protocol filter profiles are listed in the table at the bottom of the page.

Note: When selecting items in the table at the bottom, click anywhere in the item. The line is selected, and the fields automatically load the item's parameters, which you can edit.

The screenshot shows the configuration page for a Wireless Router. The left sidebar contains navigation options: LAN Setting, Wireless, Status, Routing, Access, Management, Tools, and Wizard. The main content area is titled '108 Mbps' and includes a breadcrumb trail: Filter > Virtual Server > Special AP > DMZ > Firewall Rule. The 'Filter' section is active, showing options for MAC Filters, URL Blocking, IP Filters, Domain Blocking, and Protocol Filters (which is selected). Below this, the 'Protocol Filter' section has 'Enable List' selected, with a description: 'Deny to access internet from LAN when the list as below item be enable.' and an 'Apply' button. The 'Edit protocol Filter in List' section includes 'Enable' (radio buttons for Enable and Disabled), a 'Name' text field, a 'Protocol' dropdown menu (set to TCP), and a 'Port' range field with a note '(Type Range for ICMP)'. At the bottom, there are 'Add', 'Update', 'Delete', and 'New' buttons. A table lists existing filters:

	Name	Protocol	Range
<input type="checkbox"/>	Filter FTP	TCP	20-21
<input type="checkbox"/>	Filter HTTP	TCP	80
<input type="checkbox"/>	Filter HTTPS	TCP	443
<input type="checkbox"/>	Filter DNS	UDP	53
<input type="checkbox"/>	Filter SMTP	TCP	25
<input type="checkbox"/>	Filter POP3	TCP	110
<input type="checkbox"/>	Filter Telnet	TCP	23

Enable: Click to enable or disable the Protocol filter.

Name: Type the name of the user to be denied access.

Protocol: Select a protocol (TCP or UDP) to use for the virtual server.

Port Range: Type the port range of the protocol.

Add: Click to add the protocol filter to the table at the bottom of the screen.

Update: Click to update information for the protocol filter if user have selected a list item and have made changes.

Delete: Select a list item and click Delete to remove the item from the list.

New: Click "New" to erase all fields and enter new information.

Virtual Server

This screen enables user to create a virtual server via the router. If the router is set as a virtual server, remote users requesting Web or FTP services through the WAN are directed to local servers in the LAN. The router redirects the request via the protocol and port numbers to the correct LAN server. The Virtual Sever profiles are listed in the table at the bottom of the page.

Note: When selecting items in the table at the bottom, click anywhere in the item. The line is selected, and the fields automatically load the item's parameters, which user can edit.

	Name	Protocol	LAN Server
■	Virtual Server FTP	TCP 21/21	0.0.0.0
■	Virtual Server HTTP	TCP 80/80	0.0.0.0
■	Virtual Server HTTPS	TCP 443/443	0.0.0.0
■	Virtual Server DNS	UDP 53/53	0.0.0.0
■	Virtual Server SMTP	TCP 25/25	0.0.0.0
■	Virtual Server POP3	TCP 110/110	0.0.0.0
■	Virtual Server Telnet	TCP 23/23	0.0.0.0
■	IPSec	UDP 500/500	0.0.0.0
■	PPTP	TCP 1723/1723	0.0.0.0
■	NetMeeting	TCP 1720/1720	0.0.0.0
■	DCS-1000	TCP 80/80	0.0.0.0
■	DCS-2000/DCS-5300	TCP 800/800	0.0.0.0
■	i2eye	TCP 1720/1720	0.0.0.0

Enable: Click to enable or disable the virtual server.

Name: Type a descriptive name for the virtual server.

Protocol: Select a protocol (TCP or UDP) to use for the virtual server.

Private Port: Type the port number of the computer on the LAN that is being used to act as a virtual server.

Public Port: Type the port number on the WAN that will be used to provide access to the virtual server.

LAN Server: Type the LAN IP address that will be assigned to the virtual server.

Add: Click to add the virtual server to the table at the bottom of the screen.

Update: Click to update information for the virtual server if user have selected a list item and have made changes.

Delete: Select a list item and click “Delete” to remove the item from the list.

New: Click “New” to erase all fields and enter new information.

Special AP

This screen enables user to specify special applications, such as games, that require multiple connections that are inhibited by NAT. The special applications profiles are listed in the table at the bottom of the page.

Note: When selecting items in the table at the bottom, click anywhere in the item. The line is selected, and the fields automatically load the item's parameters, which user can edit.

	Name	Triger Port Range	Incoming Port
■	Battle.net	6112	6112
■	Dialpad	7175	51200-51201,51210
■	ICU II	2019	2000-2038,2050-2051,2069,2085,3010-3030
■	MSN Gaming Zone	47624	2300-2400,28800-29000
■	PC-to-Phone	12053	12120,12122,24150-24220
■	Quick Time 4	554	6970-6999

Enable: Click to enable or disable the application profile. When enabled, users will be able to connect to the application via the router WAN connection. Click “Disabled” on a profile to prevent users from accessing the application on the WAN.

Name: Type a descriptive name for the application.

Trigger: Defines the outgoing communication that determines whether the user has legitimate access to the application.

- **Protocol:** Select the protocol (TCP, UDP, or ICMP) that can be used to access the application.
- **Port Range:** Type the port range that can be used to access the application in the text boxes.
- **Incoming:** Defines which incoming communications users are permitted to connect with.
- **Protocol:** Select the protocol (TCP, UDP, or ICMP) that can be used by the incoming communication.
- **Port:** Type the port number that can be used for the incoming communication.

Add: Click to add the special application profile to the table at the bottom of the screen.

Update: Click to update information for the special application if user have selected a list item and have made changes.


Delete: Select a list item and click Delete to remove the item from the list.

New: Click “New” to erase all fields and enter new information.

DMZ

This screen enables user to create a DMZ for those computers that cannot access Internet applications properly through the router and associated security settings.

Note: Any clients added to the DMZ exposes the clients to security risks such as viruses and unauthorized access.

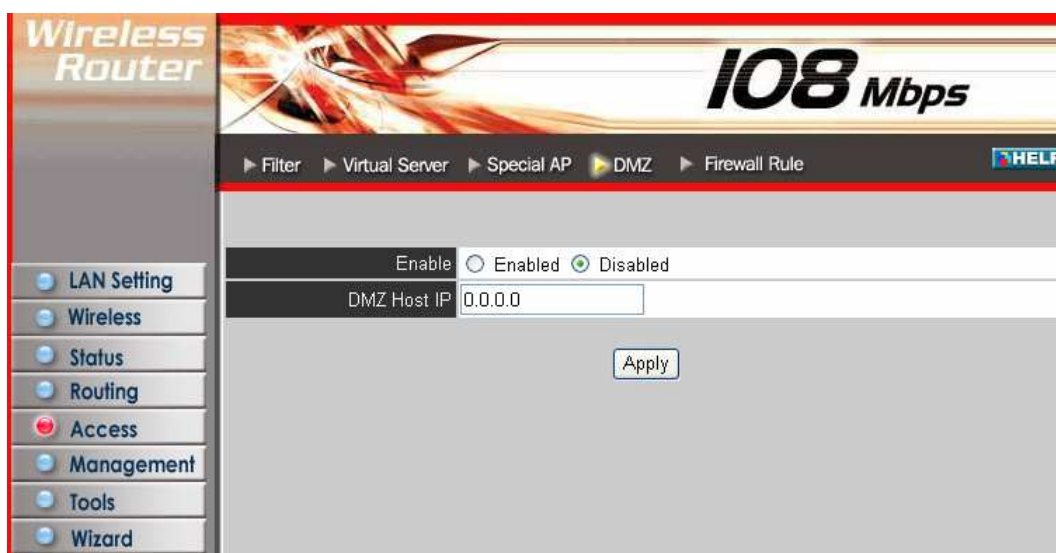

Enable: Click to enable or disable the DMZ.

DMZ Host IP: Type a host IP address for the DMZ. The computer with this IP address acts as a DMZ host with unlimited Internet access.

Apply: Click to save the settings.

Firewall Rule

This screen enables user to set up the firewall. The router provides basic firewall functions, by filtering all the packets that enter the router using a set of rules. The rules are in an order sequence list--the lower the rule number, the higher the priority the rule has.

Action	Name	Source	Destination	Protocol	
<input checked="" type="checkbox"/>	Allow	Allow to Ping WAN port	WAN,*	LAN,192.168.1.1	ICMP,8
<input checked="" type="checkbox"/>	Deny	Default	*,*	LAN,*	*,*
<input checked="" type="checkbox"/>	Allow	Default	LAN,*	*,*	*,*

Enable: Click to enable or disable the firewall rule profile.

Name: Type a descriptive name for the firewall rule profile.

Action: Select whether to allow or deny packets that conform to the rule.

Source: Defines the source of the incoming packet that the rule is applied to.

- **Interface:** Select which interface (WAN or LAN) the rule is applied to.
- **IP Range Start:** Type the start IP address that the rule is applied to.
- **IP Range End:** Type the end IP address that the rule is applied to.

Destination: Defines the destination of the incoming packet that the rule is applied to.

- **Interface:** Select which interface (WAN or LAN) the rule is applied to.
- **IP Range Start:** Type the start IP address that the rule is applied to.
- **IP Range End:** Type the end IP address that the rule is applied to.
- **Protocol:** Select the protocol (TCP, UDP, or ICMP) of the destination.
- **Port Range:** Select the port range.

Add: Click to add the rule profile to the table at the bottom of the screen.

Update: Click to update information for the rule if user have selected a list item and have made changes.

Delete: Select a list item and click “**Delete**” to remove the item from the list.

New: Click “**New**” to erase all fields and enter new information.

Priority Up: Select a rule from the list and click “**Priority Up**” to increase the priority of the rule.

Priority Down: Select a rule from the list and click “**Priority Down**” to decrease the priority of the rule.

Update Priority: After increasing or decreasing the priority of a rule, click “**Update Priority**” to save the changes.

Management

Management enables user to set up SNMP and Remote Management feature.

SNMP

This screen enables you to configure the SNMP.

<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	
System Name	AP-Router
System Location	
System Contact	
Community	
Trap Receiver 1	<input type="radio"/> 0.0.0.0
2	<input type="radio"/> 0.0.0.0
3	<input type="radio"/> 0.0.0.0

Enabled/Disabled: Click to enable or disable SNMP.

System Name: A name given to the router.

System Location: Description the location of the router (normally, the DNS name).

System Contact: Description the contact information for the person responsible for the router.

Community: SNMP system name for exchanging SNMP community messages. The name can be used to limit SNMP messages passing through the network. The default name is 'public.'

Trap Receiver: Type the name of the destination PC that will receive trap messages.

Remote Management

This screen enables user to set up remote management. Using remote management, the router can be configured through the WAN via a Web browser. A user name and password are required to perform remote management.

HTTP	<input type="radio"/> Enable <input checked="" type="radio"/> Disabled
	Port <input type="text" value="8080"/>
	Remote IP Range From * <input type="text"/> To <input type="text"/>
Allow to Ping WAN Port	<input checked="" type="radio"/> Enable <input type="radio"/> Disabled
	Remote IP Range From * <input type="text"/> To <input type="text"/>
UPNP Enable	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
Gaming mode	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
PPTP	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
IPSec	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
IDENT	<input checked="" type="radio"/> Stealth <input type="radio"/> Closed

Cancel Apply

HTTP: Enables user to set up HTTP access for remote management.

Allow to Ping WAN Port: Type a range of router IP addresses that can be pinged from remote locations

UPNP Enable: UPNP is short for Universal Plug and Play that is a networking architecture that provides compatibility among networking equipment, software, and peripherals. The Router is an UPnP enabled router and will only work with other UPnP devices/software. If user does not want to use the UPnP functionality, selecting “Disabled” can disable it.

Gaming mode: If user is experiencing difficulties when playing online games or even certain applications that use voice data, user may need to enable Gaming Mode for these applications to work correctly. When not playing games or using these voice applications, it is recommended that Gaming Mode be disabled.

PPTP: Enables user to set up PPTP access for remote management.

IPSec: Enables user to set up IPSec access for remote management.

IDENT: Default is stealth. This enables user to set port 113 stealth.

Tools

This page enables user to restart the system, save and load different settings as profiles, restore factory default settings, run a setup wizard to configure router settings, upgrade the firmware, and ping remote IP addresses.


Reset

Click “Restart” to restart the system in the event the system is not performing correctly.



Settings

This screen enables user to save settings as a profile and load profiles for different circumstances. User can also load the factory default settings, and run a setup wizard to configure the router and router interface.

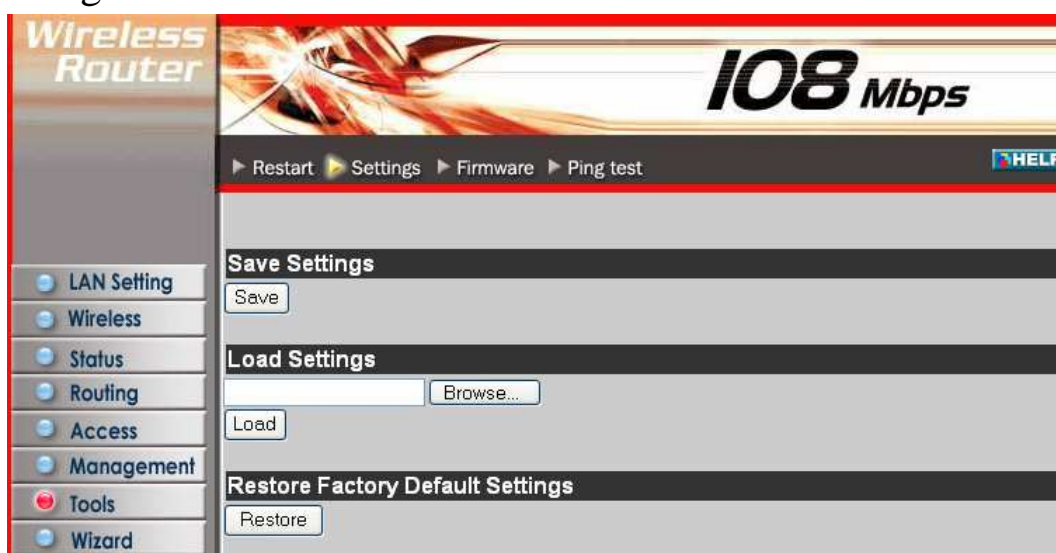

Save Settings: Click “Save” to save the current configuration as a profile that can load when necessary.

Load Settings: Click “Browse” and go to the location of a stored profile. Click “Load” to load the profile's settings.

Restore Factory Default Settings: Click “Restore” to restore the default settings. All configuration changes will lose.

Firmware

This screen enables user to keep the router firmware up to date.



Please follow the below instructions:

Download the latest firmware from the manufacturer's Web site, and save it to disk.

Click “**Browse**” and go to the location of the downloaded firmware file.

Select the file and click “**Upgrade**” to update the firmware to the latest release.

Ping Test

The ping test enables user to determine whether an IP address or host is present on the Internet. Type the host name or IP address in the text box and click Ping.



WLG-2211 TECHNICAL SPECIFICATIONS

General	
Standards	IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.11g; IEEE 802.11b
Protocol	CSMA/CD
Radio Technology	IEEE 802.11g Orthogonal Frequency Division Modulation
Data Transfer Rate	802.11b: 1, 2, 5.5, 11Mbps (auto sense) 802.11g: 6, 9, 12, 18, 24, 36, 48, 54Mbps(auto sense) Super-G™: 108Mbps Ethernet: 10Mbps (half duplex), 20Mbps (full-duplex) Fast Ethernet: 100Mbps (half duplex), 200Mbps (full- duplex)
Topology	Star
Receiver Sensitivity	54Mbps: Typical -65dBm @ 10% PER (Packet Error Rate) 11Mbps: Typical -82dBm @ 8% PER (Packet Error Rate)
TX Power	18 dBm
Network Cables	10BASE-T: 2-pair UTP Cat. 3,4,5 (100 m), EIA/TIA- 568 100-ohm STP (100 m) 100BASE-TX: 2-pair UTP Cat. 5 (100 m), EIA/TIA-568 100-ohm STP (100 m)
Frequency Range	2412 ~ 2484 MHz ISM band (channels 1 ~ 14)
Modulation Schemes	DBPSK/DQPSK/CCK/OFDM
Security	64/128-bits WEP Encryption; WPA, WPA-PSK, WPA2, WPA2-PSK
Channels	1 ~ 11 channels (FCC/NCC); 1 ~ 13 channels (ETSI); 1 ~ 14 channels (MKK)
Number of Ports	LAN: 4 x 10/100Mbps Auto-MDIX Fast Ethernet port WAN: 1 x 10/100Mbps Auto-MDIX Fast Ethernet port
Physical and Environmental	
DC inputs	7.5VDC/1A
Power Consumption	6.5W (Max)
Temperature	Operating: 0° ~ 40° C, Storage: -10° ~ 70° C
Humidity	Operating: 10% ~ 90%, Storage: 5% ~ 90%
Dimensions	147 x 115 x 35 mm (W x H x D) without Antenna
EMI:	FCC Class B, CE Mark B