

Explain of Keyless Entry System.

1) General

The system allows the user to lock or unlock a vehicle's doors only pressing the switch with a hand-held radio frequency Transmitter without using the Key.


The system includes "PANIC" function that can discovery the car at once on a parking at night.

Omnidirection was realized by radio frequency, you can control to easy without aiming a Transmitter to the Car.

2) How to use Keyless Entry System?

a) Press the Switch on the Transmitter that you want to control.

<Work Scope>

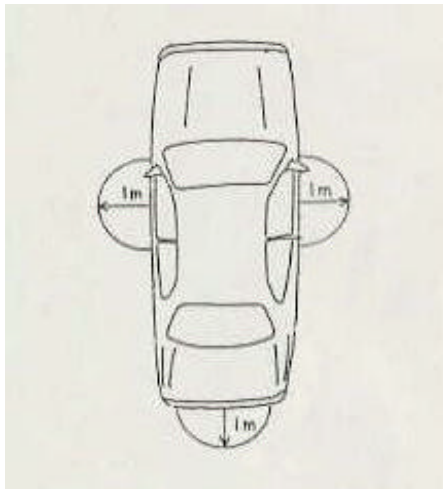

The Work Scope change a little by surrounding situation.

b) Lock and Unlock of the Door lock

LOCK : All Doors lock every time by pressing "LOCK" on the Transmitter.

UNLOCK : Driver doors unlock by once pressing "UNLOCK" on the Transmitter.

All doors unlock by twice pressing "UNLOCK" on the Transmitter.

c) Trunk opens

TRUNK : The trunk opens by pressing "TRUNK" for 0.5 second on a Transmitter.

d) PANIC ALARM


PANIC : Press "PANIC" on the Transmitter. Several times you press,
the Transmitter sends the signal repeatedly for 1 second intervals.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation,

This device complies with DOC rules in Canada.

Changes or modifications not expressly approved by the party responsible for compliance should void the user's authority to operate the equipment.

3) About exchange of the battery

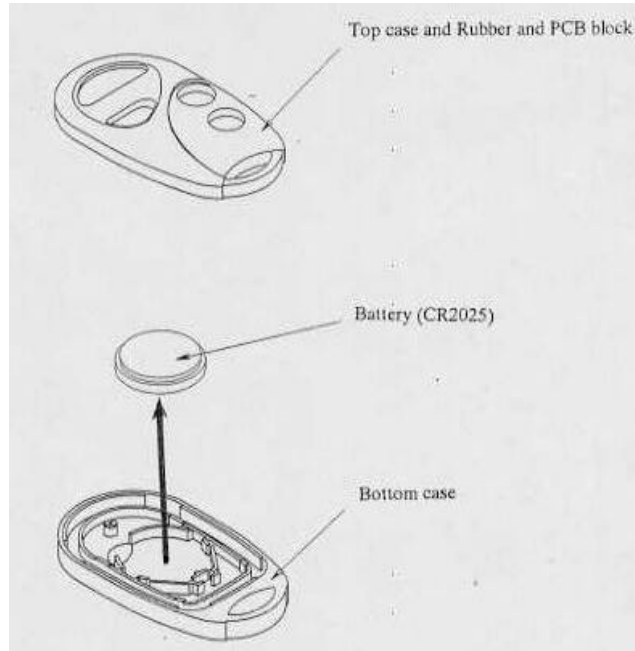

To replace When the Remote Keyless Entry Transmitter's Battery begins to get weak, replace the Battery as soon as possible.

Battery type : CR2025

the Battery, remove the cover .

Remove the old Battery and note the polarity.

Make sure the polarity of the new Battery is the same, then insert it in the Transmitter.