

Key transmitter

The security system is controlled remotely by a radio frequency, battery-operated, integrated key transmitter.

The transmitter is activated by pressing one of the operating buttons.

1. Unlocks and disarms the vehicle.
2. Releases luggage compartment lock.
3. Activates the convenience headlamp feature and sounds the panic alarm.
4. Locks/double-locks and arms the vehicle.
5. Lock/unlock the key.

To free the key, press the release button (5). When not required press and hold the button and fold the key into the transmitter housing.

Key transmitters will not operate if a key is in the ignition switch.

Each key transmitter and key will operate the ignition switch and lock the doors and the luggage compartment.

The key number is recorded on a plastic tag which is attached to each key. Detach the tag and keep safely, not in the vehicle.

Additional keys and key transmitters can be obtained from your Dealer and can be used provided a Dealer programmes them all to the vehicle.

Caution: Should a key or key transmitter be lost, a new one can be obtained and programmed to the vehicle by a Jaguar Dealer, who will ask for proof of vehicle ownership. It is advisable to notify a Dealer as soon as a key or key transmitter is lost or stolen and have the remaining key(s) or key transmitter(s) reprogrammed. This will then prevent the lost or stolen key/transmitter from being used to disarm and unlock the vehicle.


Note: Dealers keep a log of all enquiries for replacement keys and notify Jaguar Cars Ltd. of any such requests.

Care of key transmitters

The key transmitters must be treated with care and not exposed to extremes of heat, dust, humidity or be in contact with fluids. Do not leave the transmitter exposed to direct sunlight.

The battery is the only serviceable part.

2-4 Security and locks

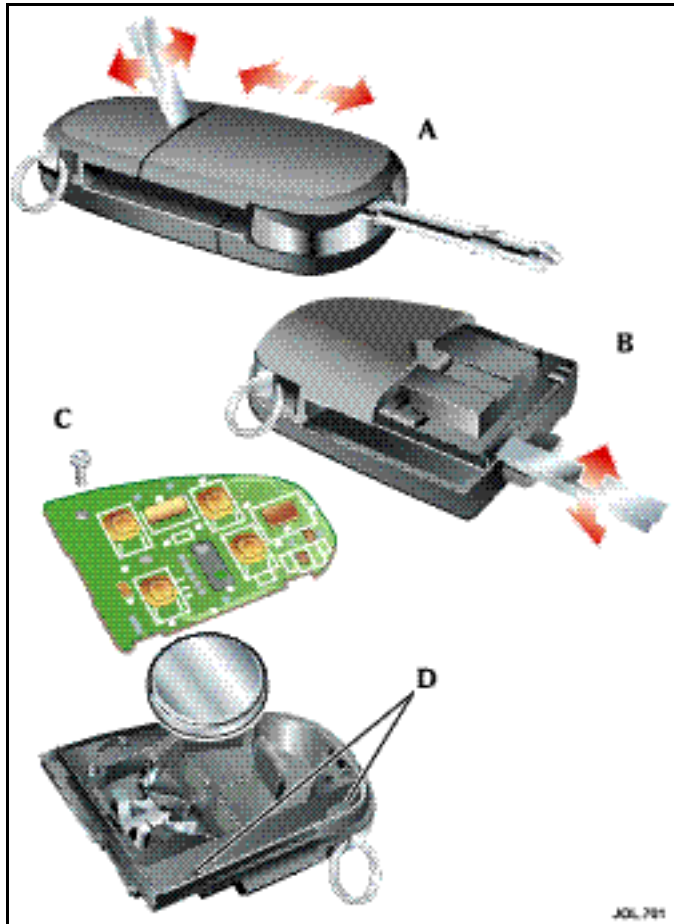

Key transmitter battery renewal

When the battery needs renewal there will be a significant decrease in the effective range of the key transmitter.

To renew the battery, using a small, flat-blade screwdriver, separate and pull the transmitter (A) from the key body. Insert the screwdriver into the groove between the covers (B) and, by twisting the screwdriver, prise the covers apart. Unscrew and remove the small screw (C) and remove the printed circuit board, taking care not to touch the battery terminals. Remove the battery and dispose of safely. Fit a new cell, type CR2032, available from your Jaguar Dealer, with the side marked with the positive symbol (+) downwards in the battery receptacle. Avoid touching the new battery as moisture/oil from the fingers can reduce the life of the battery and corrode the contacts. Replace the printed circuit board making sure to engage the board under the securing tabs (D), and secure with the screw. Refit the cover and click into place with thumb pressure. Slide the transmitter back onto the key body.