# T-2490

#### 2.4GHz 2 Channel 350mW Super Power Tx Directional

### **Transmitter Set-up:**


- 1. Connect Video input "A " RCA female to video camera source
- 2. Connect Audio input "B" RCA female to the audio source.
- 3. Connect Antenna to Transmitter "C"
- 4. Connect Power input "D" to the power source (Minimum voltage 7.5V DC Maximum voltage 9V DC). DO NOT USE ANY OTHER POWER SUPPLY. YOU MUST ONLY USE PROVIDED POWER SUPPLY
- 5. Select Transmitter Channel by adjusting dip switches See Figure 1 Please note: once desired channel has been selected you must power down the transmitter then power back up to lock onto selected channel

# **Troubleshooting:**

- Check power supply. Most troubleshooting issues are caused by inadequate power supply
  Note: Minimum voltage required to properly operate transmitter is 7.5 volts DC
- > Do not encapsulate the antenna in any kind of metal enclosure. Plastic, wood or other similar materials are satisfactory.
- > Directional Transmitter- Optimum transmitting distance is realised when the transmitting antenna and the receiving antenna are both facing each other.
- > Confirm the set up for receiver is complete. Power is "ON", confirm the antenna is attached correctly.
- > Check that the "Video Out" cables from receiver to monitor/time-lapse are connected properly.
- Consider the following abilities when transmitting through building materials.
  Penetration through: Wood/Drywall good

Wood/Drywall - good Concrete/Cinder Block - poor Tinted/UV Coated Windows - poor Sheet Metal - none

**WARNING** "This device shall be installed in such a location as to prevent the general population from approaching within 20cm of this device"

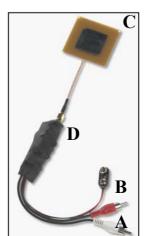

### Parts List

- ≻1x- 2.4GHz Transmitter
- ≻1x- 7.5 VDC Power Supply
- ➤1x- Directional Patch Antenna