 


Users Manual

■ Package contents.

Please check the items in the package, if there is any short or damage in the package, please contact your local representative immediately.

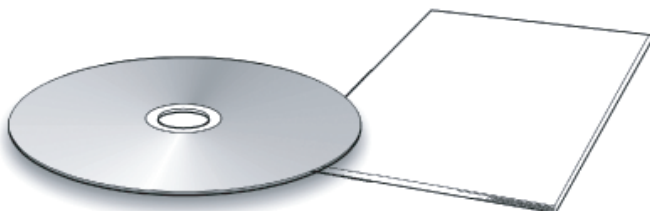

Installation CD

Easy Installation Guide



USB GPRS/WLAN Dongle




USB Extender Cord


Items	Quantity
USB GPRS/WLAN Dongle	1
USB Extender Cord	1
Installation CD	1
Easy Installation Guide	1

Users Manual

 Exterior introduction

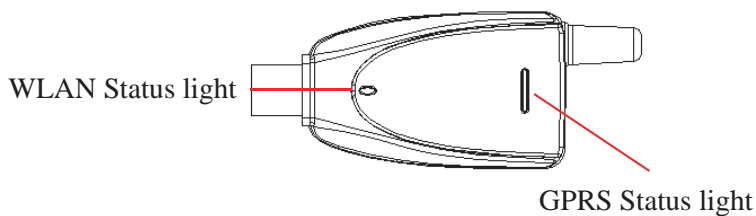

SIM card connector slot

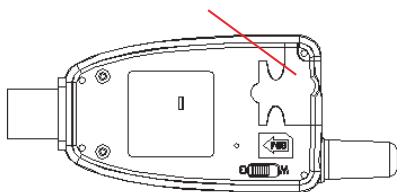 


Users Manual

GPRS Status light

GPRS Status light indicates the connection status when it is powered on.

Items	Representing	Light
①	Error (Invalid SIM card or failed to connect to the network)	Red
②	Connected to the network	Blue
③	SIM lock(entered PIN code)	Purple
④	SIM block(entered PUK code)	Red and Blue flashes interactively
⑤	Search Network and registering	Full-colour
⑥	Connected to the WLAN	WLAN Status light on

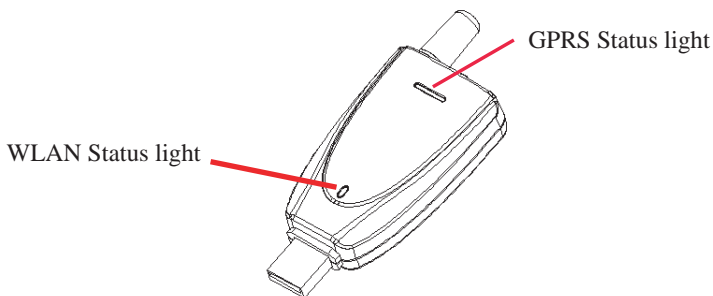 

Note:

 
The normal lights-on sequence:

Blue light on → Red light on → White light on → Full-colour on
→ Blue light on

Users Manual

To switch in between GPRS and WLAN

There is a switch on the bottom side of the USB GPRS/WLAN dongle. GPRS is enabled when switched to G and WLAN is enabled when switched to W. You may observe the status by the indicate light on the front panel, upper 7 color LED is for GPRS and the lower single color LED is for WLAN.

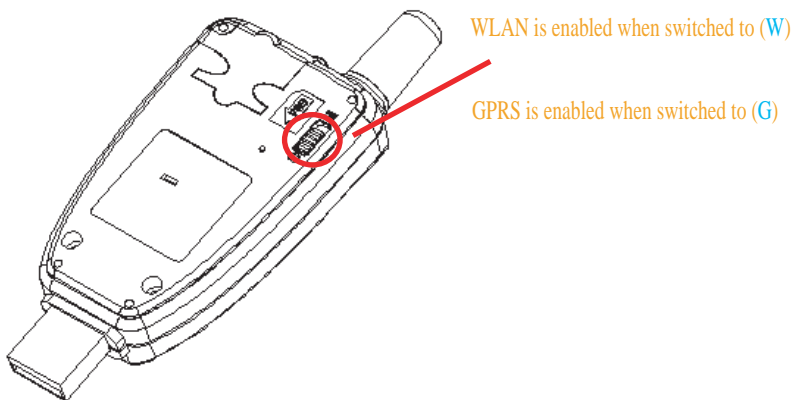

Note:

USB GPRS/WLAN dongle's factory setting is set to (G).

GPRS modem Installation & setting procedures



Users Manual

■ System requirements

Please make sure your computer's hardware and software meet the following requirements, please refer to your computer's users manual or contact your local representative for more information.

Software & hardware requirements

- A valid SIM card (GPRS service is granted)
- An USB port or a PCMCIA to USB converter card is available.
- IBM compatible Pentium II 400 MHz (or above) notebook or
PC with a minimum of 64 MB RAM

 
■ Network system requirements

Please make sure your local GSM network provides GPRS service and please apply the GPRS service from the network.

SIM card installation

■ Insert the SIM card

Insert the SIM card into the SIM card compartment with the chamfered corner to click into the housing.

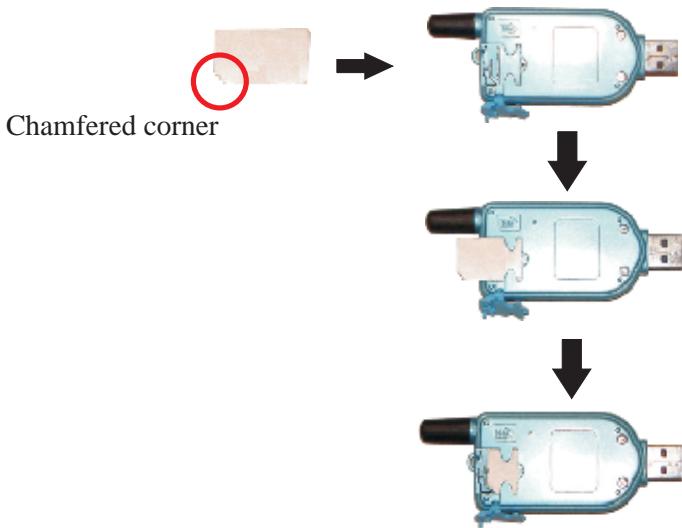


Note:

1. Please make sure the chamfered corner on the SIM card matches with the latch on the housing.
2. If the SIM card is inserted into the housing with an incorrect direction, the SIM card won't be able to click into the chamfered latch.

Users Manual

■ Remove the SIM card

 Gently pressing the chamfered latch on the housing, the SIM card will be ejected from the housing automatically.

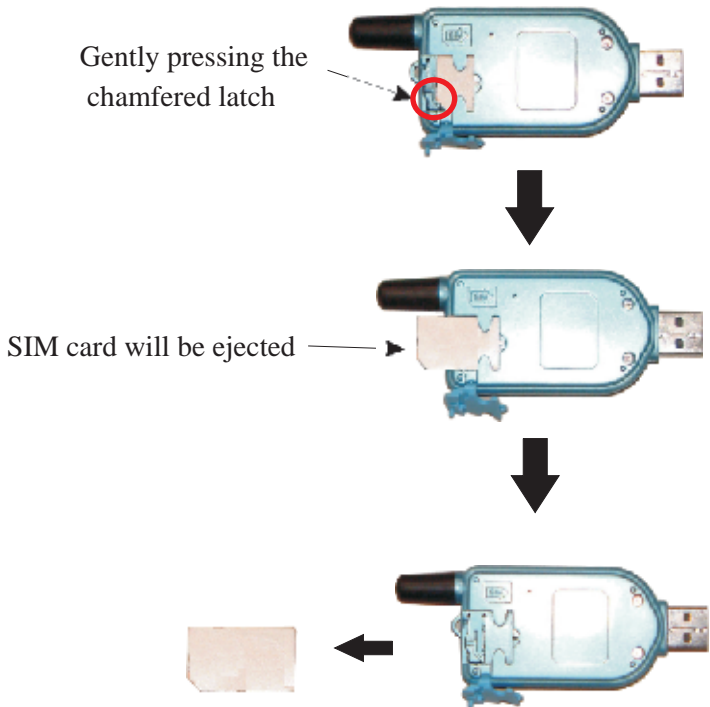

Install the GPRS/WLAN Dongle on the PC

- Please follow the following procedures to install the driver software.
- The Installation Wizard will automatically determine the type of operating system on your computer and choose the proper driver for the GPRS/WLAN Dongle.
- When the software installation is completed, plug the GPRS/WLAN Dongle into the USB port on your computer; the operating system will automatically identify the GPRS/WLAN Dongle.
- Then you may configure the software settings, please refer to page 37.

Note: Do not plug the GPRS/WLAN Dongle into the computer prior to the software installation.

1. Put the installation disc into your CDROM on your computer.
2. The Installation Wizard shows up on the screen automatically.



 
- install software: install the driver for the GPRS/WLAN Dongle.
- browse CD contents: browse the contents of the installation disc.
- contact us: you may check the button to visit our web site about SOLOMON Technology Corp..
- exit : close the window and thanks for using.

Users Manual

Install the software

Install the GPRS/WLAN Dongle driver software

1. Click on "install software".

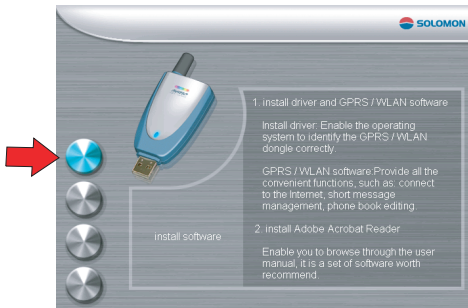

2. Install the software window. Click on left button.

- ① install driver
- ② install Adobe Acrobat Reader
- ③ exit.

