 
Thank you for purchasing the DIABLO Wireless Optical Notebook Mouse This manual will provide you with what you will need to know about your new mouse.

THIS PACKAGE INCLUDES

- One DIABLO 5 Button Wireless Optical Mouse
- One USB Storable Receiver



 


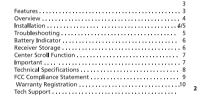

FEATURES

- PC MAC USB Compatible
- Precision Optical Sensor
 Long Range/Less Interference Wireless Connection
- Low Rattery Indicator
- 2 AAA Alkaline Batteries · Mini USR receiver
- 5 Function Buttons
- Ergonomic design (universal left and right handed)
- Compatible with USB V1.1 low-speed & USB 2.0 High Speed protocol

This WENGER Wireless Optical Notebook Mouse features an 800 DPI tracking resolution and an ergonomic 5-Function button operation. Please read this manual thoroughly and follow the instruction procedures to prevent from any equipment damage or personal injury.

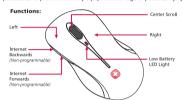

Battery Installation

- 1 Remove the hattery compartment cover (1) Install batteries with the positive (+) & negative (-) in the correct direction indicated
- by the battery compartment label. (2)

 3. Replace battery compartment cover. The red LED on the bottom of the mouse (3) will indicate power to the mouse. (CALITION: Do not point red Optical LED into your eyes or look directly into the optical emitter. Keep away from young children.)

Connecting the Mouse to the Receiver:

Plug in the USB Receiver to any available USB port or hub connected to your computer. (4) (Windows will now detect the mouse and install the required drivers automatically. The light will blink 3 when in use.)

CLICK ANY BUTTON - YOUR MOUSE IS NOW READY TO BE USED!

TROUBLESHOOTING

Synchronization:
Windows should have installed the drivers, recognizing the mouse. If not, mouse may be in sleep mode. Click any button once to wake it up. If this does not work. Changing the Wireless Connection Channel or a Manual Re-connect Mouse to Receiver may be needed.



Changing the Wireless Connection Channel:

The USB Receiver is equipped with auto changeable channels to lessen the chances of Interference with other devices. If the mouse experiences erratic behavior do the following:

1. Un-plug then re-plug in the USB receiver. (4)

2. Click any button and move the mouse around to test if successful. Manual Re-Connect Mouse to Receiver Mouse Connect Button

1. Unplug USB receiver. (4)

2 Holding mouse upside-down, remove battery cover (1) then remove one battery. (2) 3. Plug in USB receiver (4) until red LED flashes

on receiver. (6)

4. Use your finger to click and hold the Mouse "Connect" button (5). While holding the "Connect" button replace 1 battery and hold for 2 secs, the red mouse LED battery light with flash (7), release connect button.

5. Replace battery cover (1) and click any button or move the mouse to test if successful.

If mouse still won't work, re-start computer and follow instructions for nonecting The Mouse to the Receiver and Synchron nnecting The Mouse to the Receiver and Synchronization. he hibernate/suspend/standby mode of the notebook, if mouse does not operate rebooting, click any keys on keyboard, or unplug and repulg the USB receiver.

BATTERY INDICATOR

When battery becomes low, battery indicator LED on top of the mouse (7) will flash at least three times when moving or clicking the mouse. The mouse will continue to operate for a period of time depending on usage, but batteries should be replaced immediately.



RECEIVER STORAGE

For travel and loss prevention, store receiver in 8 cavity on the bottom of the mouse.

Storing receiver :

To store in the mouse bottom (8), place USB plug end of receiver (A) into place then span hottom of receiver into position (B). Receiver will now be locked into position

Removing Receiver

Using the tip of your finger, life receiver from USB plug end first (9) and remove from cavity The USB is now active and ready to be inserted into your computer's USB port.





CENTER SCROLL FUNCTION

1. Move the scroll wheel (10) up to scroll up, and 10 down to scroll down

2. Press scroll wheel down until it clicks and scroll icon appears on the application screen. (11) This will temporarly place the mouse curson into scroll mode.

3. Move the mouse to scroll up, down, left or right depending on the application function. Press scroll wheel down again to exit scroll mode.





- 1. For optimal performance, mouse should be no more than 3 ft. away from receiver.
- Due to orientation of USB ports on your notebook or hub, the combined connect button/status light may not be in view. 3. When Receiver is stored in bottom of the mouse, it automatically
- shuts off to save battery power.

 4. If the mouse is not moved, it will go into sleep mode. Mouse will wake when moved or button clicked.

 5. Optical sensors are rated for most surfaces. Avoid using the mouse on
- a reflective or mirrored surface as this might cause the mouse to function poorly or not at all.
- Before boarding an aircraft, remove batteries from the mouse or store the receiver in bottom of mouse (turning it off). The mouse can transmit radio frequency energy when it is activated. For technical assistance you may e-mail us at:
 TechSupport @AvenuesUSA.com or dial: 1-877-750-TECH

ECHNICAL SPECIFICATIONS

5 Button Ontical Mini Mouse Storable USB Receiver Standards: USB 1.1 and 2.0 Specification compatibility Operating Systems: MS Windows 98/SE/ME, 2000, XP, MAC OS X & above Receiver Power: USR Per-Port Current: Self-Power 500mA Mouse Power: 2 AAA Alkaline Batteries Dimension: (LxWxH): 106mm x 63m x 43mm Weight: 3.2 oz. Operation Temperature: 0°C ~ 40°C. Humidity: 5-90% RH non-condensing

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the ECC Rules. These limits are designed to provide reasonable protection against harmful interfer-ence in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following me

(1) Reorient or relocate the receiving antenna.
(2) Increase the separation between the equipment and the receiver. (3) Connect the equipment into an outlet on a circuit different from

(4) Consult the dealer or an experienced technician for help.



Tested To Comply With ECC Standards FOR HOME OR OFFICE USE

levice complies with Part 15 of the FCC Rule

FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user 's authority to operate the equipment.

REGISTRATION & WARRANTY PRODUCT REGISTRATION

Avenues suggests that you register your WENGER accessory shortly after your purchase. To register your WENGER accessory, please go to:

http://www.AvenuesUSA.com/registration LIMITED WARRANTY:

This product is warranteed to be free from manufacturing defects for a period of 1 year from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties expressed or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, contact us with your proof of purchase/date at the following:

Wenger Products, c/o AVENUES IN LEATHER 750 Hope Road, Tinton Falls, NJ 07724

or call toll free: 1-877-SWS-GEAR (797-4327) or e-mail: contactus@AvenuesUSA.com


@2006 Avenues In Leather, Inc. Avenues is and authorized licnesee of Wenger Licensing, AvenuesWenger are not responsible for technical or editorial errors or omissions contained herein. The information contained herein is subject to change without notice. Only warranties for WENGER products are set forth in accompanying



For technical assistance please dial: 1-877-750-TECH

Or email us at: TechSupport@AvenuesUSA.com

10

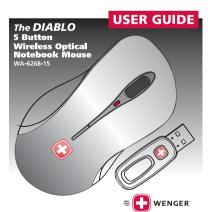

MAKER OF THE GENUINE SWISS ARMY KNIFE™