

User's Guide

SCANNER

DP66V Series

Compeye Corporation

EMI Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning! This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from the one which the receiver is connected to
- Consult the dealer or an experienced radio/TV technician for help

Use only shielded cables to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

User's Guide

Introduction

This guide shows you how to scan an image into the bundled image editing software, iPhoto Plus, using the scanner's TWAIN program. You can also use the TWAIN program to scan from any other image editing, OCR, or other programs that can accept scans. Typically, you may do so by using the familiar *select source* and *acquire* commands (various programs may use slightly different procedures.)

Getting ready


1. Click on the **Start** button at the lower left corner of your PC screen. Choose **Programs**, then **iPhoto Plus 4** and then **iPhoto Plus 4** again to open the application. (Note: iPhoto Plus 4 is the OEM version of iPhoto Express.)
2. In the **File** menu (at the upper left corner on your screen), click on **Acquire** and then click on **Select Source**.
3. Select a scanner data source. If the highlighted model name matches your scanner, click **OK**. If different, press down ∇ (just to the right) to select your scanner model and then click **OK**.
4. In the file menu, click on the **Acquire**, select **Image** and then choose **Acquire** (at the left bottom) to confirm. (Note: Be sure the box of **New Image** is marked.)
5. The TWAIN User's Interface (U.I.) appears. The TWAIN interface is where you really start scanning.

Start scanning

Before starting, first place the scan target (photo, document, or others) face down aligned with the center of the glass (where marked " ∇ "). Close the scanner lid, making sure that the scan target does not move while you close the lid.

Using TWAIN interface, Scanning is as easy as 1-2-3!


- 1.) Select the type of image to scan.
Select one of the three buttons: **Photo**, **Document** or **Magazine and Book**. TWAIN program will automatically determine the best settings to use for scanning. (You may change any default settings if you desire, and save all the changes for later use utilizing User Defined command.)
- 2.) Click **Preview**.
Click on the Preview button, this will activate the scanner. The image you are about to scan is shown in the main preview window. Adjust the size and make any other changes you like.
- 3.) Click **Scan**.
After previewing the images and making any changes, click on the Scan button. Sit back while your image is being scanned. Within a short time the result will be delivered to the iPhoto Plus. (If you decide not to do more scanning, close TWAIN interface by clicking on the Power Off button at the upper left corner. See also "7. Power Off" in TWAIN User's Interface section.)

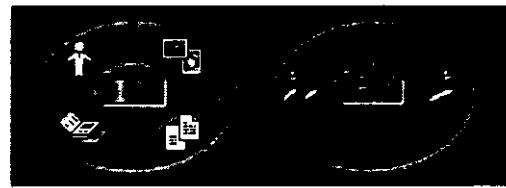

To make sure your scan comes out as best as possible, please spend a few minutes to familiarize yourself with functions described in the next TWAIN User's Interface section.

TWAIN User's Interface

Part I: For Beginners

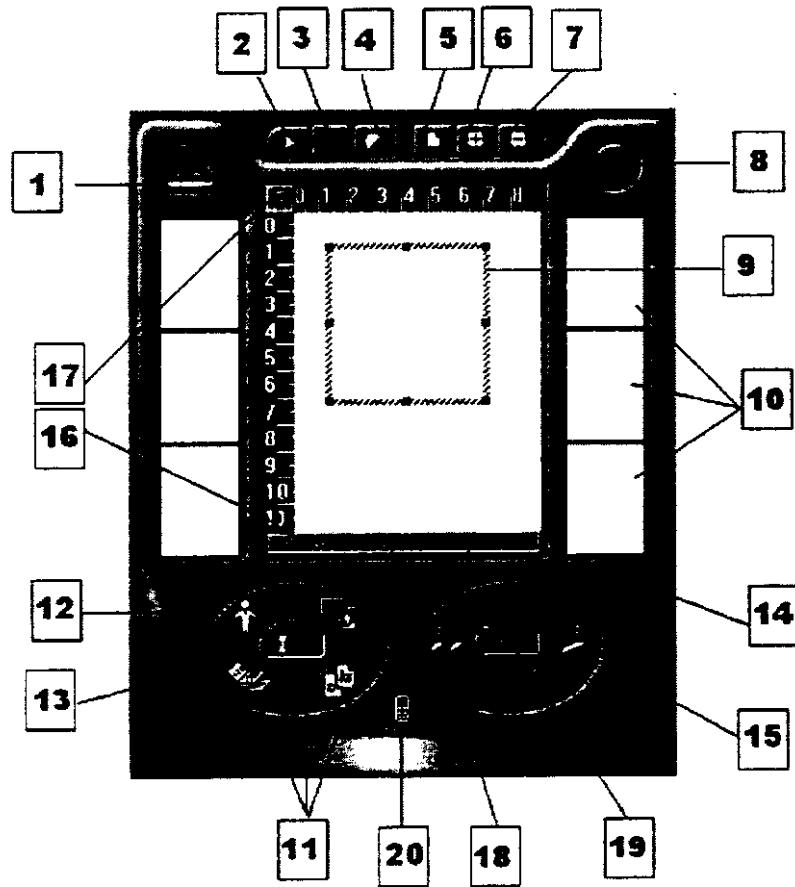

1. About



Contains information on how to contact us.

2. Selection



Lets you **select scan areas**.

Selection allows you to activate a specific scan area by drawing a rectangular crop frame over the image. To adjust the size, follow instructions in "5. Scan size".

3. Zoom



Zoom in or zoom out the viewing area.

Zoom lets you take a more detailed look at what you are scanning. Click the Zoom button and then move the magnifying glass cursor over the area you would like to zoom in and click the left mouse button. To zoom out, click the right mouse button.

4. Scan Speed



Press this button, this will pop up a menu which contains two items, speed mode and quality mode.

speed mode - with data compression
quality mode - without data compression

5. Scan Size



Select size of the scanning area.

There are 6 built-in size settings (Letter, A4, A5, B5, Business Card and Auto) that you may select from. Auto option is provided to automatically crop the edges of your images for scanning. You can also manually select the size by adjusting the crop frame in the preview window. To adjust the size, move your mouse cursor over one of the 8 handles (they look like small black boxes) around the perimeter of the crop frame. The cursor will change shapes, continue pressing the left mouse button and drag the cursor to adjust the shape.

6. Add Selection



Add additional scan areas for batch scanning.

Click on the Add Selection icon to create another crop frame. You may scan more than one area with different settings by a single click on the scan command. For example, one can be designated with color scan mode and another may be with grayscale. The two designations can then be manipulated and scanned separately.

7. Delete Selection



Remove specific active scan areas.

To delete, select the specific crop frame and then click on the Delete Selection button.

8. Power Off



Click here to close the TWAIN interface.

When you want to leave the TWAIN User's Interface, click on Power Off button. Follow steps 2-4 from the *Getting ready* section to reopen the TWAIN interface.

9. Main preview window



Displays a preview of the image to be scanned.

Here you can see how your scan will appear after scanning. The crop frame shows you the area of the image that will be scanned.

10. Alternative preview image



Provides an alternative look of the preview image.

In addition to a preview image inside the main preview window, there are six thumbnail displays of the image on the right and left side of the window. Each represents an alternative look of the preview image. You can replace the image inside the main preview window with any preferred alternative. Click on your preference and immediately it will become the one inside the main preview window.

11. Document Magazine and Book Photo



Lets you select the type of scan target.

Click on a specific icon and then you can activate settings recommended for that particular type of scan target: Document for black and white documents, Photo for color photos, and Magazine and Book for magazines and books with graphics.

12. User Defined



Click here to save , edit and select your preferred settings.

User Defined includes three options: save current settings, edit and select previously saved settings. You can create your own settings and save them for future use at any time by simply clicking on Save Current Setting. Choose the Edit command and you can call up saved settings for editing whenever you desire. All previously saved settings are listed by their names under the Edit command. To select any settings for your current scan task, click on the desired name and its settings will be immediately applied.

13. Scan Mode



Lets you choose the color mode to scan.

There are four modes that you can select for scanning: True Color, Grayscale, Line Art (Black and White) and Halftone.

True Color

Grayscale

Lineart

Halftone

14. Message/Progress bar



Gives you a quick look at the size of the image to be scanned./Tells you the progress of the scan task.

The message bar tells you the size of the image in "width x height" and converts it into disk space needed in "bytes (KB)". When the scanning is taking place, the message bar turns into a progress bar.

 
15. Scan/Abort



Click here to scan the image or to abort the scanning.

Click on the Scan button after you have made all your selections. When the scanning starts, Preview/Scan icon changes into an Abort button. Press this button if you decide to cancel the scanning. You can also abort a scan by pressing the ESC key on your keyboard.

16. Preview range indicator



Lets you set the range for previewing.

Preview range indicator is a red Δ located by the left of the preview window. It specifies the range of the preview task, only the portion above the indicator is to be previewed.

17. Unit



Lets you switch between "cm" and "in".

18. Preview



Click here to preview the image.

Preview lets you quickly view the image you are about to scan. It helps to select the scanning area and preview effects of different settings before scanning.

19. Resolution



Lets you select frequently used resolutions for scanning.

Resolution is the level of detail in an image, expressed in dots per inch (dpi). High resolution value produces sharper image but takes more time and memory.

20. Advanced Settings



Click here to evoke the advanced settings dialog box.


For more detail scanning, click here to customize features such as resolution, exposure time, brightness, contrast Refer to Part II for more advanced settings.

Check Scanner



If the scanner is not correctly installed, the Check Scanner button appears instead of the Preview/Scan button. See Quick Reference guide for more help.

Part II: For Advanced Users

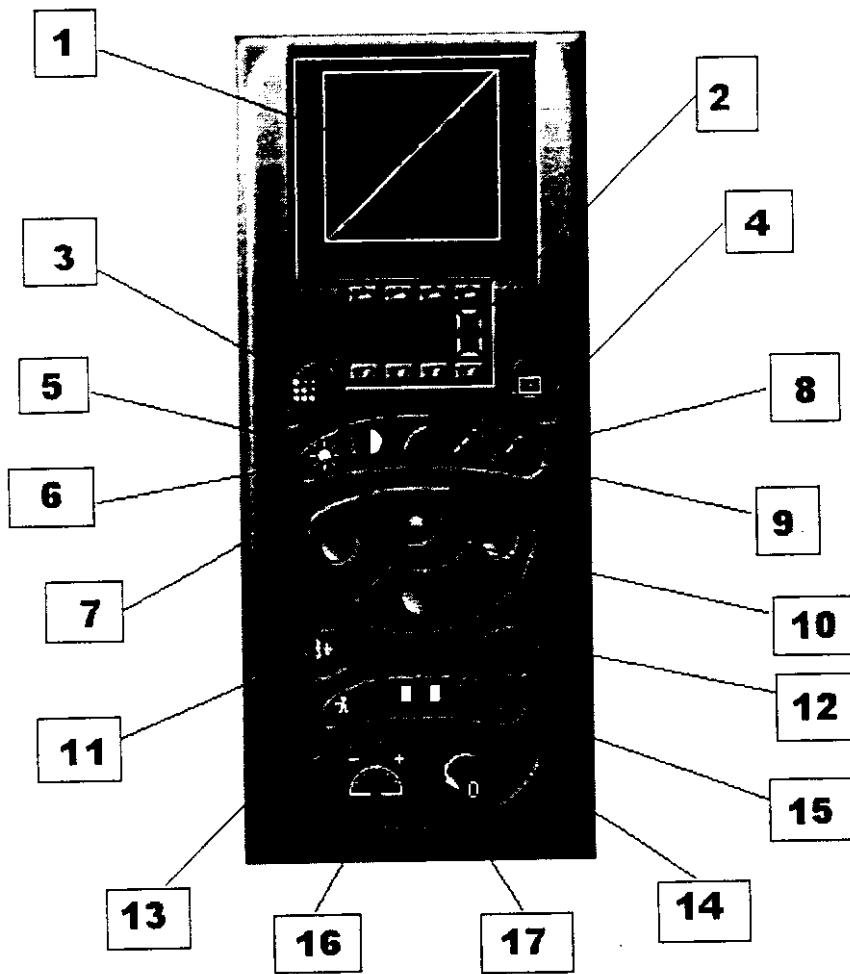

1. Display window



This is a display window for the settings you specify.

2. Liquid Crystal Display (LCD) box



LCD box is where you enter or adjust the value of resolution, exposure, brightness, contrast, gamma, highlight and shadow. Each digit can be adjusted individually. Press  button to increase the value and  to decrease it. For example, when you want to change a resolution value from 320 to 150, follow these two steps:

- 1) Press down  under digit 3 and hold until it becomes 1.
- 2) Press down  above digit 2 and hold until it becomes 5.

3. Resolution (10 to 4800/9600 dpi)



The higher the resolution, the sharper output you will get. Using too high a resolution, however, unnecessarily increases the file size and scanning time. To adjust the resolution, see instructions in "2. Liquid Crystal Display (LCD) box".

4. Color Matching



Color Matching function provides the best accuracy and consistency of the scanned color image.

On - with Color Matching function
Off - without Color Matching function

5. Brightness (-127 to 128 for Line Art mode and -100 to 100 for other scan modes)



Brightness is the balance of light and dark shades in an image. Increasing the value creates a brighter image and vice versa. To adjust the brightness, see instructions in "2. Liquid Crystal Display (LCD) box".

6. Contrast (-100 to 100)



Contrast is the range between the darkest and lightest shades in an image. It determines the number of shade you get. When the contrast value is increased, the high-toned areas of an image become lighter and the low-toned areas become darker. To adjust the contrast, see instructions in "2. Liquid Crystal Display (LCD) box".

7. Gamma (-100 to 100)



Gamma is the slope of the line that represents output value versus input value. Adjusting of the gamma changes the mid-toned areas of an image without dramatically affecting its highlights and shadows. To adjust the gamma, see instructions in "2. Liquid Crystal Display (LCD) box".

8. Highlight (-100 to 100)



Highlight is the lightest portion of an image. Its value can range from -100 to 100. (The

default value is 0.) To increase the lightness of an image, increase the highlight value and vice versa. To adjust the highlight , see instructions in "2. Liquid Crystal Display (LCD) box".

9. Shadow (-100 to 100)



Shadow is the darkest portion of an image. When the shadow is set to a higher value, the image becomes brighter. To adjust the shadow , see instructions in "2. Liquid Crystal Display (LCD) box".

10. R, G, B, Master and True Gray Channel



Allow you to adjust the brightness, contrast, gamma, highlight and shadow of an image through four different channels. In Color scan mode, they are Red, Green, Blue and Master Channel which allows simultaneous adjustment for red, green and blue. In Grayscale/Lineart/Halftone scan modes , they are Red, Green, Blue and True Gray Channel (for CP models only).

Channel selection tip:

When scanning in Grayscale, Lineart or Halftone, choose True Gray channel to obtain the best scan output.

11. Filters



Filters allow you to create special effects for your images. Options include Average, Blur, Sharp, Edge Enhance and De Screen. Click on Filters and then choose your preferred options. Changes will be immediately made to the main and six alternative preview images.

12. Halftone Pattern



Halftone is a type of single-bit image composed of black dots that create the illusion of shades of gray. There are 12 patterns to let you choose from when the scanning is set in Halftone mode. To use, simply click on Halftone Pattern icon and then select your desired pattern. The change will be applied to the image in the preview window in real time.

13. Invert



The Invert tool allows you to convert colors of an image into complementary color values. For example, blue turns into yellow and black turns into white. This tool is mostly used for producing special effects for your images.

14. Remove Dark Edge



When the scan target is not properly placed on the glass under the lid of the scanner, it might cause some unnecessary dark edges around the previewed image. To remove them, first select the image and then click on the Remove Dark Edge button to activate its function. When the

image is scanned, these dark edges will be automatically whitened .

15. Deskew



Deskew function is for sheet feed scanners only. It is disabled for all flatbed scanners.

16. Calibrate



Calibration is to adjust your scanner device to ensure accurate scan output. Through the process of calibration, images can be correctly captured by your scanner and then be transferred accurately to your PC monitor.

17. Reset



Reset button allows you to clear all the changes you have made and to reset all settings back to their original default value.

SmartKey

The **SmartKey** includes 6 function keys which correspond to the buttons on the scanner and could be also acquired at the bottom right corner of the Windows screen. You can simply click on the Icon or press the button on the scanner to perform any scanning-related tasks. You can also adjust the default settings to achieve the best performance of the scanner.

The 6 functions are:

Preview

Color Scan

Copy

OCR

Fax

E-mail

And there are also another 2 buttons in the **SmartKey**:

Enable / Disable

Setup




Preview

This is the Preview button.

When you click the Preview, or press the Preview button on the scanner, you activate the scanner automatically using the following process:

1. Activate iPhoto Plus
2. Evoke TWAIN UI (User Interface)
3. Scanner Previews and shows the previewed image in the main preview window

If you are satisfied with the previewed image, you can click on the other to perform other tasks. Otherwise, relocate your scanning object and use Preview again.

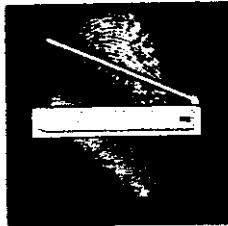

Color Scan

The Color Scan button which provides the quickest way to scan a **photo**, **A4** or other size image.

When you click on the Color Scan Icon, or press the Color Scan button on the scanner, you activate the scanner automatically according to following process:

1. Activate iPhoto Plus
2. Evoke TWAIN UI (User Interface)
3. Scanner Previews and auto-edges the previewed image (or adjust area by mouse)
4. Scan the selected area of the image
5. Close UI and display the scanned image.


The default settings of Color Scan are:

Scan size: By Auto-edging

Resolution: 300 dpi

Scan Mode: Color

If you are satisfied with the scanned image, save the image file into the hard disk for any image editing. Otherwise, relocate your scanning object and perform the scanning again, or use the Main UI to perform more specific tasks.

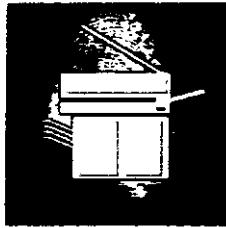

Copy

The Copy button provides the quickest way to scan a document and print it out using a connected printer, like a copy machine. See the [Setup](#) section to learn more about how to set up your printer driver.

When you click on the Copy icon, or press the Copy button on the scanner, you activate the scanner automatically using the following process:


1. Scan document / image
2. Print it out via default connected printer.

The default settings of Copy button are:

Scan size: A4, 8.5 x 11.7 inch (216 x 297 mm)

Resolution: 300 dpi

Scan Mode: Black and White

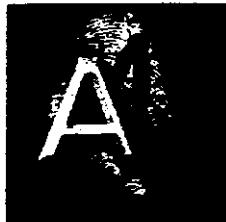

OCR

The OCR button provides the quickest way to perform OCR function.

When you click on the OCR Icon, or press the OCR button on the scanner, you activate the scanner automatically using the following process:

1. Activate TextBridge OCR
2. Evoke TWAIN UI
3. Scan the object [GO]
4. Close UI and display the scanned image
5. Recognize Document
6. Add more page?

No: Save the file by Key in File Name as .rtf format

Yes: Evoke TWAIN UI and continue above steps


Then use your word processor to edit the file.

The default settings of OCR function are:

Scan size: A4, 8.5 x 11.7 inch (216 x 297 mm)

Resolution: 300 dpi

Scan Mode: Black and White

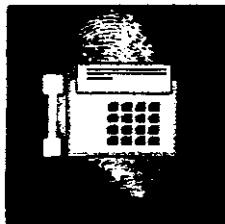

Fax

The Fax button provides the quickest way to fax a scanned document using the connected modem or LAN. See the [Setup](#) to learn how to set up your fax driver.


When you click on the Fax, or press the Fax button on the scanner, you activate the scanner automatically using the following process:

1. Scan the object
2. Select in More Page Dialog by user
3. Go to Fax Driver

To complete the fax action, key in Subject and Message, select fax number or destination address are necessary.

The default settings of the Fax button are:

Scan size: By auto-edging
Resolution: 300 dpi
Scan Mode: Black and White

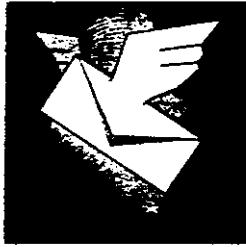

E-mail

The E-mail button provides the quickest way to send a scanned document or image file using the connected modem or LAN.

When you click on the E-mail Icon, or press the E-mail button on the scanner, you activate the scanner automatically using the following process:

1. Preview and auto-edge
2. Scan the selected area
3. Select in More Page Dialog by user
4. Go to MS Exchange to send attached file(s)

To complete E-mail function, user should be familiar with MS Exchange applications. Key in Subject and Message as well as E-mail Address are necessary.

The default settings of the E-mail button Icon are:

Scan size: By Auto-edging
Resolution: 75 dpi
Scan Mode: Color



Enable / Disable

The Enable/Disable Icon allows user to enable or disable the polling from PC to scanner. When you select Enable, polling from PC to scanner is activated. If you are not going to use the scanner, we recommend user to select Disable polling so that your PC system's performance could be highly utilized. The small Icon at the bottom right corner shows the polling status.



Setup

This Setup page allows the user to customize the definition for each key. User chooses which key to be customized from the “**Choose Your Key**” window and set the desire action for this key from the list box below.

The **Add** button allows user to add additional applications for the **SmartKey** to launch. The **Remove** button removes applications in the list box.

When the **OK** button is pressed, a new icon for the action the user chooses will replace the old icon on the main window's **SmartKey** button.

When the **Reset** button is pressed, all button definitions will be reset to the default settings.

Moreover, Setup page also allows the user to select an appropriate **Printer Driver** or **Fax Driver**. All available drivers will be listed in the window both for printer and fax machine. Make sure your default connected devices are correctly installed. Then press **OK** to complete the setup.

Understanding the functions listed above will help you know how to use the **SmartKey**.

Enjoy the colorful life by using our innovated products!