

# Index

---

## A

A2DP 182

ActiveSync

- ActiveSync mode 43
- set up 117
- synchronize with computer 118
- synchronize with Exchange Server 143

Add and remove programs 215

Airplane Mode 66, 240

Alarm Clock 72

Album 204

Attachment

- add to e-mail 137
- automatically receive attachments 142
- download 139

Audio Booster 213

Auto Volume Control 232

## B

Back cover

- remove 28

Backlight 235

Basic settings 235

Battery

- battery information 29
- battery time 250
- charge battery 31
- install 30
- remove 30

Bluetooth

- about 179
- car kit phones 187
- hands-free headset 182
- modem 177
- modes 179
- partnership (pairing) 180
- print 186
- send and receive information 183
- SIM Access Profile (SAP) 187
- stereo headset 182
- synchronize 120
- turn on and off 240
- visible 179

## C

Call History 55

Calling

- from e-mail message 47
- from meeting request or reminder 49
- from Phone screen 45
- from text message 47

Camera

- about 195
- advanced options 201
- capture modes 195
- icons 198
- Menu Panel 199
- zooming 200

- Car kit phones 187
- Clear Storage 245
- Clock & Alarms 232
- Comm Manager 234, 239
- Company Directory 150
- Conference call 59
- Configure data connection settings 32, 238
- Connect device to Internet
  - dial-up 157
  - GPRS/3G 156
  - Wi-Fi 153
- Connection Setup 32, 35, 238
- Contacts 79, 217
- Contacts Picture capture mode 196
- Copy
  - contacts to SIM card 227
  - copy and manage files 229
  - media files from PC to device 209
  - SIM contacts to device 226

## D

- Device name 236
- Direct Push 145, 240
- Disconnect data connection 240
- Disk Drive mode 44
- Download
  - download complete e-mail 138
  - e-mail download settings 136, 141
  - file attachments 139
  - Java applications 220
  - location data 193
  - synchronize e-mail 141
  - web feeds 171

## E

- E-mail
  - Internet e-mail account (POP3/IMAP4) 134
  - mail server settings 135
  - Mail tab (Home screen) 85
  - settings (POP3/IMAP4) 136
  - synchronize 113, 141, 143
- Emergency call 50
- Emoticon
  - MMS 131
  - Windows Live Messenger 170
- Entering Information
  - On-screen 106
  - QWERTY keyboard 103
- Excel Mobile 225
- Exchange Server 143

## F

- Facebook updates and events 81
- Favorite contacts 73
- File Explorer 230
- Find contact
  - Company Directory 150
  - on device 218
- Finger gestures 41
- Finger panning 42
- Finger scrolling 41
- Focus
  - auto-focus 196
  - touch focus 196
- Forward e-mail 139
- Full QWERTY 107

**G**

- G-Sensor 233
- Google Maps 189
- GPS 191, 193

**H**

- Hard reset 244, 245
- Home screen 33, 67

**I**

- IMAP4 134
- Input methods
  - Full QWERTY 107
  - Phone Keypad 109
- Input Panel 106
- Input Selector arrow 106
- International call 50
- Internet 153
- Internet e-mail 134
- Internet Sharing 176
- Internet tab (Home screen) 90

**J**

- JBlend 220
  - install MIDlets/MIDlet suites from device 220
  - install MIDlets/MIDlet suites from Internet 220
  - manage MIDlets/MIDlet suites 221
  - update a MIDlet/MIDlet suite 221
- JETCET Presentation 222

**L**

- Library
  - Music tab (Home screen) 98
  - Windows Media Player Mobile 208
- Live Messenger 169

**M**

- Mail tab (Home screen) 85
- Meeting request 149
- Memory 39, 249
- Messages tab (Home screen) 84
- Messaging
  - about 123
  - e-mail 133
  - multimedia (MMS) 129
  - text (SMS) 125
- Messenger 169
- microSD card 30
- Microsoft Office Mobile 225
- MMS
  - about 129
  - add audio clip 131
  - add photo/video 130
  - add text 131
  - blacklist 133
  - create MMS message 130
  - MMS settings 129
  - reply message 132
  - view message 132
- MMS Video capture mode 196
- Modem
  - Bluetooth 177
  - USB 177
- Multimedia 129, 195
- Music tab (Home screen) 97

## N

- News channels (web feeds) 171
- Now Playing
  - Music tab (Home screen) 97, 98

## O

- Office Mobile 225
- OneNote Mobile 225
- Opera Mobile 158

## P

- Panorama capture mode 196
- Password 242
- People tab (Home screen) 73
- Phone Keypad 109
- Phone services 238
- Photo capture mode 195
- Picture Theme capture mode 196
- PIN 241
- Playlists
  - Music tab (Home screen) 99
  - Windows Media Player Mobile 211
- Play music
  - Music tab (Home screen) 97
  - Windows Media Player Mobile 208
- Play video
  - Album 207
  - Windows Media Player Mobile 208
- Podcasts 175
- POP3 134
- PowerPoint Mobile 225
- Presentation (JETCET Presentation)
  - create 222
  - display slideshow 224

## Q

- QuickGPS 193
- Quick menu 39, 240
- QWERTY keyboard 103

## R

- Regional Settings 233
- Reply
  - e-mail 139
  - MMS 132
  - text (SMS) 127
- Reset
  - clear storage 245
  - hard reset 243
  - soft reset 243
- Review screen (Camera) 198
- Ring tone 237
- Ring type 237
- RSS Hub
  - about 171
  - headline list 174
  - news channels 171
  - podcasts 175
  - summary view 175

## S

- Screen text size 236
- Send
  - e-mail 137
  - MMS message 130
  - text message (SMS) 125
- Settings (Connections tab)
  - Advanced Network 234
  - Bluetooth 234

- Connections 157, 234
  - Connection Setup 234, 238
  - Domain Enroll 234
  - USB to PC 120, 235
  - Wi-Fi 235
  - Wireless LAN 155
- Settings (Personal tab)
- Buttons 231
  - Input 231
  - Keyboard Sliding Sound 231
  - Lock 231, 242
  - Menus 231
  - Owner Information 231
  - Phone 231, 237, 238
  - Sounds & Notifications 232, 237
  - Today 232
- Settings (System tab)
- About 232, 236
  - Auto Volume Control 232
  - Certificates 232
  - Clear Storage 232, 245
  - Clock & Alarms 232
  - Customer Feedback 232
  - Device Information 232
  - Encryption 233, 243
  - Error Reporting 233
  - External GPS 233
  - G-Sensor 233
  - Managed Programs 233
  - Memory 233
  - Power 233
  - Regional Settings 233
  - Remove Programs 216, 233
  - Screen 233, 236
  - Task Manager 233, 240
  - TouchFLO 234
  - TV Out 234
  - Windows Update 234, 246
- Settings tab (Home screen) 102
- SIM Access Profile (SAP) 187
- SIM card
- install 28
  - PIN 241
  - remove 29
- SIM Manager
- about 226
  - copy contacts to SIM card 227
  - copy SIM contacts to device 226
  - create SIM contact 226
- Sleep mode 32
- Smart Dial 45
- SMS 84, 125
- Soft reset 243
- Sounds & Notifications 232, 237
- Speakerphone 53, 64
- Specifications 249
- Speed Dial 56
- Start screen
- add a program icon 38
  - launch a program 38
  - open 37
  - remove or replace an icon 38
- Status icons 35
- Stock tab (Home screen) 92
- Storage card
- encrypt 243
  - install 30
- Straight Talk 59
- Streaming Media 166

## 230 Index

### Synchronize

- ActiveSync 118
- change information types 119
- music and videos 121
- via Bluetooth 120
- Windows Media Player 209
- Windows Mobile Device Center 114
- with computer 118
- with Exchange Server 143

## T

Task Manager 233, 240

### Text messages

- copy to SIM card 127
- create new message 125
- Messages tab (Home screen) 84

Text size (screen) 236

### Troubleshoot

- sync connection 120
- Windows Media Player Mobile 212

Turn device on and off 31

Turn phone function on and off 66, 240

TV Out 234, 247

## U

Updates and events (Facebook) 81

USB modem 177

USB to PC 120, 235

## V

Vibrate 35, 40

Video call 56

Video capture mode 195

### View image

- Album 205
- Photos and Videos tab (Home screen) 95

Voice call 45

Voicemail 50

Volume 40

## W

Weather tab (Home screen) 100

Wi-Fi 240

Windows Live 168

Windows Live Messenger 169

Windows Media Player Mobile 208

Windows Mobile Device Center 114

Windows Update 234, 246

Word Mobile 225

WorldCard Mobile 227

World Clock 70

## Y

### YouTube

- open 162
- Program Guide 163

## Z

### Zooming

- Camera 200
- Opera Mobile 160
- zoom bar 43