Basics


Inside the box

You will find the following inside the box:

- Phone
- Battery (preinstalled)
- microSD card (preinstalled)
- USB cable
- 3.5mm stereo headset
- Power adapter
- Power plug
- Quick start guide
- Safety and regulatory guide

Your phone

Front panel

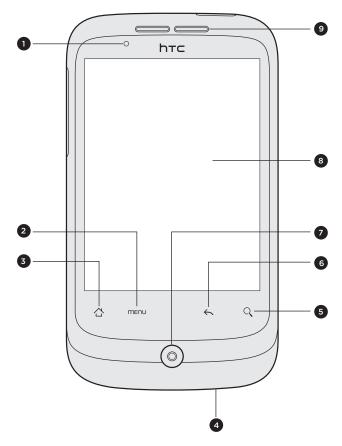


1 Notification LED
2 MENU
3 HOME
4 Microphone
5 SEARCH
6 BACK
7 Optical trackball
8 Touch screen
9 Earpiece

Top panel




- 3.5mm audio jack
- 2 POWER

Left panel

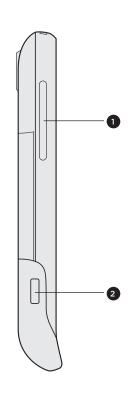

- 1 VOLUME UP/DOWN
- 2 USB connector

Back panel

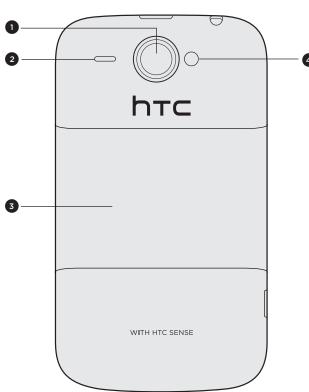


- 5 megapixel camera
- 2 Speaker
- 3 Back cover
- 4 LED flashlight

Back cover

Removing the back cover


Remove the back cover to access the battery compartment, SIM card slot, and storage card slot.

- 1. With the phone turned off, hold your phone securely with the front facing down.
- 2. With your thumb or finger, lift the back cover off from the small opening on the top of your phone.

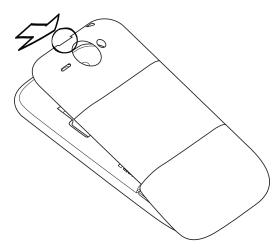

Replacing the back cover

- 1. Dock the phone onto the inside bottom of the back cover.
- 2. To close the back cover, press the sides and the top part of the back cover towards the phone. You'll hear a click when the back cover is locked in place.

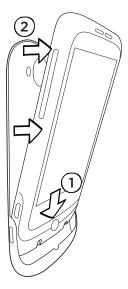

SIM card

The SIM card contains your phone number, service details, and phonebook/message memory. Your phone supports both 1.8V and 3 V SIM cards.



Some legacy SIM cards may not function with your phone. You should consult with your mobile operator for a replacement SIM card. There may be fees for this service.

Inserting the SIM card


1. Take the back cover off.

See "Removing the back cover."

2. Take out the battery.

See "Battery."

3. Insert the SIM card with its gold contacts facing down and its cut-off corner facing out.

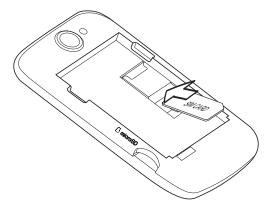

3. Push the SIM card all the way in.

Removing the SIM card


1. Take the back cover off.

See "Removing the back cover."

2. Take out the battery.

See "Battery."

3. Press and hold the small tab that's on the front side of the SIM card slot. Then push the SIM card out from the back of the slot.

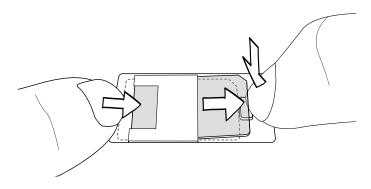


Battery

Your phone comes with a rechargeable Lithium-ion battery and is designed to use only manufacturer-specified original batteries and accessories. Battery performance depends on many factors, including network configuration, signal strength, the temperature of the environment in which you operate your phone, the features and/or settings you select and use, items attached to connecting ports, and your voice, data, and other program usage patterns.


Removing the thin film from the battery

When you take your phone out from the box and remove the back cover for the first time, you'll find that the battery is inside the phone with a thin film. Pull the upper flap of the film to release the battery. Make sure to peel off the film before placing back the battery.

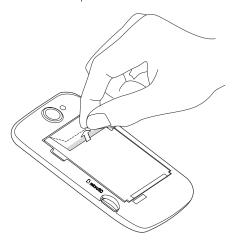


Inserting the battery

Line up the battery's copper contacts with the connectors inside the battery slot. Then gently push the battery into place.

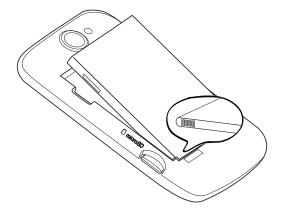

Removing the battery

Lift out the battery from the small opening on the left side of the battery compartment.

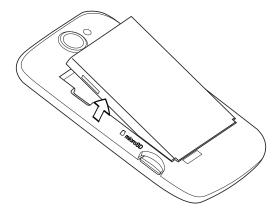


Charging the battery

The battery is partially charged when shipped. Before you turn on and start using your phone, it is recommended that you charge the battery. Some batteries perform best after several full charge/discharge cycles.



- Only the power adapter and USB sync cable provided with your phone must be used to charge the battery.
 - Do not remove the battery from the phone while you are charging it using the power or car adapter.
 - 1. Attach the power plug to the power adapter.
 - 2. Plug the power adapter into the USB connector on the left side of your phone.

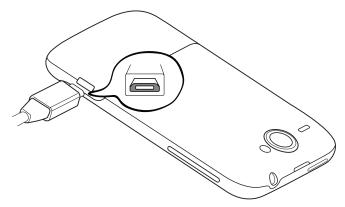

3. Plug in the power adapter to an electrical outlet to start charging the battery.

As the battery is being charged, the notification LED shows a solid red light when the battery is being charged. The light turns to solid green when the phone is fully charged.

When you charge the battery while the phone is on, the charging battery icon (🔼) is displayed in the status bar of the Home screen. After the battery has been fully charged, a full battery icon (🚾) will be displayed in the status bar of the Home screen.




As a safety precaution, the battery stops charging when it overheats.

Storage card

Use the microSD card to store your photos, videos, and music. You'll find the microSD card already inserted in your phone.

Inserting the storage card

- 1. Take the back cover off.
 - See "Removing the back cover."
- 2. Insert the microSD card into the slot with its gold contacts facing down and push it all the way in.

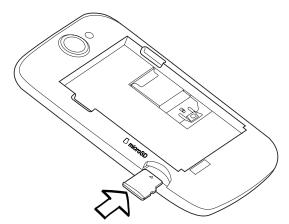

Removing the storage card

- 1. Take the back cover off.
 - See "Removing the back cover."
- 2. Pull the storage card out from the slot.

Removing the storage card while the phone is on

When you need to remove the storage card while the phone is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.

- 1. On the Home screen, press MENU, and then tap **Settings**.
- 2. Scroll down the screen, and then tap SD card & phone storage.
- 3. Tap Unmount SD card.
- 4. Remove the storage card by following the steps in "Removing the storage card."

Specifications

CPU speed	528 MHz
Platform	Android™ 2.1 (Éclair) with HTC Sense™
Memory	ROM: 512 MB RAM: 384 MB
Dimensions (LxWxT)	106.75 x 60.4 x 12.19 mm (4.2 x 2.4 x 0.48 inches)
Weight	118 grams (4.16 ounces) with battery
Display	3.2-inch touch-sensitive screen with 240 x 320 QVGA resolution
Network	HSDPA/WCDMA: • Europe/Asia: 900/2100 MHz • Upload speed of up to 384 kbps and download speed of up to 7.2 Mbps Quad-band GSM/GPRS/EDGE: • 850/900/1800/1900 MHz (Band frequency and data speed are operator dependent.)
Onscreen navigation	Optical trackball
GPS	Internal GPS antenna
Sensors	G-Sensor Digital compass Proximity sensor Ambient light sensor
Connectivity	 Bluetooth® 2.1 with FTP/OPP for file transfer, A2DP for wireless stereo headsets, and PBAP for phonebook access from the car kit Wi-Fi®: IEEE 802.11 b/g 3.5 mm stereo audio jack Standard micro-USB (5-pin micro-USB 2.0)
Camera	5 megapixel color camera with auto focus and flash
Audio supported formats	 Playback: .aac, .amr, .ogg, .m4a, .mid, .mp3, .wav, . wma (Windows Media Audio 9) Recording: .amr
Video supported formats	Playback: .3gp, .3g2, .mp4, .wmv (Windows Media Video 9)Recording: .3gp
Battery	 Rechargeable Lithium-ion battery Capacity: 1300 mAh Talk time: Up to 440 minutes for WCDMA Up to 490 minutes for GSM Standby time: Up to 690 hours for WCDMA
Expansion slot	microSD™ memory card (SD 2.0 compatible)
AC adapter	Voltage range/frequency: 100 ~ 240V AC, 50/60 Hz DC output: 5V and 1A
Special features	Friend Stream, App Sharing



Specifications are subject to change without prior notice.