



Smartphone

User Manual

Congratulations on the purchase of your new Windows Mobile™ Smartphone.

Please read before operating your device.

THE DEVICE IS NOT CHARGED WHEN YOU TAKE IT OUT OF THE BOX.

DO NOT REMOVE THE BATTERY PACK WHEN THE DEVICE IS CHARGING.

WHEN INSERTING YOUR SIM CARD, MAKE SURE THE DEVICE IS POWERED OFF, AND THAT THE SIM CARD SNAPS INTO THE SOCKET.

YOUR WARRANTY IS INVALIDATED IF YOU OPEN OR TAMPER WITH THE DEVICE'S OUTER CASING. (For more information, see the enclosed warranty card)

EXPLOSIVE ATMOSPHERES

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations. Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fuelling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Contents

Chapter 1	Getting Started	7
1.1	Knowing your phone	8
1.2	Status indicators	13
1.3	Setting up your phone	14
1.4	Accessories	18
1.5	Navigating	19
1.6	Entering text and numbers	23
1.7	Securing your phone	27
Chapter 2	Using Your Phone	29
2.1	Making a call	30
2.2	Receiving a call	33
2.3	Photo Contacts (Caller ID)	35
2.4	In-call options	44
2.5	Retrieving a voice mail message	45
2.6	Reviewing your calls	45
2.7	Speed Dials and Voice Tags	47
2.8	Advanced dialing information	52

Chapter 3	Using Your Camera	55
3.1	Camera mode	56
3.2	Album mode	67
Chapter 4	Personalizing Your Phone	75
4.1	Customizing phone settings	76
Chapter 5	Getting Connected	85
5.1	Connecting to the Internet	86
5.2	Pocket Internet Explorer	89
5.3	Bluetooth	93
5.4	Modem Link	96
Chapter 6	Messaging Features	97
6.1	Setting up accounts	98
6.2	Managing accounts	100
6.3	Creating messages	101
6.4	Receiving E-mail, and SMS messages	104
6.5	Viewing message folders	108
6.6	Managing messaging	110
6.7	Instant messaging	113
6.8	MMS messaging	117

Chapter 7 Synchronizing 125

- 7.1 Using ActiveSync 126
- 7.2 Installing ActiveSync 127
- 7.3 Server ActiveSync 129
- 7.4 Other information 133

Chapter 8 Applications 137

- 8.1 Using Contacts and Beaming 139
- 8.2 Using Calendar 147
- 8.3 Using Tasks 150
- 8.4 Using Voice Notes 152
- 8.5 Using Windows Media Player 153
- 8.6 Using Calculator 158
- 8.7 Using Java MIDlet Manager 159
- 8.8 Games 164

Chapter 9 System Management 167

- 9.1 Adding and removing programs 168
- 9.2 File Manager 169
- 9.3 Task Manager 176
- 9.4 Space Maker 178

Appendix and Index **183**

Regulatory Notices 184

Troubleshooting 193

Specifications 199

Index 201

Chapter 1

 
Getting Started

- 1.1** Knowing your phone
- 1.2** Status indicators
- 1.3** Setting up your phone
- 1.4** Accessories
- 1.5** Navigating
- 1.6** Entering text and numbers
- 1.7** Securing your phone



1.1 Knowing your phone

This section will help you to familiarize yourself with your phone's hardware, including a basic introduction to the buttons and features found on the top, bottom, front, side and rear of the phone. A brief explanation of the LED indicator is also provided.

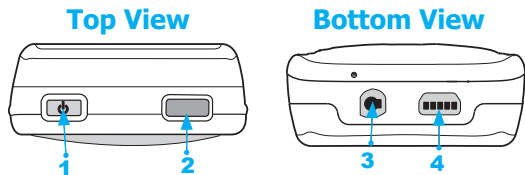

1. Power button

When the phone is turned Off, press and hold the **Power** button to turn it On, and vice versa. When the phone is On, press and quickly release the **Power** button to display the **Quick List**, which allows you to change or lock your phone's setting.

2. Infrared port

 
Allows your phone to receive data from another IR-compatible device through beaming.

3. Earphones plug

Plug the earphones jack here to use the handsfree mode or listen to sound or multimedia files.


4. Mini USB connector

Attach the mini-USB cable here to synchronize the phone with your desktop or notebook PC, or charge its battery.

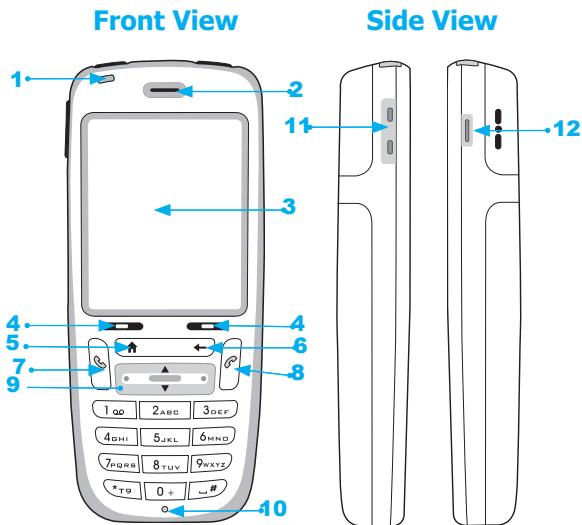

1. LED indicator

The LED Indicator notifies you of the battery and network status of your phone. The indicators are described on the next page.

LED Indicator	Status
Solid green	Battery is fully charged
Blank	Battery case is empty
Solid Amber	Battery is charging
Flashing green	Network is attached
Flashing red	Battery very low (less than 4%)
Flashing blue	Bluetooth set to "On" mode or "Discoverable" mode
Flashing amber	Battery temperature is hotter or colder than the functional limits of 0 to 48 degrees Celsius, and has stopped charging
Amber / green LED off	Battery fault. The "Battery Fault" icon is displayed (). In this case, the flashing green LED can be recovered by unplugging the AC adaptor.
Dim	Network is disconnected.

2. Speaker

3. Display screen

The status indicators concerning the current mode, battery strength, the current activity, or active program are displayed at the top. In the center of the screen is the active menu or program. At the bottom of the screen are the menus or commands related to the active program.

4. Left/Right softkey

Performs the function shown on the screen immediately above the key.

5. Home key

Press to return to the *Home* screen.

6. Back key

Press to go back to the previous screen, or to backspace over one character in a text field. Press and hold to delete the entire contents of the field.

7. Talk key

Press to start a call or answer an incoming call. Press and hold to turn the speakerphone mode on or off, or switch between an active call and a call on hold.

8. End key

Press to end a call; press to return to the *Home* screen; or press and hold to lock the keypad.

9. Navigation Pad

Use to scroll selection up, down, left, or right. Press straight down on the center of the Navigation Pad (known as the "Action" button) to select. In a text field, use the navigation pad to move the cursor right or left, character by character.

10. Microphone

 
11. Volume Up/Down button

Lets you adjust the volume during the talk mode. During the standby mode, press and hold the **Volume Down** button to launch the **Voice Tag** feature. Press and hold the **Volume Up** button to launch the **Voice Notes** recorder.

12. Camera button

Launches the camera mode, if not already in camera mode. If already in camera mode, pressing this button captures a still image or begins capturing a video clip, depending on the current capture submode.

Rear View

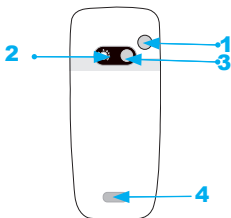

1. Car antenna connector

Allows you to attach your phone to the car antenna for better network signal reception. Simply peel off the rubber cap and connect the antenna jack. Replug the rubber cap if unused.

2. Camera lens

Capture still images or video clips.

3. Self-Portrait mirror

















Position the phone until the mirror reflects the image you want to capture.

4. Battery release latch

Press to release the latch to access the battery, SIM card, or Mini-SD card.

1.2 Status indicators

Status indicators are located in the title bar at the top of the phone's display screen. The following table lists common status indicators and their meanings:


	New email
	New voice mail
	New instant message
	Voice call active
	Data call active
	Call forwarding
	Call on hold
	Missed call
2	"1" indicates Line 1; "2" indicates Line 2
	Battery full
	Battery very low (less than 4%)
	Battery fault
	Signal strength
	Radio off
	GPRS available
	GPRS in use
	Ringer off
abc	Multipress input lower
ABC	Multipress text input mode, uppercase
<u>ABC</u>	Multipress text input mode, caps lock
t9	T9 text input mode, lowercase
T9	T9 text input mode, uppercase

1.3 Setting up your phone

In this section you will learn how to install a battery, SIM card, Mini SD card, and how to charge the battery.

Installing the SIM Card

 The SIM (Subscriber Identification Module) card contains a computer chip that stores your personal number, phone book, and other services provided by your cellular service provider.

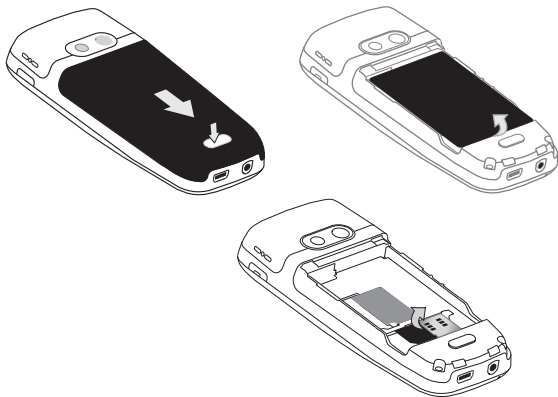

To insert a SIM card:

1. Press on the **battery release latch** and move the backside cover downward to open.
2. Remove the battery by lifting it up from the bottom end.
3. Pry the SIM metal socket open.
4. Insert the SIM card with the gold-plated contact area on the card facing down. Push the metal socket down to lock into place.

Installing the Mini SD card

Use only the Mini SD (Secure Digital) card for this phone device. You can install the Mini SD card to store images, video clips, music and other data on your phone.



To insert a Mini SD card:

1. Remove the back phone cover as shown on the previous page.
2. Slide the Mini SD card into the holder, with the gold-plated contact area facing down.
3. Push the card down and pull up the metal latch to secure it into place.

Charging the battery

Your phone is powered by a rechargeable Lithium-Ion battery. The battery will eventually wear out after a few hundred charges or discharges. Replace the battery through an authorized vendor when the operating time is noticeably shorter than usual.

NOTE: Please note that the time it takes for a battery to fully charge depends on the environment temperature at the time of charge; a completed charge normally takes about 3.5-4 hours under 0-10 degree temperatures, and below 3 hours for temperatures ranging from 20-45 degrees.

Mode	Estimated battery life
Talk time	3.5 to 4 hours
GPRS	2 hours prox.
Standby	140 hours

Charge the new battery before using your phone for the first time. When the low-battery indicator appears, save any unsaved data you are working on by synchronizing your phone with your PC or a Microsoft Exchange Server. Do not restart your phone until you have connected the device to an external power source.

NOTE: Do not leave your phone connected to a charger for longer than a week because overcharging can shorten a battery's lifespan. Your battery will automatically discharge when the device is not in use. Leaving the battery in extremely hot or cold places may also reduce its capacity or shorten its lifespan.

To charge your battery:

Your phone can be charged while switched on or off. Charge your battery by plugging the power cable to the **mini USB connector** at the base of the device, or by using the AC adaptor.



If the device is turned off, charging is indicated by an amber light. If the device is turned on, charging is indicated by the solid amber light on the LED indicator and the charging icon. The completed charge is indicated by either a green light or a charged icon. You can also charge the phone using the USB Sync cable while connected to the PC's USB port.

Battery Capacity Indicator



Full



50%-74% capacity



28%-49% capacity



Less than 27% capacity



Very Low alert (less than 4%)

1.4 Accessories

Mini USB cable

A USB cable is provided to allow you to synchronize information between your phone and a desktop or notebook PC using Microsoft ActiveSync. You can also charge the device's battery by plugging the cable to a PC USB port.



Stereo earphones with handsfree function

Use the earphones to listen to sound or multimedia files. The earphones can also function as a handsfree device.

Using the earphones

Connect the earphones cable to the earphones jack located at the base of the phone. Press the "Press To Talk" button to receive an incoming call. Press and hold it to end a call. Rotate the Volume buttons to adjust the sound level.



1.5 Navigating

This section shows you how to move through your phone screens in order to perform tasks quickly and easily.

Navigation Pad

The Navigation Pad provides the easiest and quickest way to move around the phone's programs and settings.



Using the Navigation Pad

- Press the left side of the Navigation Pad, or right side, or the top or the bottom, to move/scroll the selection focus on the screen left, right, up, or down.
- Select a highlighted item by pressing straight down on the center of the Navigation Pad, which is also known as the **Action button**. In many cases, scrolling to an item and pressing the Action button executes a command, or takes you to a program or setting. When you scroll to a check box, pressing the Action button selects or clears the box.

Softkeys

There are two softkeys on your phone, located directly below the display screen ("Left Softkey" and "Right Softkey"). Each softkey performs the command displayed immediately above it on the screen (called the "Softkey label"), making it easy to navigate around your phone and to perform common commands.

Menus

On many screens, the Right softkey is labelled **Menu**. The Menu softkey displays a list of menu options that are relevant to the screen you are viewing. Selecting a menu option will either perform the command or take you to another part of the user interface where you can perform the command.

NOTE: You can choose the menu commands quickly by pressing the number on the keypad that corresponds to the number shown to the left of the command you want (after the menu is open).



1. Open the menu by pressing the softkey beneath the **Menu** label.
2. Select a command by scrolling to it and pressing the Action button. Or, on your phone keypad, press the number shown to the left of the desired command name.

The Home key

Pressing the **Home** key takes you to the *Home* screen, which is your starting place for most tasks. You can gain access to all of the phone features and programs from the Home screen.

The top of the Home screen displays icons for the five applications that were recently accessed. The center of the *Home* screen displays upcoming appointments, the number of text messages in the inbox, and your current profile. To open an application, scroll to one of these items and press the Action button on the Navigation Pad.



The *Home* screen is the default display when you turn on the phone. You can also access the screen anytime by pressing the **Home** button.

The Back key

Pressing the **Back** key takes you to the previous screen, in a similar manner to the Back button on an Internet browser. In a text field, pressing the Back key moves the cursor back to delete one or more characters. This is similar to pressing the Backspace key on a keyboard.

The Start menu

Your phone comes with many bundled programs that you can start using immediately. To install additional programs on your phone, refer to the Companion CD that came with your phone.

To use the Start menu:

 
1. On the *Home* screen, press the softkey beneath **Start**.
2. Select a program by scrolling to it and pressing the Action button. You can also select the program by scrolling to it and pressing the corresponding number on the menu.

The Quick List

The Quick List displays a list of commands, such as locking your phone, locking the phone's keypad, and turning on the Flight mode, as well as the list of available profile types.

To use the Quick List:

1. Press and quickly release the **Power** button to display the Quick List.
2. Select the item you want by scrolling to it and pressing the Action button or the related number.

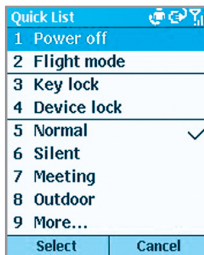

1.6 Entering text and numbers

Your phone supports three input modes for entering text and numbers: **Multipress**, **T9**, and **Numeric**. The Multipress and T9 modes are used for entering text, and the Numeric mode for entering numbers. When you select a field that requires text or numeric entry, the phone will automatically select the appropriate input mode. You can switch between the input modes when a text field is displayed that requires text or number input by holding down the Asterisk (*) key on your keypad to choose the input mode until the status indicator for the input mode you want is displayed in the title bar. The status indicator on the title bar shows the input mode you are currently using:

Indicator	Mode
abc	Multipress text input mode, lowercase
ABC	Multipress text input mode, uppercase
<u>ABC</u>	Multipress text input mode, caps lock
t9	T9 text input mode, lowercase
T9	T9 text input mode, uppercase
<u>T9</u>	T9 text input mode, caps lock
123	Numeric input mode

Multipress mode

When you are in Multipress mode, you can enter a letter by pressing the number key on which the letter appears. To enter the first letter on the number key, press the key once, to enter the second letter, press the key twice quickly, and so on. The letter entered most recently is underlined until you have completed the keypresses for the letter and moved on to the next letter.

For example: To enter the word "hat," press **44, 2, 8**.

 
 
When you enter letters that are on the same number key, you must pause after entering the first letter and wait until the underline disappears before entering the next letter so your phone can process the first letter. This pause is called the Multipress time-out, and you can adjust the length of the pause between keypresses.

For example: To enter the word "cat," press **222**, pause, press **2**, and then press **8**. Press the **#** key to move a space.

To enter punctuation in Multipress mode, press **1** repeatedly until you see the punctuation mark that you want.

To change the Multipress time-out:

1. In the *Home* screen, select **Start**.
2. Select **Settings** and then **Accessibility**.
3. In the **Multipress time-out** field, select the length of the pause between keypresses that you prefer.

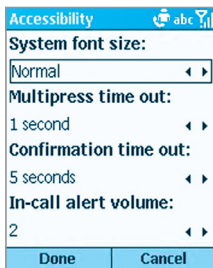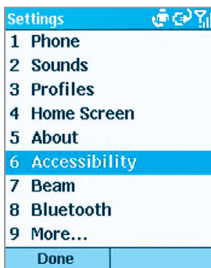

T9 mode

When you are in the T9 mode, just press the number keys that contain the letters that you want to form a word. T9 will then analyze your keypresses and attempt to complete the word.

For example: To enter the word "shoe," press **7, 4, 6, 3**.

To enter text in T9 mode:

1. Press and hold the * key until the input menu appears. Scroll down and choose "English." The t9 indicator should appear at the top of the display.
2. Enter letters by pressing the keys on which the letters appear. Press a key only once for each letter.
3. Press the # key to accept the word and enter a space after it, or press the Down button on the Navigation Pad to scroll through the available words; press the **Action** button to accept the word choice.
4. Press **1** and then press the Up or Down button on the Navigation Pad to cycle through common punctuation symbols.

NOTE: T9 cannot always find the word you want in the T9 dictionary. In these cases, switch to **Multipress** mode. After you have entered the word in Multipress mode, the word will be added to the T9 dictionary.

Numeric mode

When you are in the Numeric mode, just press the number(s) you want to enter on the keypad. If a field permits a numerical entry only, such as the **Work** phone field in **Contacts**, the input mode will automatically default to Numeric mode.

Miscellaneous input tasks

- **To enter a space:** In Multipress or T9 mode, press the * key.
- **To start a new line:** Press the Action button.
- **To change between uppercase and lowercase in text mode:** Press the * key. **To lock caps:** Press the * key twice. Press the * key again to return to lowercase.
- **To enter a symbol:** Press and hold the # key, select the symbol you want, and then press the **Done** softkey.
- **To enter a number, an asterisk (*), or a pound sign (#):** Press and hold the * button on the phone keypad to pop up a selection list, then select "123" for **Numeric** mode. You can then press the desired corresponding key on the keypad.
- **To delete characters:** Press the Back button to backspace over a single character. Press and hold the Back button to backspace and delete all text in a field.
- **To enter the plus (+) sign for international calls:** Press and hold 0.

1.7 Securing your phone

You can customize the level of security you want to have on your phone by locking the SIM card, the keypad, or the entire phone.

Locking the keypad

The keypad lock turns off the keypad functionality. This is a helpful feature if, for example, your phone is turned on and in your pocket, and you want to prevent accidental keypresses from dialing a number, etc.

- **To lock your keypad:** In the *Home* screen, press and hold the **End** button. The Left softkey will display **Unlock**, indicating that your phone is locked.
- **To unlock your keypad:** In the *Home* screen, press the **Unlock** softkey, and press the # key.

Locking the SIM card

Locking your SIM (Subscriber Identity Module) card prevents you from using the phone, but you can still turn it on and make emergency calls. When you turn your phone on, you will be prompted for your PIN1 password, which you must enter correctly before you can use your phone.

- **To lock the SIM:** In the *Home* screen, press the **Start** softkey, select **Settings**, select **Security**, select **Enable SIM Lock**, and then press the Action button. Enter your PIN1 password, and then press the **Done** softkey.
- **To unlock the SIM:** In the *Home* screen, press the **Start** softkey, select **Settings**, select **Security**, select **Disable SIM Lock**, and then press the Action button. Enter your PIN1 password, and then press the **Done** softkey.

Locking your phone

Locking your phone prevents access to personal data. When you enable this feature, your phone will automatically lock after a specified time of inactivity. A screen will be displayed requiring your phone lock password before access is granted. You can still receive calls and make emergency calls when the phone is locked.

- **To lock your phone:**
 1. Press the **Power** button to display the Quick List, select **Device lock**, and then press the **OK** softkey.
 2. Under **Lock phone after**, select the amount of time you want your phone to be inactive before the phone automatically locks.
 3. Under **Password**, enter the password you want to use to access your phone when it is locked.
 4. Under **Confirm password**, enter the password again, and press the **Done** soft key.
- **To unlock your phone:** Press the **Unlock** softkey, enter your password, and then press the **Unlock** softkey again.
- **To turn off phone lock:** In the *Home* screen, press the **Start** softkey, select **Settings**, select **Security**, select **Disable Phone Lock**, and then press the **Done** softkey.

Chapter 2

Using your phone

- 2.1 Making a call
- 2.2 Receiving a call
- 2.3 Photo Contacts (Caller ID)
- 2.4 In-call options
- 2.5 Retrieving a voice mail message
- 2.6 Reviewing your calls
- 2.7 Speed Dials and Voice Tags
- 2.8 Additional dialing information



 
2.1 Making a call

There are several ways to make a call.

Making a call from the Home screen

When in the *Home* screen, press the numbers on the keypad to enter the phone number, and then press the **Talk** button to make the call. Press the **Back** button if you need to backspace over a digit.

As you enter a phone number, your phone searches **Contacts**, **Call History**, **Speed Dial** lists, and your **SIM** card, to find a matching number. Matching names and numbers will be displayed. When you see the name of the person you want to call (or the entire number) displayed, select it and press the **Talk** button.

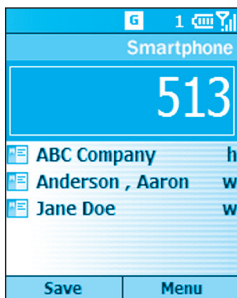

In this example, the first few digits of a phone number have been entered. The names listed in this screen have all been found to have phone numbers that start with these digits. At this point, you can select the desired name without having to enter more numbers.

Making a call from Contacts

To make a call by Contact name:

In the *Home* screen, press the **Right** Softkey ("Contacts") or select **Contacts** from the Start Menu. If there are many contacts listed, you can enter the first few letters of the desired contact's name to perform a search. Select the name you want to call and press the **Talk** button. The phone number that has been specified as the default phone number for that contact entry will be dialed.

To change the default number for a Contact:

In the *Home* screen, press the **Right** Softkey ("Contacts") or select **Contacts** from the Start Menu. Select the contact whose default phone number you want to change, then press the Right or Left navigational button to change the default number. The abbreviation at the right side of the list indicates the default number. For example, if you change "w" to "m," the default number changes from Work phone (w) to Mobile phone (m).

To make a call from an open Contact card:

In the *Home* screen, press the **Right** Softkey ("Contacts") or select **Contacts** from the Start Menu. Select the desired contact, then press the Action button to display all the information for that contact. Select the number you want to call, then press the **Talk** button.

NOTE: For more information about Contact list abbreviations and Contact cards, please see Chapter 8.

Making a call using a recently dialed number

When in the Home screen, press the **Talk** button to display a list of recently-dialed names/numbers. Select the item you want to dial, then press the **Talk** button again. Note that you can also use the menu in this screen to open a *Call Info* screen for the selected item.

Making a call from the Call History list

Select **Call History** from the Start Menu. Select the number or name you want to call, then press the **Talk** button.

Making a call from a hyperlink

When you see an underlined phone number presented as a hyperlink in an E-mail message, just scroll to it, and press the **Action** button to make the call.

Making emergency calls

Calls to emergency service numbers can be made under any circumstances, even if you have locked the SIM card and/or your phone.

 
To place an emergency call: Dial the emergency number appropriate for your location, and press the **Talk** button.

2.2 Receiving a call

NOTE: This section describes the default behavior for incoming calls. See the next section if you want a Photo ID (which you have associated with the caller) to be displayed on your screen during incoming calls.

When you receive a call, the name and number of the caller are displayed on the screen. If the name of the caller is not in your Contacts list, only the caller's phone number is displayed. You can answer a call by pressing the **Talk** button or the **Left** softkey ("Accept").

If don't want to take the call, press the **Right** softkey ("Reject"). Note that selecting **Reject** will connect the caller to your voice mail box, if you subscribe to this service.

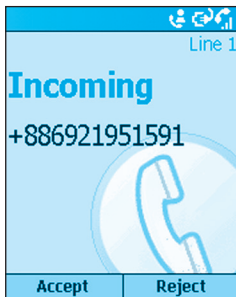

Answering a second call using Call Waiting

If you are already talking on the phone when you receive another call, the *Call Waiting* screen will appear. To place the current call on hold and answer the incoming call, press the Left Softkey (“Accept”) or the **Talk** button to simultaneously place the first call on hold and answer the second call.

If you want to end the first call before answering the incoming call, press the **End** button, and then press the **Accept** soft key or the **Talk** button to accept the incoming call.

Rejecting a Call Waiting call

If you are already talking on the phone when you receive another call and you don't want to answer the incoming call, press the Right Softkey (“Reject”) in the *Call Waiting* screen. This will keep your current call in progress, but will connect the “call waiting” caller to your voice mail box, if you subscribe to this service.

2.3 Photo Contacts (Caller ID)

Photo Contacts is a “Caller ID” application that adds more fun to using your phone. It allows you to assign photos or animated GIF files to the entries in your *Contacts*. Then when a person calls you (for whom you have previously assigned a photo ID in *Contacts*), that photo ID will appear on your phone’s incoming call screen.

You can also perform maintenance on the *Contacts*, even create new *Contacts* and *Groups* and assign members to the *Groups*, right from within *Caller ID*. (See also Chapter 8 for information about maintaining *Contacts*.)

The *Caller ID* utility does not run automatically when you turn on your phone. You must invoke it after the phone is turned on.

Starting the Caller ID program

Select **Photo Contacts** from the Start Menu to invoke the *Caller ID* program. If you have many *Contacts*, it may take a few moments to load them. After they are loaded, the icon shown below will display in the Title Bar. It indicates that the “*Caller ID* monitor” is running, and *Photo IDs* (if assigned) will display when incoming calls are received.



 
NOTE: Even if this icon is not shown, you can still use *Caller ID* to assign photos and manage *contacts* and *groups*. The photos will display with your *contacts*, but incoming calls will not be able to display the *Photo IDs* you assigned.

Main List View and Detailed View

When you start the Caller ID application, the main **List View** will display as shown in the example below on the left. The Contacts entries fully mirror those in your Pocket Contacts (Chapter 8). Any changes you make to your Contacts data using Caller ID will simultaneously be made in your Pocket Contacts. In the example below, a Photo ID has already been assigned to the selected Contact entry. The icon at the rightmost side of each Contact indicates whether the Contact resides in your phone's local memory or on the SIM card. If a Photo ID has been assigned, an additional icon will indicate such.



Main (List) View

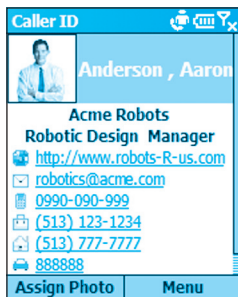

Detailed View

To switch to **Detailed View**, press the **Action** button. All data that has been entered for the selected Contact will be listed. To switch back to List View, select **Cancel** from the menu.

Menu Commands

The menu in Detailed View lets you display the Next or Previous contact entry; Edit or Delete the current contact, and Assign or Unassign a photo ID to it.

The menu in the main List View contains the following commands:

New

Opens a standard screen in which you can enter data and create a new entry in your Pocket Contacts.

Delete

Select the entry you want to delete, then select **Delete**. A message will remind you that if you delete this entry using Caller ID, it will also be deleted in your phone's Contacts.

Reset Filter

This command is enabled after you have performed any manual filtering of entries using your phone's keypad. For example, if you have pressed the keys for "j," "a," "c," and "k" to list only the entries containing the string "jack," you can select **Reset Filter**, or press the * shortcut key, to reset the main view so that all entries are once again listed. (NOTE: This command does not affect any filtering you may have done using the **Filter** command explained on the next page.)

Manage Group

This command provides a convenient interface that lets you perform complete management of your contacts groups. Initially, it opens the *Manage Group* screen, which lists all currently existing groups and the number of members assigned to each group, as well as the Photo ID assigned to the selected group (if any).

Press the Right Softkey in the *Manage Group* screen to open the menu, which lets you create **New** groups, **Rename** or **Delete** groups, **Assign Members** to groups, **Assign Photo** or **Unassign Photo**, and **Preview** the behavior of an already-assigned photo and/or template.

The **Assign Photo**, **Unassign Photo**, and **Preview** commands in the *Manage Group* screen operate the same as those for assigning individual Photo IDs, as explained later in “*Assigning a Photo ID to a Contact*.” Note that a Photo ID assigned to a group will display during an incoming call only if no individual Photo ID has been assigned to the caller. The individually-assigned Photo ID has precedence over the group-assigned Photo ID.

Filter

This command opens a submenu that lets you control which category of items are listed on the screen: **SIM Only**, **Contacts Only**, and **Group**. By default, **No Filter** is active.

Assign Photo

Explained later in “*Assigning a Photo ID to a Contact*.”

Preview

This command is available if a Photo ID is currently assigned to the selected Contact entry. First, select a Contact entry in the list that already has a photo assigned to it. Then select **Preview**, or press the # button on your phone keypad.

Options

Selecting **Options** opens a submenu that contains the following three commands:

Set Default Photos — opens a screen that lets you assign, change, or unassign default Photo IDs for the following three situations:

Unknown photo	This photo will display whenever the phone number of the incoming call is not known to Caller ID because no phone number was “passed in” to your phone. This would occur if the person calling you has blocked their phone number from being displayed to the receiver, or has not enabled the broadcast of their Caller ID.
Not-found photo	This option in the <i>Set Default Photos</i> screen lets you assign a generic Photo ID to any incoming call from a person whose number is not found in your Contacts. That is, the phone number of the incoming call is known, but has no matching entry in your Contacts.
Default photo	This photo will display when the incoming call is found to be from a matching entry in your Contacts database, but so far there is no user-assigned Photo ID for either that individual Contact entry, or for the Group it belongs to.

Display Settings — Opens the *Display Settings* screen, which allows you to specify whether the Photo ID should consist of only a photo (**Use Photo Only**), or a photo merged with a template (**Use Template**). Options available in this screen will depend on which of these is active in the *Display Style* field.

General — Opens a screen that contains two options:

Storage Path for Re-sized Photos: Every time you use **Assign Photo** to assign a photo, Caller ID will automatically copy and re-size the original photo file. You can then delete the original file, if you wish to save valuable storage space in the phone. The **Storage Path for Resized Photos** field allows you to specify whether you want these re-sized photos to be saved to your phone or to your Storage Card.

Display Photo During Incoming or Waiting Call: Active by default. If you uncheck this checkbox and then select **Done**, the phone will recover its original background image for incoming calls.