
 



Quick Start Guide

Get to Know Digital Notepad

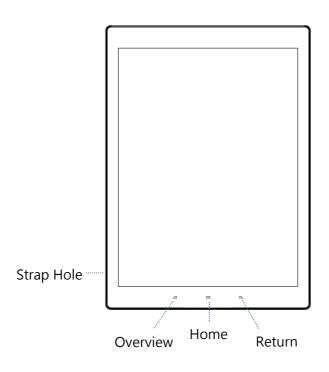



Lets Get Started

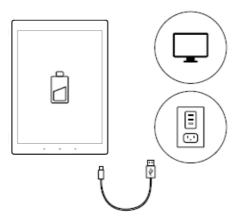

Charge Your Digital Notepad


Use the included micro USB cable to charge your Digital Notepad USB device or with any micro USB wall adapter (not included)

Power On

Hold the power button for 3 seconds to turn on or turn off your **Digital Notepad**.

Environmental Requirements Operating ambient temperature: 32° to 113° F (0° to 45° C) Non-operating temperature: 14° to 122° F (-10° to 50° C)

Controls and Navigation

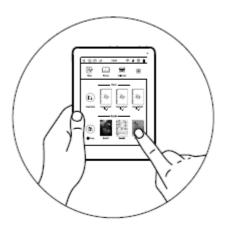

From the Main Menu:


Press the Note, Reader, Calendar, and Tools applications to access them **When in Note or Reader App:**

Swipe Down from the **Top** of your screen to access the control toolbar to go back to the main menu.

When in Reader App:

Swipe the screen left and right in order to turn pages forward or backward.

The Stylus

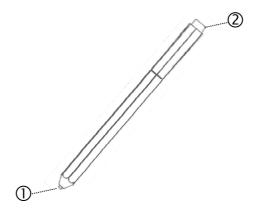

Using the Stylus

- ①Write and Draw with the tip of the Stylus. Markings are all pressure sensitive.
- ②The"Eraser"head removes stylus strokes and makings with a single tap.

Connecting to Wi-Fi



- Toggle Wi-Fi Switch On
- Touch Wi-Fi Bar to select your Wireless network

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that
- to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.



Looking for more Information?



Go http://www.xxxxxx.com to know more about your Digital Notepad.

©2018, The Company all rights reserved. The product logos are trademarks or registered trademarks of the Company or its affiliates.

Warranty

The company warrants to the original end user customer that its The company -branded products are free from defects in material and workmanship. Any claim alleging that any product fails to conform to the foregoing warranty may be made only by the customer who purchased such product and only while such customer owns such product. Subject to the conditions and limitations set forth below, The company will, at its option, either repair or replace any part of its products that prove defective by reason of improper workmanship or materials. Repaired parts or replacement products will be provided by The company on an exchange basis, and will be either new or recertified. All recertified products have been tested to ensure that they are functionally equivalent to new products.

This limited warranty covers only repair, replacement, refunds or credit for defective The company-branded products. The company is not liable for, and does not cover under warranty, any damages or losses of any kind whatsoever resulting from loss of, damage to, or corruption of, content or data or any costs associated with determining the source of system problems or removing, servicing or installing The company products. This warranty excludes third party software, connected equipment or stored data. The company is therefore not liable for any losses or damage attributable to third party software, connected equipment or stored data.

This limited warranty does not cover any damage to the product that results from improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair or modification. This limited warranty shall not apply if: (i) the product was not used in accordance with any accompanying instructions, or (ii) the product was not used for its intended function. This limited warranty also does not apply to any product on which the original identification information has been altered, obliterated or removed, that has not been handled or packaged correctly, that has been sold as second-hand or that has been resold contrary to U.S. and other applicable export regulations.