


# InterReach Spectrum™ Remote Access Unit

Installation Guide

TECP-77-222 • Issue 1 • November 2012

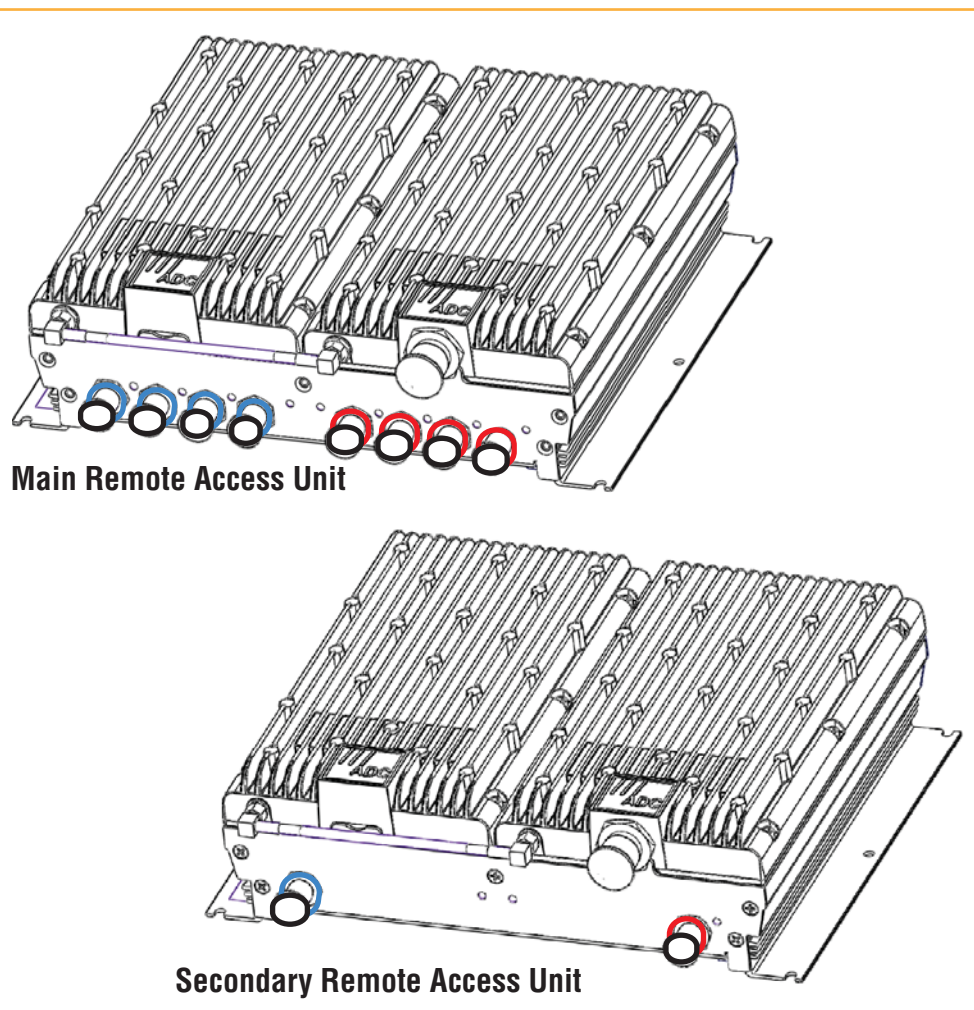

## **Copyright**

© 2012 TE Connectivity, Inc. All Rights Reserved.

Information contained in this document is company private to TE Connectivity Ltd., and shall not be modified, used, copied, reproduced or disclosed in whole or in part without the written consent of TE.

## **Trademark Information**

FlexWave, FlexWave Prism, InterReach Spectrum, Universal Radio Head, TE Connectivity, and TE connectivity (logo) are trademarks.

All other logos, products and/or company names referred to herein might be trademarks of their respective owners.

## **Disclaimer of Liability**

Contents herein are current as of the date of publication. TE reserves the right to change the contents without prior notice. Should the content of printed user documentation shipped with product differ from documentation provided on a product CD (inclusive of the associated Help modules), the printed user documentation supersedes the documentation on the product CD. In no event shall TE be liable for any damages resulting from loss of data, loss of use, or loss of profits, and TE further disclaims any and all liability for indirect, incidental, special, consequential or other similar damages. This disclaimer of liability applies to all products, publications and services during and after the warranty period.

## **Specific Disclaimer for High-Risk Activities**

This Product is not specifically designed, manufactured, tested or intended for use in high-risk activities including, without restricting the generality of the foregoing, on-line control of aircraft, air traffic, aircraft navigation or aircraft communications; or in the design, construction, operation or maintenance of any nuclear facility. TE (including its affiliates) and its suppliers specifically disclaim any express or implied warranty of fitness for such purposes or any other purposes.

## **Screenshots in User Documentation**

Due to concurrent development of this documentation, artwork, and the InterReach Spectrum Element Management System (EMS), there may be some minor discrepancies between screenshots contained in this documentation and those actually displayed in the InterReach Spectrum EMS. These discrepancies will generally be few and minor and should not affect your understanding of InterReach Spectrum EMS.

# TABLE OF CONTENTS

Topics	Page
<b>Preface</b> .....	<b>2</b>
InterReach Spectrum User Documentation .....	2
Accessing User Documentation on the TE Customer Portal.....	3
Document Cautions and Notes.....	3
Standards Certification.....	4
<b>Product Overview</b> .....	<b>5</b>
Main Remote Access Units.....	7
MRAU Ports, Cable, and Connectors .....	7
MRAU LEDs .....	8
Secondary Remote Access Units .....	9
SRAU Ports, Cable, and Connectors.....	9
SRAU LEDs.....	10
RAU N Connectors .....	11
<b>Install the RAUs and Antennas</b> .....	<b>12</b>
Mount the RAUs and Antennas.....	12
General Safety Precautions .....	12
Connect the IFEU to the MRAU .....	14
Connect the MRAU to SRAUs .....	16
Configure the MRAUs and SRAUs.....	18
<b>Appendix A: Specifications</b> .....	<b>19</b>
Remote Access Unit Specifications .....	19
Spectrum System Specifications.....	19
Composite Power Out of RAU .....	21
<b>Appendix B: 75-Ohm CATV Cable</b> .....	<b>24</b>
CATV Cable Requirements.....	24
Belden 1695A Coax Specifications .....	25
Description .....	25
Overall Physical Characteristics .....	25
Overall Nominal Electrical Characteristics.....	26
Belden 7732A Coax Specifications .....	27
Description .....	27
Overall Physical Characteristics .....	27
Overall Nominal Electrical Characteristics.....	28
<b>Appendix C: Omni Antenna</b> .....	<b>29</b>
<b>Appendix D: Contacting TE Connectivity</b> .....	<b>30</b>
Contacting TE Connectivity by Telephone.....	30
Online Access to TE Connectivity .....	30

## PREFACE

This manual provides installation instructions for InterReach Spectrum® Remote Access Units (RAUs). [Table 1](#) lists the standard RAUs that are supported in this document.

**Table 1.** *Supported Spectrum Standard Remote Access Units*

Catalog Number	Description
<b>Standard RAUs</b>	
SPT-M1-8519-1	Spectrum, 850-1900 Main RAU
SPT-S1-8519-22	Spectrum, 850 Path 2-1900 Path 2 Secondary RAU
SPT-S1-8090-1	Spectrum, 800-900 SMR Secondary RAU
SPT-S1-80AWS-1	Spectrum, 800-2100AWS Path 1 Secondary RAU
SPT-S1-8019-22	Spectrum, 800 Path 2-1900 Path 2 Secondary RAU
SPT-S2-70AWS-1-SISO	Spectrum, 700 SISO-2100AWS Path 1 SEC RAU, UpperC-LowerABC
SPT-S2-70AWS-22-SISO	Spectrum, 700 Path 2 SISO-2100AWS Path 2 SEC RAU, UpperC-LowerABC
SPT-S1-7070-1-MIMO	Spectrum, 700 MIMO Secondary RAU, UpperC-LowerABC
SPT-M1-AWS19-11	Spectrum, 2100AWS Path 1-1900 Path 1 Main RAU
SPT-S1-AWS19-12	Spectrum, 2100AWS Path 1-1900 Path 2 Secondary RAU
SPT-S1-2121-1-MIMO	Spectrum, 2100AWS MIMO Secondary RAU
<b>High Power RAUs</b>	
SPT-M3-8519-11-HP	Spectrum, 850 Path1-1900 HP Main RAU
SPT-S3-8519-22-HP	Spectrum, 850 Path2 - 1900 HP Path2 Secondary RAU
SPT-S3-70AWS-11-HP	Spectrum, 700 Path1 uC/LABC-AWS HP Path1 Secondary RAU
SPT-S3-70AWS-22-HP	Spectrum, 700 Path2 uC/LABC-AWS HP Path2 Secondary RAU

## InterReach Spectrum User Documentation

The InterReach Spectrum user documentation is intended for system administrators, engineers and installers responsible for planning, administering, configuring, and maintaining TE Connectivity InterReach Spectrum systems. [Table 1](#) lists the manuals that correspond to this InterReach Spectrum release.

**Table 2.** *InterReach Spectrum User Documentation*

Title	TECP Number
<i>InterReach Spectrum Element Management System 8.1 User Manual</i>	TECP-77-215
<i>InterReach Spectrum Host Unit Installation Guide</i>	TECP-77-220
<i>InterReach Spectrum Expansion Module Group Installation Guide</i>	TECP-77-221
<i>InterReach Spectrum Remote Access Unit Installation Guide</i>	TECP-77-222
<i>FlexWave Prism OADM Splice Box Installation Guide</i>	TECP-77-208

## Accessing User Documentation on the TE Customer Portal

Access to the Customer Portal requires a user account and password. If you do not have an account, click on the registration link on the Log In page.

- 1 Click on the following URL link or enter the URL into your web browser, and then press Enter on your keyboard:  
`https://www.te.com/commerce/uso/myaccount.do`
- 2 Click **My Account > TE/Wireless Portal**.
- 3 On the **Customer Portal Home** page, click **Manuals and Data Sheets**.
- 4 In the **Manuals and Data Sheets Sections** panel, click on the product name of the document you need to access.
- 5 Click on the title of the manual that you need to open/download.

## Document Cautions and Notes

Two types of messages, identified below, appear in the text:

**CAUTION!** Caution text indicates operations or steps that could cause personal injury, induce a safety problem in a managed device, destroy or corrupt information, or interrupt or stop services.

**NOTE:** Note text contains information about special circumstances.

**FCC:** This equipment complies with the applicable sections of Title 47 CFR, Part 22 (800 MHz Cellular), Part 24 (1900 MHz - PCS), Part 90 (800/900 - SMR), and Part 27 (700 MHz, 2100 MHz- AWS).

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

**NOTE: The U.S. Federal Communications Commission (FCC) has developed guidelines for evaluation of human exposure to RF emissions. The guidelines incorporate limits for Maximum Permissible Exposure (MPE) for power density of transmitter operating at frequencies between 300 kHz and 100 GHz. Limits have been set for portable, mobile, and fixed equipment. TE Connectivity products fall in the category of fixed equipment; products intended to be permanently secured and exposures are evaluated for distances greater than 40cm (15.75”). Portable devices fall into exposures of less than 20cm, where SAR evaluations are used.**

**Antenna gain is restricted to 390mW ERP ( 830mW EIRP) in order to satisfy RF exposure compliance requirements. If higher than 385mW ERP, routine MPE evaluation is needed. The antennas should be installed to provide at least 40cm from all persons to satisfy MPE requirements of FCC Part 2, 2.1091.**

**UL/CUL:** This will be installed in a restricted access location. This equipment complies, per UL and CUL 50, Standard for Enclosures for Electrical Equipment.

**UL/CUL:** This equipment complies with UL and CUL 60950-1 Standard for Safety for Information Technology Equipment, including Electrical Business Equipment.

**UL/CUL:** All InterReach Spectrum RAUs are Plenum rated and suitable for use in environmental air space in accordance with Section 300-22(C) of the National Electrical Code, and Sections 2-128, 12-010(3) and 12-100 of the Canadian Electrical Code, Part 1, CSA C22.1.

**UL:** This equipment is UL Plenum rated under UL 2043.

**CAUTION! Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

---

## PRODUCT OVERVIEW

InterReach Spectrum supports up to 8 bands in a single system. Each antenna location supports those bands in modular, group pairings. Each location includes a Main Remote Access Unit (MRAU) that can power up to three additional Secondary RAUs (SRAUs), each of which support two power amplifier pairs for a total of eight amplifiers. MRAUs and SRAUs are grouped logically based on common service provider groupings and include: 850/1900, 700/700 MIMO, 800/900 SMR, 700 SISO/AWS, and 800/AWS. Adding frequency is as simple as plugging in an SRAU to the existing MRAU.

RAUs are available in two different output power options: Standard and High Power. These can be “mixed and matched” on a system to meet the specific needs of a venue.

Since Spectrum can be configured to support as many as four cascaded runs of sixteen total Expansion Module Groups, the system configuration possibilities are seemingly endless and can scale to single systems that include as many as 128 MRAU locations, with each of those locations supporting between one and eight RF bands. And each of those band locations offers 26 dBm (P1dB) or 31 dBm (P1dB) of output power based on selecting standard or High Power (HP) RAUs.

The system may be scaled to add new bands or RAU location sites as-needed and offers great service flexibility and performance relative to shared, wide-band amplifier systems. Each service provider may control their band of interest and enjoy the predictability in consistent service at each RAU location independent of what other operators are doing or the length the signal travels to the service area.

The RAUs are typically mounted above ceiling tiles or in out-of-sight locations as close as possible to the service area.

Figure 1 illustrates how RF and IF signals are sent between Spectrum units and modules.

**NOTE:** All FWD ports on all Modules are color-coded red and all REV ports are color-coded blue, which makes the DRU, IFEU, and RAU cabling process easier to complete.

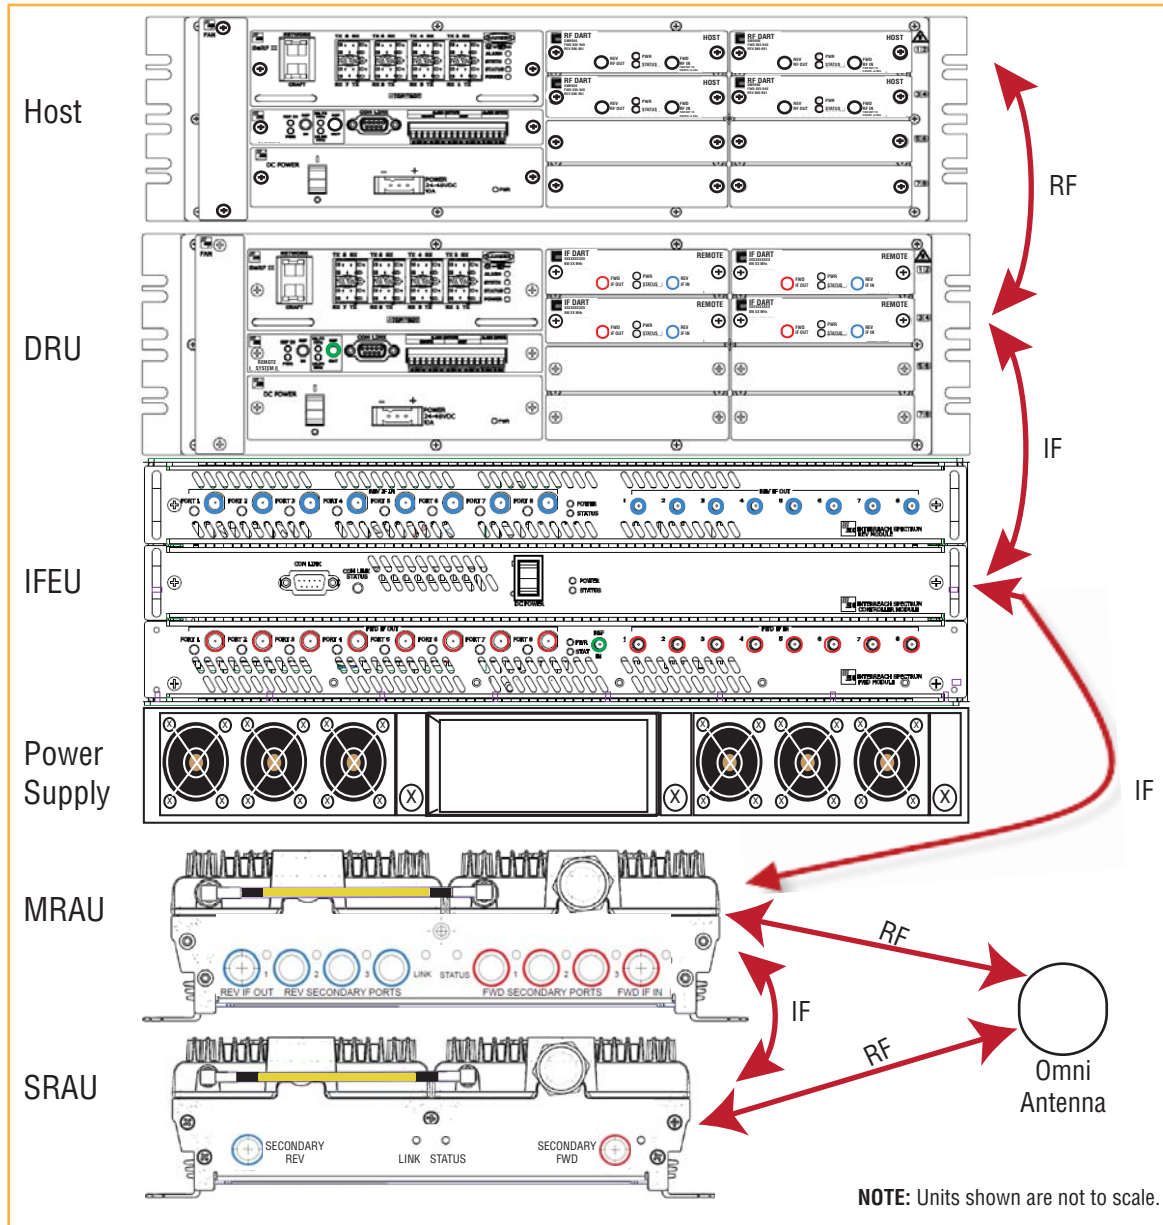


Figure 1. REV and FWD Signals for the RAU

**NOTE:** This book refers to the Omni Antenna (4214-M727), which is the antenna that TE Connectivity recommends. Other antennas may be used. For further information on the Omni Antenna, see “Appendix C: Omni Antenna” on page 29.




## Main Remote Access Units

The Main Remote Access Unit (MRAU) receives FWD IF signals from an IF Expansion Unit (IFEU), which is part of the Spectrum Expansion Module Group, using 75Ω CATV cable. The MRAU converts the IF signals to RF and sends them to a passive RF antenna using 50Ω coaxial cable. The MRAU also receives configuration information and power from and sends its status information to the IFEU.

The MRAU receives REV RF signals from a passive RF antenna using 50Ω coaxial cable. It converts the signals to IF and sends them to the IFEU using 75Ω CATV cable.


### MRAU Ports, Cable, and Connectors

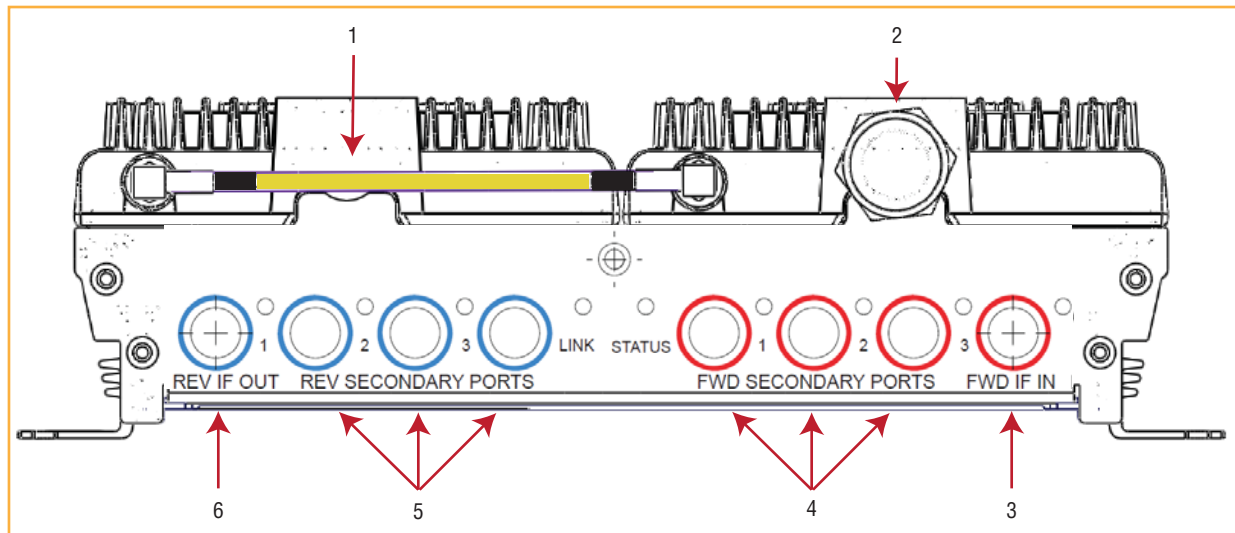

Ref #	Component	Device	Function
1	RF SubMiniature version A (SMA) cable <sup>(1)</sup>	50Ω RF SMA-to-SMA cable	Connects two RF bands together when there is only one N-type connector on the RAU.  For cases when there is an N-type connector for each RF band (700MIMO or PCS/AWS), there will not be an SMA cable.
2	Antenna port(s)	50Ω N-type connector	Connects to an antenna. See <a href="#">Table 3 on page 11</a> .
3	FWD IF IN connector	F connector port	Connects to the IFEU FWD Module IF OUT connector via CATV cable.
4	FWD SECONDARY PORTS (1 - 3)	F connector ports	Connect to a SRAU SECONDARY FWD connector via CATV cable.
5	REV SECONDARY PORTS (1 - 3)	F connector ports	Connect to a SRAU SECONDARY REV connector via CATV cable.
6	REV IF OUT connector	F connector port	Connects to the IFEU REV Module IF IN connector via CATV cable.

(1) The AWS/PCS MRAUs does NOT have an RF SMA cable, and has two Antenna ports.

## MRAU LEDs

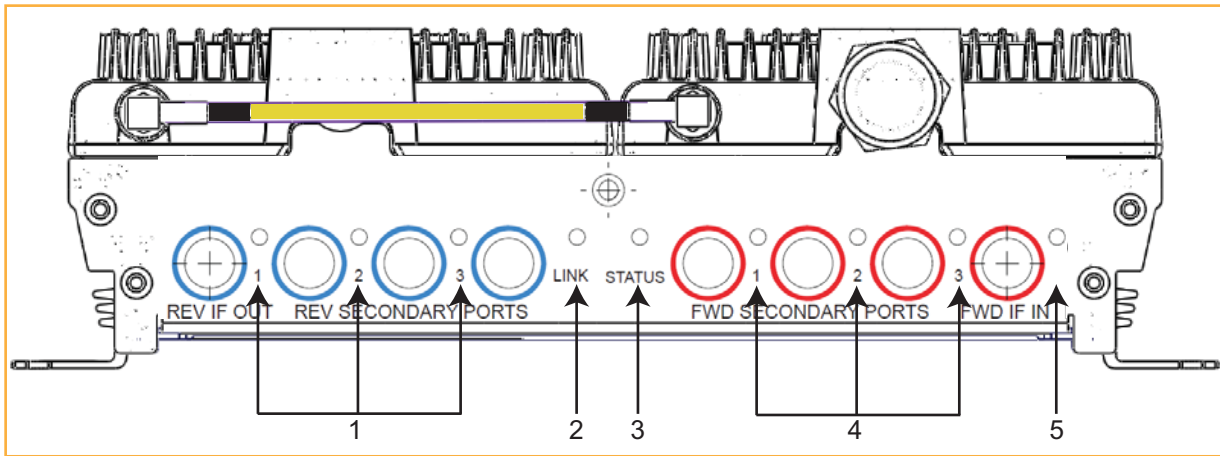


Ref #	LED	LED Color	Description
1	FWD SECONDARY PORT (1 - 3)	<ul style="list-style-type: none"> <li>Green</li> <li>Blinking Green</li> <li>Yellow</li> <li>Blinking Yellow</li> <li>Red</li> <li>Off</li> </ul>	<ul style="list-style-type: none"> <li>Downstream unit correctly connected; unit has no alarms or a Minor alarm is active.</li> <li>SRAU or band is set out-of-service.</li> <li>FWD cable connected to SRAU, no REV cable connected.</li> <li>FWD and REV cables are not connected to the same port number (incorrectly paired).</li> <li>Major alarm in downstream unit, fault lockout, or SRAU disconnected.</li> <li>No SRAU previously connected.</li> </ul>
2	LINK	<ul style="list-style-type: none"> <li>Green</li> <li>Red</li> <li>Off</li> </ul>	<ul style="list-style-type: none"> <li>MRAU receiving communications from the IFEU.</li> <li>MRAU has not received communications from the IFEU for more than 90 seconds.</li> <li>During initial power up, MRAU is powering up and waiting for IFEU communications.</li> </ul>
3	STATUS	<ul style="list-style-type: none"> <li>Green</li> <li>Blinking Green</li> <li>Red</li> </ul>	<ul style="list-style-type: none"> <li>Unit has no alarms or a Minor alarm is active.</li> <li>Unit or band is set out-of-service.</li> <li>Major alarm detected.</li> </ul>
4	REV SECONDARY PORT (1 - 3)	<ul style="list-style-type: none"> <li>Green</li> <li>Blinking Green</li> <li>Blinking Yellow</li> <li>Red</li> <li>Off</li> </ul>	<ul style="list-style-type: none"> <li>Downstream unit correctly connected, unit has no alarms or minor alarm</li> <li>SRAU or band is set out-of-service.</li> <li>FWD and REV cables are not connected to the same port number (incorrectly paired).</li> <li>Major alarm in downstream unit, fault lockout, or SRAU disconnected.</li> <li>No SRAU previously connected.</li> </ul>
5	FWD IF IN	<ul style="list-style-type: none"> <li>Green</li> <li>Yellow or Blinking Yellow</li> <li>Off</li> </ul>	<ul style="list-style-type: none"> <li>MRAU is powered on correctly.</li> <li>There is an IFEU FWD connection, but there is no IFEU REV connection or the IFEU REV connection is paired incorrectly.</li> <li>Cable is not connected to the IFEU FWD port.</li> </ul>

## Secondary Remote Access Units

A Secondary Remote Access Unit (SRAU) receives FWD IF signals from the MRAU, using 75Ω CATV cable. The SRAU converts the IF signals to RF and sends them to a passive RF antenna using 50Ω coaxial cable. The SRAU, through the MRAU, also receives configuration information and power from and sends its status information to the IFEU.

The SRAU receives REV RF signals from a passive RF antenna using 50Ω coaxial cable. It converts the signals to IF and sends them to the MRAU using 75Ω CATV cable.


### SRAU Ports, Cable, and Connectors

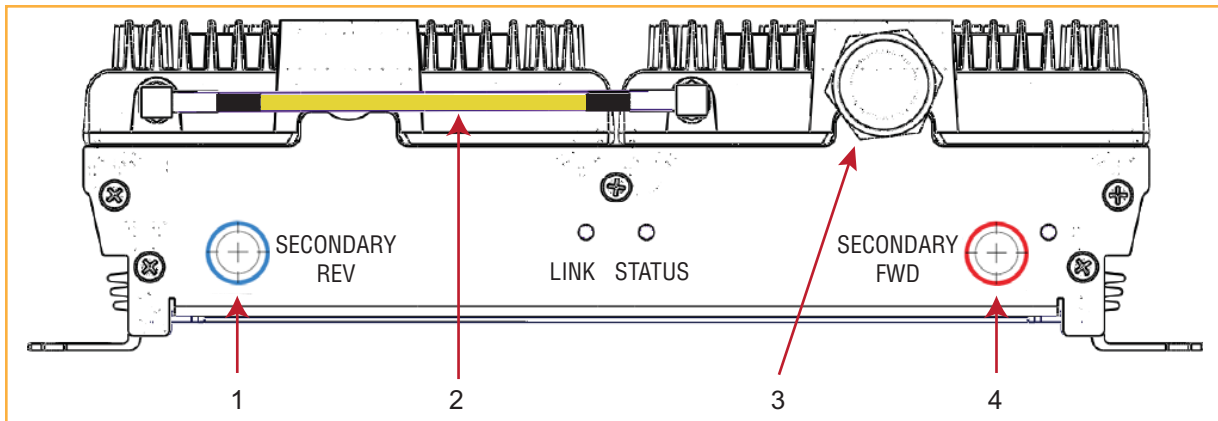

Ref #	Component	Device	Function
1	SECONDARY REV connector	F connector port	Connects to one of the MRAU REV SECONDARY ports (1 - 3) via CATV cable.
2	RF SMA cable <sup>(1)</sup>	50Ω RF SMA-to-SMA cable	Connects two RF bands together when there is only one N-type connector on the RAU. For cases when there is an N-type connector for each RF band (700MIMO or PCS/AWS), there will not be an SMA cable.
3	Antenna port(s)	50Ω N-type connector	Connects to an antenna. See <a href="#">Table 3 on page 11</a> .
4	SECONDARY FWD connector	F connector port	Connects to one of the MRAU FWD SECONDARY ports (1 - 3) via CATV cable.

(1) The 700 MIMO SRAUs does NOT have an RF SMA cable, and has two Antenna ports.

## SRAU LEDs

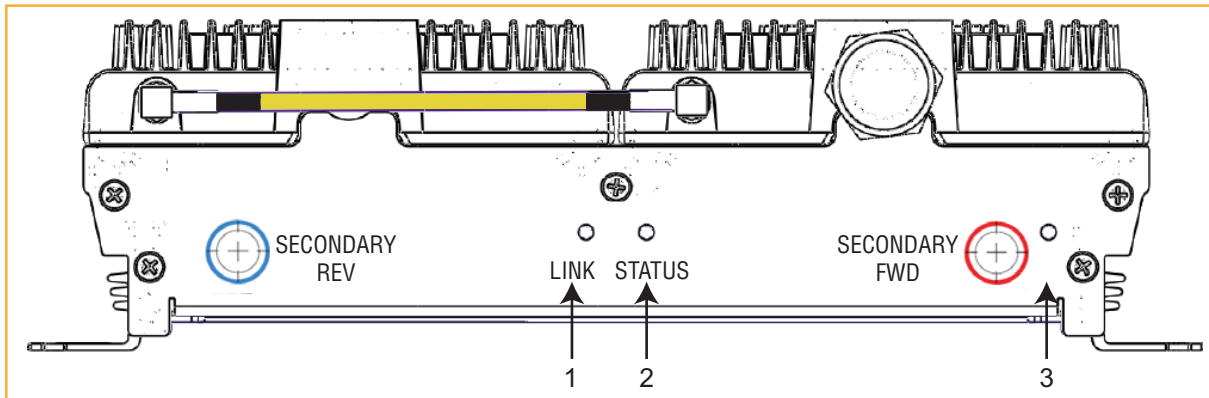

Ref #	LED	LED Color	Description
1	LINK	<ul style="list-style-type: none"> <li>Green</li> <li>Red</li> <li>Off</li> </ul>	<ul style="list-style-type: none"> <li>SRAU receiving communications from the IFEU.</li> <li>SRAU has not received communications from the IFEU for more than 90 seconds.</li> <li>During initial power up, SRAU is powering up and waiting for IFEU communications.</li> </ul>
2	STATUS	<ul style="list-style-type: none"> <li>Green</li> <li>Blinking Green</li> <li>Red</li> </ul>	<ul style="list-style-type: none"> <li>Unit has no alarms or a Minor alarm is active.</li> <li>Unit or band is set out-of-service.</li> <li>Major alarm detected.</li> </ul>
3	SECONDARY FWD	<ul style="list-style-type: none"> <li>Green</li> <li>Yellow or Blinking Yellow</li> <li>Off</li> </ul>	<ul style="list-style-type: none"> <li>SRAU is powered on correctly.</li> <li>There is an MRAU FWD connection, but there is no MRAU REV connection or the MRAU REV connection is paired incorrectly.</li> <li>Cable is not connected to the MRAU FWD port.</li> </ul>

## RAU N Connectors

Each RAU also has one or two 50- $\Omega$  N-type connectors that connect to a passive antenna. Table 3 lists the number of N-type connectors available on each RAU model.

**Table 3.** Number of N Connectors on RAUs

Catalog Number	Description	Number of RF N Connectors*
<b>Standard RAUs</b>		
SPT-M1-8519-1	Spectrum, 850-1900 Main RAU	1
SPT-M1-AWS19-11	Spectrum, 2100AWS Path 1-1900 Path 1 Main RAU	2
SPT-S1-2121-1-MIMO	Spectrum, 2100AWS MIMO Secondary RAU	2
SPT-S1-7070-1-MIMO	Spectrum, 700 MIMO Secondary RAU, UpperC-LowerABC	2
SPT-S1-8019-22	Spectrum, 800 Path 2-1900 Path 2 Secondary RAU	1
SPT-S1-8090-1	Spectrum, 800-900 SMR Secondary RAU	1
SPT-S1-80AWS-1	Spectrum, 800-2100AWS Path 1 Secondary RAU	1
SPT-S1-8519-22	Spectrum, 850 Path 2-1900 Path 2 Secondary RAU	1
SPT-S1-AWS19-12	Spectrum, 2100AWS Path 1-1900 Path 2 Secondary RAU	2
SPT-S2-70AWS-1-SISO	Spectrum, 700 SISO-2100AWS Path 1 SEC RAU, UpperC-LowerABC	1
SPT-S2-70AWS-22-SISO	Spectrum, 700 Path 2 SISO-2100AWS Path 2 SEC RAU, UpperC-LowerABC	1
<b>High Power RAUs</b>		
SPT-M3-8519-11-HP	Spectrum, 850 Path1-1900 HP Main RAU	1
SPT-8519-22-HP	Spectrum, 850 Path2 - 1900 HP Path2 Secondary RAU	1
SPT-S3-70AWS-11-HP	Spectrum, 700 Path1 uC/LABC-AWS HP Path1 Secondary RAU	1
SPT-S3-70AWS-22-HP	Spectrum, 700 Path2 uC/LABC-AWS HP Path2 Secondary RAU	1
* There are two bands per RAU, which results in two N connectors. When there is one N connector, the two bands are combined internally and both bands use the single N connector.		

## INSTALL THE RAUs AND ANTENNAS

Follow the steps in the order provided to install the RAUs and antennas.

### Mount the RAUs and Antennas

#### General Safety Precautions

**CAUTION!** Wet conditions increase the potential for receiving an electrical shock when installing or using electrically powered equipment. To prevent electrical shock, never install or use electrical equipment in a wet location or during a lightning storm.

**CAUTION!** This system is a RF Transmitter and continuously emits RF energy. Maintain a minimum 8-inch (20 cm) clearance from the antenna while the system is operating. Whenever possible, shut down the RAN before servicing the antenna.

**NOTE:** RAUs are suitable for use in environmental air space in accordance with Section 300-22(c) of the National Electrical Code, and Sections 2-128, 12-010(3) and 12-100 of the Canadian Electrical Code, Part 1, CSA C22.1.

**CAUTION!** Install RAUs in indoor locations only. Do not connect an antenna installed in an outdoor location to a RAU, unless it is in an approved AOC weatherproof NEMA4 housing.

**CAUTION!** Attach all RAUs securely to a stationary object (that is, a wall, pole, or ceiling brackets). To mount a RAU securely to a wall, ceiling bracket, or pole, use #6 diameter fasteners in the four slotted mounting holes.

**CAUTION!** Do the following to maintain proper ventilation:

- Keep at least 76 mm (3-inch) clearance around the RAU.
- Do not stack RAUs on top of each other.
- Always mount the RAU with the solid face (containing the mounting holes) against the mounting surface.

**NOTE:** You can place the RAU, without its fastening hardware, on a flat surface, such as a shelf, desk, cabinet, or any other horizontal surface that allows stable placement, with the mounting base facing down to the mounting surface.

**CAUTION!** If installing the RAU on a flat surface, the surface must be able to hold a minimum 7-pound load securely.


Do the following, in the order presented, to mount the RAUs and antennas:

- 1 Mount all MRAU and SRAUs in the locations marked on the floor plans.
- 2 Install the passive antennas according to the manufacturer's installation instructions.

**NOTE:** It is common practice to install passive antennas below the ceiling. If you install a passive antenna above the ceiling, when estimating the antenna coverage area, account for additional loss due to the ceiling material.

- 3 Connect a passive multi-band antenna to the N connector on each RAU using coaxial cable with the least amount of loss possible. (See “Appendix C: Omni Antenna” on page 29 for information on the Omni Antenna ports.)

**CAUTION!** Firmly hand-tighten the N connector. DO NOT over-tighten the connector.

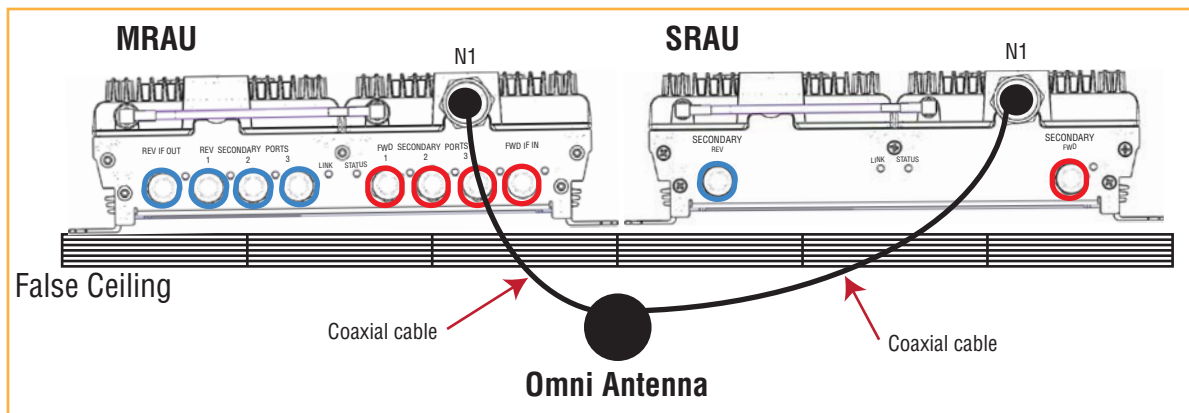

## Connect the IFEU to the MRAU

**NOTE:** The IFEU should be powered up before starting this procedure; see the *InterReach Spectrum Expansion Module Group Installation Guide (TECP-77-167)*.


- 4 Follow these rules for the CATV cables when connecting the IFEU to the MRAU:
  - The FWD and REV cables should be close to the same length.
  - The FWD and REV cables should be the same cable type (both RG6 or both RG11).
  - A pair of CATV cables connects each MRAU to the IFEU. The IFEU REV Module IF IN port and the IFEU FWD Module IF OUT port must match. For example, if IFEU REV Module IF IN Port 3 is used, use IFEU FWD Module IF OUT Port 3.
  - Refer to [“Appendix B: 75-Ohm CATV Cable” on page 24](#) for information on maximum RG-6 or RG-11 CATV cable lengths.
- 5 Test the cable termination for each CATV cable before installing it.
- 6 Connect F connector CATV cables on the IFEU and MRAU, in the order given below.

If the LEDs do not perform as described in this procedure, refer to [“MRAU LEDs” on page 8](#).

- a Connect a CATV cable from one of the IFEU FWD Module IF OUT connectors (1 - 8) to the MRAU FWD IF IN connector.
- b Confirm that the MRAU FWD IF IN LED is yellow, which indicates a correct physical connection.
- c Connect a CATV cable from the IFEU REV Module IF IN connector (1 - 8) to the MRAU REV IF OUT connector, making sure that you pair the port used to the same port number selected in Step 6a.

If the connection is correct, the MRAU powers up and the MRAU FWD IF IN LED turns green.



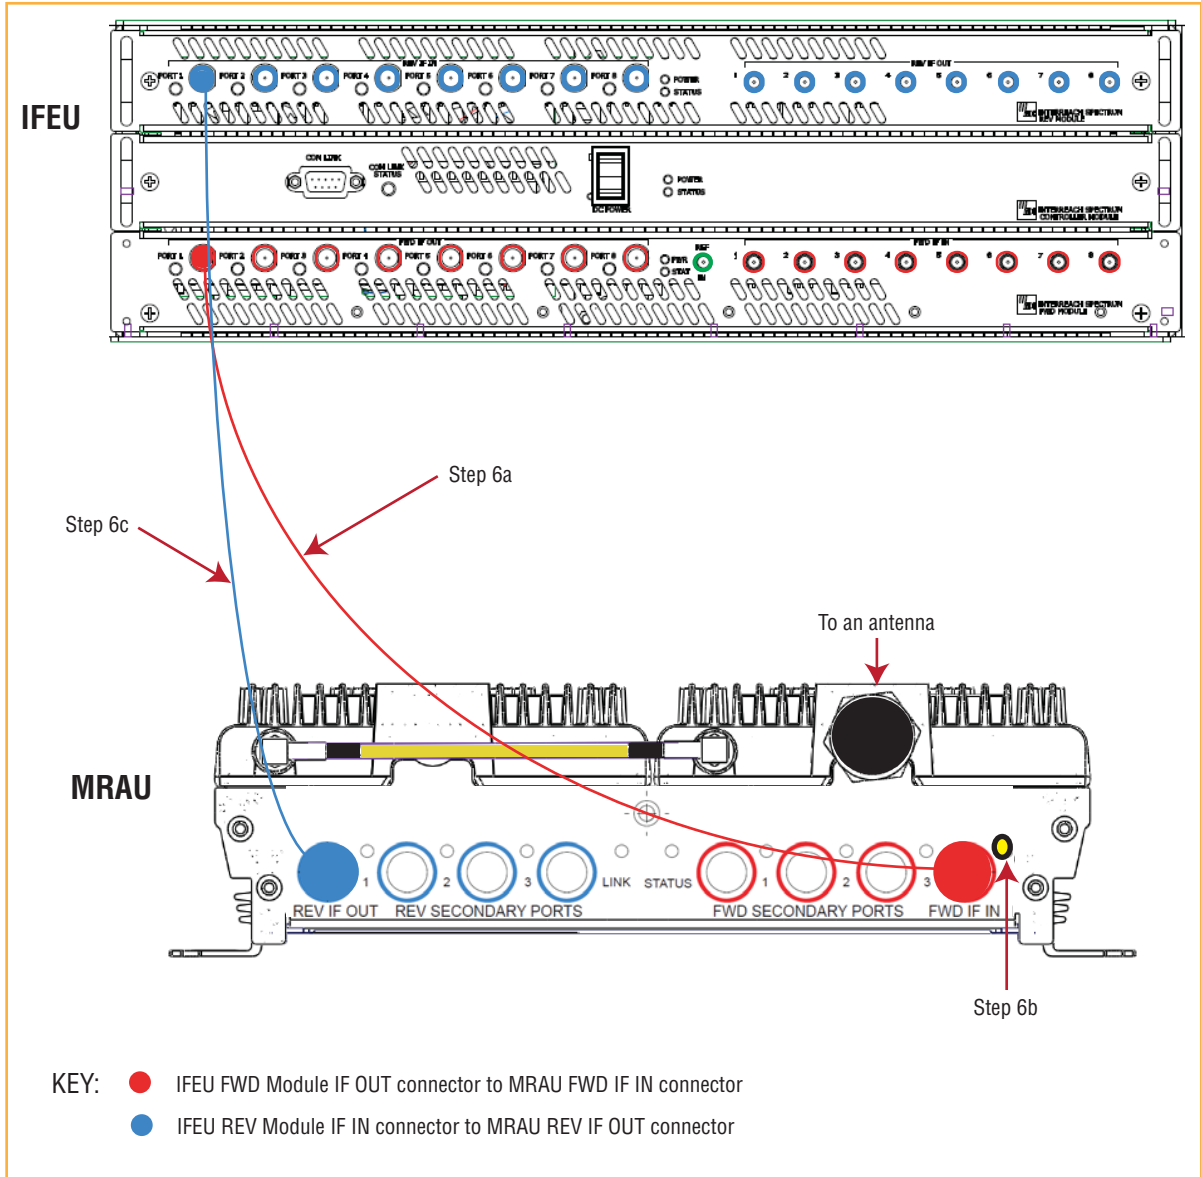

## Connect the MRAU to SRAUs


**CAUTION!** To prevent interference, do not install an 850/1900 MRAU antenna near an 800/900 SRAU. The 850 MHz band must be 20 feet away from the 800/1900 SRAU's passive antenna.

- 7 Use one of the following 6' and 20' CATV RG6 jumpers, available for purchase from TE Connectivity, to connect an MRAU to SRAUs.


TE Connectivity Part Number	Description	Note
300469-0	6' RG-6 Cable; F Male to F Male	CATV cable that connects the MRAU to SRAUs. Two cables required per SRAU.
300469-1	20' RG-6 Cable; F Male to F Male	CATV cable that connects the MRAU to SRAUs. Two cables required per SRAU.

- 8 Test the cable termination for each CATV cable before installing it.
- 9 Connect F connector CATV cables from the MRAU to an SRAU, in the order given below. If the LEDs do not perform as described in this procedure, refer to ["SRAU LEDs" on page 10](#).
  - a Connect a CATV cable from an MRAU FWD SECONDARY PORT (1, 2, or 3) F connector to the SRAU SECONDARY FWD F connector.
  - b Confirm that the SRAU SECONDARY FWD LED is yellow, which indicates a correct physical connection.
  - c Connect a CATV cable from an MRAU REV SECONDARY PORT (1, 2, or 3) F connector to the SRAU SECONDARY REV F connector, matching the same port number selected in Step 9a. That is, if in Step 9a you connected an F connector to the MRAU FWD SECONDARY PORT **1**, the paired CATV cable must connect to the MRAU REV SECONDARY PORT **1**.

If the connection is correct, the SRAU powers up and the SRAU SECONDARY FWD LED turns green.

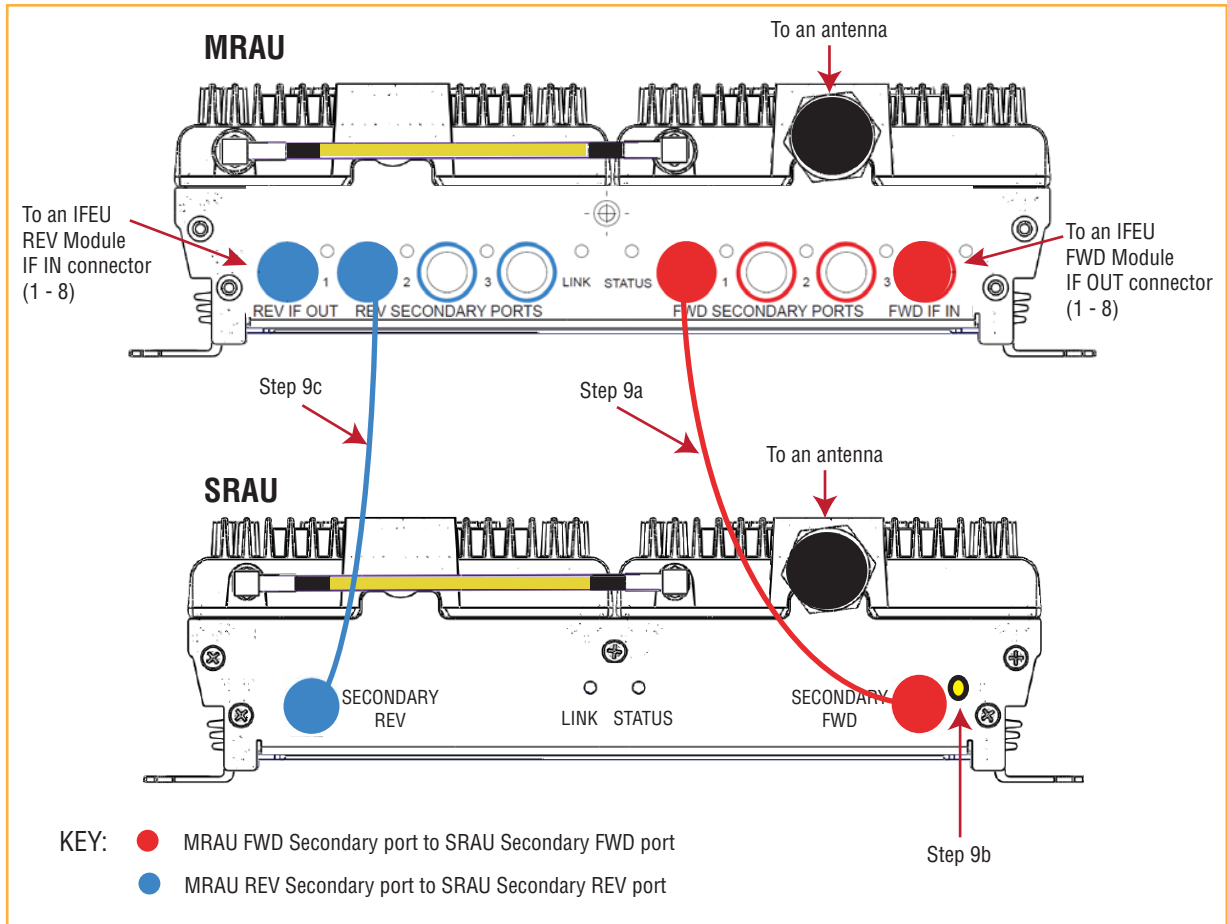

10 Repeat Step 9 to install up to two more SRAUs, as per system design.

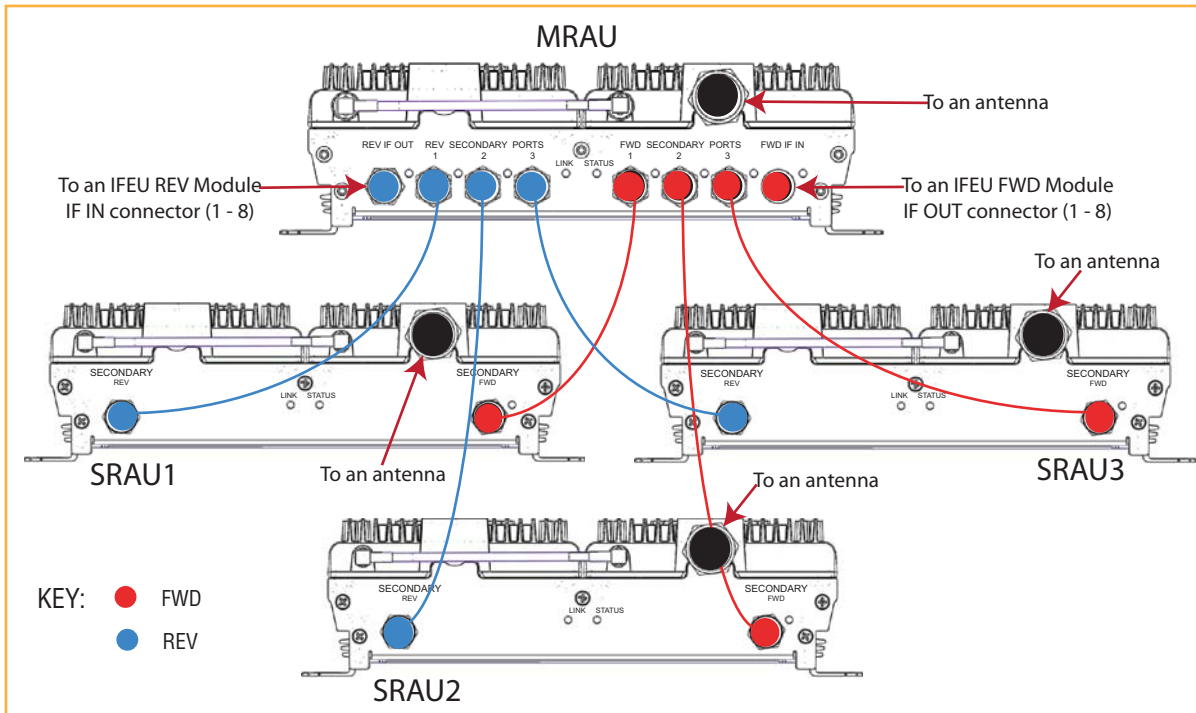

## Configure the MRAUs and SRAUs

Refer to the *InterReach Spectrum™ Element Management System 7.3 User Manual* (TECP-77-200) for information on how to configure the MRAUs and SRAUs.

## APPENDIX A: SPECIFICATIONS

### Remote Access Unit Specifications

Operating Temp	-25°C to +50°C
Storage Temperature	-40°C to +70°C
Humidity	10% to 95% non-condensing
Dimensions	11.50" x 9.00" x 3.50"
Weight	7.49 Pounds
Power Source	+54Vdc (from IFEU)

### Spectrum System Specifications

#### RF Specification

Supported Frequency Blocks	2 per Remote Antenna Unit; 1-8 per Host Unit
Bandwidth	1.5 to 75 MHz non-contiguous
Frequency Band Supported	850 Cellular; 800 iDEN; 900 iDEN; 1900 PCS; 2100 AWS; 700 Upper C Lower ABC

	Low/Medium Power Level 700-900 MHz Typical		Low/Medium Power Level 1900-2100 MHz Typical		High Power Level 1900-2100 MHz Typical	
	TX	RX	TX	RX	TX	RX
Average gain with 180 m CATV at 25°C (77° F) (dB)	40 <sup>1</sup> /43 <sup>2</sup>	30	40 <sup>1</sup> /43 <sup>2</sup>	30	48	30
Ripple with 180 m CATV (dB)	2.5	3.0	3.5	4.0	3.5	4.0
Output IP3 (dBm)	38		38		43	
Input IP3 (dBm)		-8		-8		-8
Output 1 dB Compression Point (dBm)	26		26		31	
Noise Figure 1 HU-1 EMG-8 RAUs (dB)		17		17		17
Noise Figure 1 HU-4 EMG-32 RAUs (dB)		23		23		23

- 1 Low Power is defined here as a Standard MRAU used with Standard SRAUs.
- 2 Medium Power is defined here as a High Power MRAU used with Standard SRAUs.

#### Propagation Delay

System Delay	<12 microseconds
Delay Management Digital	(Manual or Automatic)

## Nominal Passband Gains

	RF Frequency	
	TX	RX
850 Cell		
Bandwidth	869-894	824-849
Gain (dB)	40	30
800 SMR		
Bandwidth	851-869	806-824
Gain (dB)	40	30
900 SMR		
Bandwidth	935-940	896-901
Gain (dB)	40	30
1900 PCS		
Bandwidth	1930-1995	1850-1915
Gain (dB)	40	30
2100 AWS		
Bandwidth	2110-2155	1710-1755
Gain (dB)	40	30
700 Upper C		
Bandwidth	746-756	776-786
Gain (dB)	40	30
700 Lower ABC		
Bandwidth	728-746	698-716
Gain (dB)	40	30

## Composite Power Out of RAU

**Table 4.** Low Power Level: Standard MRAU with SRAUs

	RF Frequency		Power per Carrier (dBm) per Band					
	TX	RX	Number of RF Carriers					
			1 P-out	2 P-out	4 P-Out	8 P-out		
<b>Standard MRAUs:</b> <ul style="list-style-type: none"> <li>• SPT-M1-8519-1</li> <li>• SPT-M1-AWS19-11</li> </ul> <b>Standard SRAUs</b> <ul style="list-style-type: none"> <li>• SPT-S1-8090-1</li> <li>• SPT-S1-7070-1-MIMO</li> <li>• SPT-S1-80AWS-1</li> <li>• SPT-S2-70AWS-1-SISO</li> <li>• SPT-S2-70AWS-22-SISO</li> <li>• SPT-S1-AWS19-12</li> <li>• SPT-S1-2121-1-MIMO</li> <li>• SPT-S1-8019-22</li> <li>• SPT-S1-8519-22</li> </ul>	850 Cell	869-894	824-849	26.0	20.0	14.0	9.0	GSM
				23.0	17.5	12.0	8.0	EDGE
				15.0	12.0	9.0	6.0	CDMA
				15.0	12.0	9.0	6.0	WCDMA
				15.0	12.0	9.0	6.0	LTE
	800 SMR	851-869	806-824	17.5	14.0	10.0	6.5	iDEN
				26.0	19.5	13.5	8.5	APCO 25 C4FM
				15.0	12.0	9.0	6.0	CDMA
				15.0	12.0	9.0	6.0	LTE
	900 SMR	935-940	896-901	17.5	14.0	10.0	6.5	iDEN
				26.0	20.0	13.5	9.0	APCO 25 C4FM
	1900 PCS	1930-1995	1850-1915	26.0	20.0	14.0	9.0	GSM
				23.0	17.5	12.0	8.0	EDGE
				15.0	12.0	9.0	6.0	CDMA
				15.0	12.0	9.0	6.0	WCDMA
				15.0	12.0	9.0	6.0	LTE
	2100 AWS	2110-2155	1710-1755	15.0	12.0	9.0	6.0	WCDMA
				15.0	12.0	9.0	6.0	LTE
	700 Upper C	746-756	776-786	15.0	12.0	9.0	6.0	LTE
	700 Lower ABC	728-746	698-716					

**Table 5. Medium Power Level: High Power MRAUs<sup>1</sup> used with Standard SRAUs**

		RF Frequency		Power per Carrier (dBm) per Band				
				Number of RF Carriers				
		TX	RX	1 P-out	2 P-out	4 P-Out	8 P-out	
<b>Standard SRAUs</b> <ul style="list-style-type: none"> <li>• SPT-S1-8090-1</li> <li>• SPT-S1-7070-1-MIMO</li> <li>• SPT-S1-80AWS-1</li> <li>• SPT-S2-70AWS-1-SISO</li> <li>• SPT-S2-70AWS-22-SISO</li> <li>• SPT-S1-AWS19-12</li> <li>• SPT-S1-2121-1-MIMO</li> <li>• SPT-S1-8019-22</li> <li>• SPT-S1-8519-22</li> </ul>	850 Cell	869-894	824-849	26.0	20.0	14.0	9.0	GSM
				23.0	17.5	12.0	8.0	EDGE
				18.0	15.0	12.0	9.0	CDMA
				18.0	15.0	12.0	9.0	WCDMA
				18.0	15.0	12.0	9.0	LTE
	800 SMR	851-869	806-824	17.5	14.0	10.0	6.5	iDEN
				26.0	19.5	13.5	8.5	APCO 25 C4FM
				18.0	15.0	12.0	9.0	CDMA
				18.0	15.0	12.0	9.0	LTE
	900 SMR	935-940	896-901	17.5	14.0	10.0	6.5	iDEN
				26.0	19.5	13.5	8.5	APCO 25 C4FM
	1900 PCS	1930-1995	1850-1915	26.0	20.0	14.0	9.0	GSM
				23.0	17.5	12.0	8.0	EDGE
				18.0	15.0	12.0	9.0	CDMA
				18.0	15.0	12.0	9.0	WCDMA
				18.0	15.0	12.0	9.0	LTE
	2100 AWS	2110-2155	1710-1755	18.0	15.0	12.0	9.0	WCDMA
18.0				15.0	12.0	9.0	LTE	
700 Upper C	746-756	776-786	18.0	15.0	12.0	9.0	LTE	
700 Lower ABC	728-746	698-716						

1 See power per carrier of HP MRAU from [Table 6 on page 23](#).



**Table 6.** High Power Level: High Power MRAU with High Power SRAUs

		RF Frequency		Power per Carrier (dBm) per Band				
				Number of RF Carriers				
		TX	RX	1 P-out	2 P-out	4 P-Out	8 P-out	
<b>High Power MRAU</b> • SPT-M3-8519-11-HP  <b>High Power SRAUs</b> • SPT-S3-70AWS-11-HP • SPT-S3-70AWS-22-HP • SPT-S3-8519-22-HP	850 Cell	869-894	824-849	26.0	20.0	14.0	9.0	GSM
				23.0	17.5	12.0	8.0	EDGE
				18.0	15.0	12.0	9.0	CDMA
				18.0	15.0	12.0	9.0	WCDMA
				18.0	15.0	12.0	9.0	LTE
	800 SMR	851-869	806-824	17.5	14.0	10.0	6.5	iDEN
				26.0	19.5	13.5	8.5	APCO 25 C4FM
				18.0	15.0	12.0	9.0	CDMA
				18.0	15.0	12.0	9.0	LTE
	900 SMR	935-940	896-901	17.5	14.0	10.0	6.5	iDEN
				26.0	19.5	13.5	8.5	APCO 25 C4FM
	1900 PCS	1930-1995	1850-1915	26.0	23.0	19.0	14.0	GSM
				26.0	22.5	17.0	13.0	EDGE
				23.0	20.0	17.0	14.0	CDMA
				23.0	20.0	17.0	14.0	WCDMA
				23.0	20.0	17.0	14.0	LTE
	2100 AWS	2110-2155	1710-1755	23.0	20.0	17.0	14.0	WCDMA
				23.0	20.0	17.0	14.0	LTE
	700 Upper C	746-756	776-786	18.0	15.0	12.0	9.0	LTE
	700 Lower ABC	728-746	698-716					

## APPENDIX B: 75-OHM CATV CABLE

The 75-Ohm CATV Cable:


- connects the IFEU to MRAU(s) and the MRAU(s) to the SRAU(s)
- transmits (FWD) multiband and receives (REV) IF signals
- delivers DC electrical power to the RAUs. The Spectrum IFEU DC voltage output is +54Vdc nominal. If the IFEU reaches its current limit, a current-limiting circuit protects it.
- carries configuration and status information
- uses 75Ω type-F connectors with captive center pins.

### CATV Cable Requirements

**Belden CATV cable or equivalent is required (see Figure 2).**

- For the RG-6 cable, use a Belden 1695A Coax.
- For the RG-11 cable, use a Belden 7732A Coax.

**NOTE:** TE Connectivity requires solid copper center conductor CATV cable for proper DC voltage to the RAU and maximum distances.

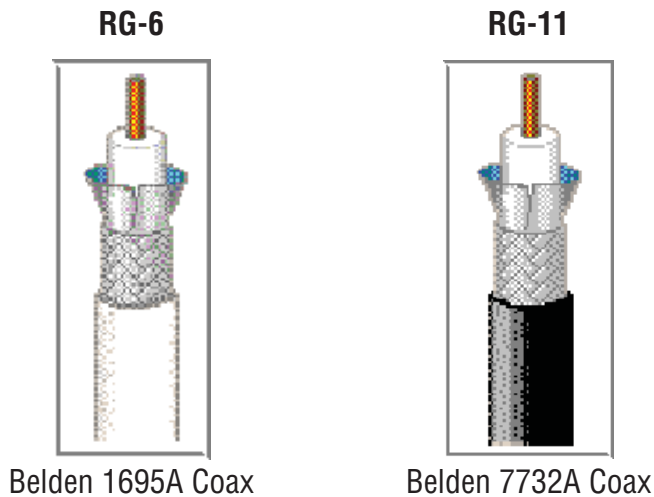

**Figure 2.** Belden 1695A and 7732A Coax Cables

- Use RG-6 or RG-11 CATV cable between the IFEU and MRAU, the typical lengths of which are listed below.

Cable Type	Minimum Length		Maximum Length	
	Meters	Feet	Meters	Feet
RG-6	0	0	125	410
RG-11	0	0	180	590

- Use only RG-6 CATV cable between the MRAU and SRAU, the lengths of which are listed below.

RG-6 Cable	Meters	Feet
Typical	2	6.56
800/900 iDEN to 850 CELL	6	19.68
800 AWS to 850 CELL	6	19.68

## Belden 1695A Coax Specifications

### Description

RG-6/U type, 18 AWG solid 0.040-inch bare copper conductor, plenum, foam FEP insulation, Duofoil® + tinned copper braid shield (95% coverage), Flamarrest® jacket.

### Overall Physical Characteristics

Conductor	One Coax 18 AWG Solid stranding Bare Copper (BC) conductor material 0.040-inch diameter
Insulation	Teflon® Foam Fluorinated Ethylene Propylene (FFEP) 0.170-inch diameter
Outer Shield Layer 1	Duofoil® Tape Aluminum Foil-Polyester Tape-Aluminum Foil 100% coverage
Outer Shield Layer 2	Braid Tinned Copper (TC) 95% coverage
Outer Jacket	Flamarrest® Low Smoke Polyvinyl Chloride (LS PVC)
Overall Cabling	0.234-inch overall nominal diameter

## Overall Nominal Electrical Characteristics

Characteristic Impedance	75.000Ω
Inductance	0.103 μH/ft.
Capacitance Conductor to Shield	16.100 (pF/ft.)
Velocity of Propagation	82 (%)
Delay	1.240 (ns/ft.)
Conductor DC Resistance	6.400 @ 20°C (Ω/1000 ft.)
Outer Shield DC Resistance	2.800 @ 20°C (Ω/1000 ft.)
Attenuation	

Freq. (MHz)	Attenuation (dB/100 ft.)
1.000	0.240
3.580	0.450
5.000	0.550
7.000	0.650
10.000	0.750
67.500	1.740
71.500	1.780
88.500	1.940
100.000	2.100
135.000	2.400
143.000	2.500
180.000	2.800
270.000	3.400
360.000	4.000
540.000	5.200
720.000	6.100
750.000	6.200
1000.000	7.300
1500.000	9.200
2000.000	10.900
2250.000	11.600
3000.000	13.700

## Belden 7732A Coax Specifications

### Description

RG-11/U type, 14 AWG solid 0.064-inch bare copper conductor, plenum, foam FEP insulation, Duofoil® + tinned copper braid shield (95% coverage), fluorocopolymer jacket.

### Overall Physical Characteristics

Conductor	One Coax 18 AWG Solid stranding Bare Copper (BC) conductor material 0.064-inch diameter
Insulation	Teflon® Foam Fluorinated Ethylene Propylene (FFEP) 0.274-inch diameter
Outer Shield Layer 1	Duofoil® Tape Aluminum Foil-Polyester Tape-Aluminum Foil 100% coverage
Outer Shield Layer 2	Braid Tinned Copper (TC) 95% coverage
Outer Jacket	Fluorocopolymer (PVDF)
Overall Cabling	0.348-inch overall nominal diameter


## Overall Nominal Electrical Characteristics

Characteristic Impedance	75.000Ω
Inductance	0.091 μH/ft.
Capacitance Conductor to Shield	16.300 (pF/ft.)
Velocity of Propagation	83 (%)
Delay	1.220 (ns/ft.)
Conductor DC Resistance	2.500 @ 20°C (Ω/1000 ft.)
Outer Shield DC Resistance	1.600 @ 20°C (Ω/1000 ft.)
Attenuation	

Freq. (MHz)	Attenuation (dB/100 ft.)
1.000	0.150
3.580	0.260
5.000	0.300
7.000	0.340
10.000	0.400
67.500	1.200
71.500	1.240
88.500	1.400
100.000	1.500
135.000	1.780
143.000	1.840
180.000	2.090
270.000	2.600
360.000	3.100
540.000	3.890
720.000	4.570
750.000	4.680
1000.000	5.500
1500.000	6.910
2000.000	8.130
2250.000	9.200
3000.000	10.200

## APPENDIX C: OMNI ANTENNA

The Omni Antenna (4214-0727), shown in [Figure 3](#), is a round radome with the following specifications:

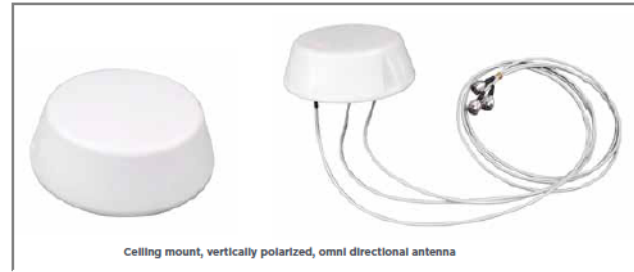

**Figure 3.** Omni Antenna

	Port 1	Port 2	Port 3
Gain, typical	2 dBi @ 698-960 MHz 3 dBi @ 1710-2170 MHz	2 dBi @ 698-960 MHz 3 dBi @ 1710-2170 MHz	3 dBi @ 1710-2170 MHz 3 dBi @ 2496-2690 MHz
Nominal impedance	50 Ohm		
Polarization	Vertical		
VSWR	< 2:1		
Port-to-port isolation	>15 dB min, 22 dB typical		
Power rating	5 Watt		
<b>Mechanical</b>			
Dimension of Antenna (DxH)	215 x 72 mm		
Weight	Less than or equal to 1.65 lbs (0.75kg), including pigtailed		
Connector	N (male)		
Cable (pigtail) length	6 feet, plenum rated cable		
Color	White, UV protected plastic for outdoor use		
Mounting hardware	Screws, anchor, and butterfly nut for ceiling tile mount		
<b>Environmental</b>			
Operating temperature	- 40°C to + 65°C		
Shipping and Handling	ISTA Procedure 1A		
Ingress protection	IP-42		
Flammability	UL94V0 (Materials)		
Compliance	ROHS compliant		

**NOTE:** Two antennas per RAU is required for MIMO performance.

## APPENDIX D: CONTACTING TE CONNECTIVITY

### Contacting TE Connectivity by Telephone

#### Sales

Asia Pacific	+65-6294-9948
France	0800 914032
Germany	0180 2232923
Italy	0800 782374
Spain	900 983291
United Kingdom	0800 960236
USA or Canada	1-800-366-3891
Extension	73000
Connectivity Extension	73475
Wireless Extension	73476



#### Technical Support

USA or Canada	1-800-530-9960
Elsewhere	+1-952-917-0761

### Online Access to TE Connectivity

#### Customer Portal

<https://www.te.com/commerce/uso/myaccount.do>

#### Technical Support for Wireless Products

<http://www.te.com/WirelessSupport>





[www.te.com/adc](http://www.te.com/adc)

