

# THE USER'S GUIDE MANUAL.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


## USER'S GUIDE MANUAL.

### \* FEATURES

- ▶ User selectable alphanumeric display (character zooming)
  - 8 line : 20 characters per line(6x8 dots font)
  - 4 line : 20 characters per line(6x16 dots font)
  - 4 line : 15 characters per line(8x16 dots font)
- ▶ Memory Capacity (total 60,000 characters)
  - Private 1,000 characters x 20 slot
  - Mail drop 1,000 characters x 4 slot x 8 Item

- Notebook 1,000 characters x 8 slot
- ▶ Shows Time of Day and Date
- ▶ Message Time and Date Stamping
- ▶ Message Lock up to 10 Messages
- ▶ Reminder Alert for Message(s) Unread (Every 3 minutes)
- ▶ Duplicate Message Indication
- ▶ Message Slot Scrolling and Page Scrolling
- ▶ Individual Message Delete and Erase All
- ▶ Memory Full Indication
- ▶ Erred message indication
- ▶ 3 Selectable Alert Mode (Beep, Vibration and Silent)
- ▶ 10 Selectable Alerts (4 Tones, 6 Musical Alerts)
- ▶ 4 Selectable Auto Reset Time (12sec, 20sec, 28sec, 36sec)
- ▶ Built in Audible Alarm Clock
- ▶ Service Area Indication
- ▶ LCD brightness controllable
- ▶ LCD Back Lighting
- ▶ Automatic power On/Off (On/Off time programmable)
- ▶ Backup battery for memory Retention during battery replacement
- ▶ Battery Level display
- ▶ Low Battery Warning for Battery Replacement

## ***Control Buttons***

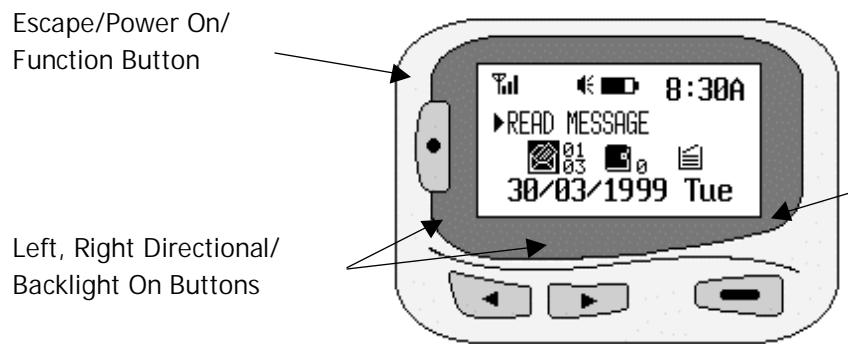

- Escape/Power On/ - Used to display the Function/Message Read Menu, to turn the pager on, Function Button and to Escape current state.
- ◀ Left, Right Directional/ - Used to navigate through the Function/Message Read Menu, to preview
- ▶ Backlight On Buttons - your messages, to navigate through time/alarm/auto power on/off setting functions, and to turn the backlight on (press and hold for two seconds).
- Read/Select Button - Used to select a pager function, to activate your selection, to navigate through time/alarm/auto power on/off setting function, and to display message manipulate screen (press for two seconds while reading message).

## **4. Operation**

## Turning Your Pager On

Press and hold ● for two seconds. A start-up screen is displayed and your pager activates the initial alert.

## Turning Your Pager Off

- ① Press ● to display the function menu.
- ② Press ▲ to move the cursor to .
- ③ Press — to turn Pager off.

Your pager is now off and the screen is blank. The buttons are not functioned except ● button.

If you press ● shortly, "-POWER OFF-" is displayed with current time and date.

## Backlight

The Backlight is on at any time by pressing and holding ▲ or ▼ for two seconds.

## Using the Function Menu

The Function Menu provides access to the many features of your pager through the use of symbols.

- ① Press ● to display the function menu.  
The location of the cursor is indicated by inverted symbol.
- ② Press ▲ or ▼ to move the cursor within the function menu.  
As you move through the Function Menu, the function symbols  
Inverted to indicate the present location of the cursor.
- ③ Press — to activate function.  
To exit from the Function Menu without making any changes or go back to the Message Menu, press ●.



## Using the Message Read Menu

- ① Press ▲, ▼ or — to display the message menu.
- ② Press ▲ or ▼ to move within the message menu  
(Private, Notebook and Maildrop).
- ③ Press — to read message.

Note:  **01** Number of unread message(s).  
 **03** Number of stored messages(s).

*Example of Message Read Menu Screen*



When the memory is full (20 messages), "FULL" is displayed instead of message number.

## Receiving/Reading/Manipulating Personal Messages

Your pager can receive up to 20 personal messages. When a message is received, your pager alerts according to the current alert setting (audible, vibrate, or no alert).

### -Reading an Incoming Message

- ① Press — to display your message. Press — again to read the next screen.
- ② Press ▲ or ▼ to go back to the first screen of the message.

### -Previewing/Reading/Deleting/locking/unlocking/Moving to Notebook a Stored Message

- ① Press ▲ or — to display the message menu.
- ② Press — to display message preview screen. Press ▲ or ▼ to preview the message you want to read.
- ③ Press — to read the detailed message. Press — again to read the next screen.  
If you want to delete/lock/unlock or move to Notebook the message while reading it, press and hold — for two seconds to display Message Manipulate Screen. Press ▲ or ▼ to move the cursor to the desired function, and press — to activate it.

④ If you want to go back to the preview screen, press ●.

**Note:** When an unread message exists, your pager gives a periodic reminder alert (every 3 minutes) until all unread messages are read. A  on the pager status line indicates that you have unread messages. Reminder alert is enabled or disabled through the Function Menu. Reminder ats  off.



Example of Message Preview Screen



Example of Message Read Screen



Example of Message Manipulate Screen

## Display Zoom

When this feature is activated, the standard 4-line (20 characters per line) display is converted to a 4-line (15 characters per line) or 8-line (10 characters per line) display.

### -To select Display Zoom

- ① Press ● to display the Function Menu.
- ② Press ▲ to move the cursor to ① ② ③ (current setting).
- ③ Press ■ to select desired zooming step ( ① ② ③ )

## Deleting Messages

### -To Delete Single Message while Reading It

- ① From the Message Manipulate Screen, press ▶ to move the cursor to X.
- ② Press ■ to delete the message.

### -To Delete All Unlocked Messages

- ① From the Function Menu, press ▲ to move the cursor to X.
- ② Press ■ "Delete All ?" screen is displayed.
- ③ Press ▶ to move the cursor to Y.
- ④ Press ■ All unlocked messages are deleted.



**Note:** Notebook messages are not deleted with this feature.

## Locking and Unlocking Messages

Up to 10 messages can be locked to prevent them from being deleted or from being replaced when memory is full. When a message is locked, the  symbol displayed on the Time Stamp line while reading the message.

### -To Lock or Unlock a Message while Reading It

- ① From the Message Manipulate Screen, press ▶ to move the cursor to X.
- ② Press ■ to lock or unlock the message.



## Notebooks

Your pager has eight notebook areas for storing personal messages.

### -Storing Personal Messages in Your Notebooks

- ① From the Message Manipulate Screen, press ▲ or ▶ to move the cursor to X.
- ② Press ■ The message is now in the Notebook.

### -Reading/Deleting Messages in Your Notebooks

- ① From the Message Read Menu Screen, press ▶ to move the cursor to X.
- ② Notebook messages are read and deleted the same way as personal messages.

**Note:** Notebook messages are deleted one at a time. Storing to notebook is not activated when it is full.

## **Maildrop/Information Service**

Your pager has eight Maildrop areas (Each area has four rooms for storing maildrop messages).

### **-Reading Messages in Your Maildrop**

- 1 From the Message Read Menu Screen, press **◀** or **▶** to move the cursor .
- 2 Maildrop messages are read the same way as personal messages.



### **-Turning Maildrop Alerts On and Off**

- 1 From the Function Menu Screen, press **◀** or **▶** to move the cursor alert on or alert off.
- 2 Press **—** to turn the maildrop alert on or off.

## **Setting the Incoming Message Alert**

- 1 From the Function Menu, press **◀** or **▶** to move the cursor to (Alert setting).
- 2 Press **—** to change the type of alert (audible, vibrate or silent).

**Note:** The current Alert setting , , also displayed on the pager status line.

### **-Setting the Alert Pattern (Tone or Melody)**

- 1 From the Function Menu, press **◀** to move the cursor .
- 2 Press **—** to display the Select Melody screen.
- 3 Press **◀** or **▶** to move the cursor to desired number.
- 4 Press **—** to listen the melody or tone.
- 5 Repeat steps 3 and 4 to select another pattern.



## **Setting the Time and Date**

- 1 From the Function Menu, press **▶** to move the cursor .
- 2 Press **—** to display the Set Time/Date screen.
- 3 Press **◀** or **▶** to adjust the hour.
- 4 Press **—** to move the cursor to next set of digits.
- 5 Repeat steps 3 and 4 to adjust minutes, day/month(or month/day)/year/week.
- 6 Press **●** to activate the time and date setting.



## **Setting the Alarm**


- 1 From the Function Menu, press **▶** to move the cursor .
- 2 Press **—** to display the Set Alarm screen.
- 3 Press **◀** or **▶** to enable or disable alarm.
- 4 Press **—** to move the cursor to alarm hour.
- 5 Press **◀** or **▶** to adjust the hour.
- 6 Repeat for minutes.
- 7 Press **●** to activate the alarm setting.



**Note:** If alarm is on, the symbol is displayed on the pager status line.

## **Setting the Auto Power On/Off**

- 1 From the Function Menu, press **▶** to move the cursor or .
- 2 Press **—** to display the Set Auto Power On/Off screen.
- 3 Press **◀** or **▶** to enable or disable auto-power-on/off.
- 4 Press **—** to move the cursor to auto-off hour digits.
- 5 Press **◀** or **▶** to adjust the hour of auto-off time.
- 6 Repeat steps 4 and 5 to adjust the minutes and auto-on time .
- 7 Press **●** to activate the auto-power-on/off setting.

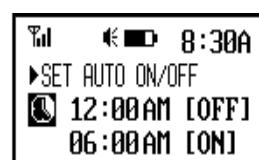

## **Setting the Time Mode**

- ① From the Function Menu, press ▶ to move the cursor to <sup>12</sup><sub>24</sub> (current setting).
- ② Press — to change the Time Mode to 12 hour time or 24 hour time.

## **Setting the Date Mode**

- ① From the Function Menu, press ▲ or ▼ to move the cursor to <sup>DM</sup><sub>YM</sub> (current setting).
- ② Press — to change the Date Mode to Day/Month/Year or Month/Day/Year.

## **Adjusting LCD Brightness**

- ① From the Function Menu, press ▲ or ▼ to move the cursor to 
- ② Press — to display the LCD Brightness screen.
- ③ Press ▲ or ▼ to adjust brightness of LCD display.
- ④ Press ● to exit.



## **Setting the Auto Reset Time (Duration of Display off Time)**

- ① From the Function Menu, press ▲ or ▼ to move the cursor to <sup>12s</sup><sub>20s</sub><sup>28s</sup> (current setting).
- ② Press — to change the Auto Reset Time.

## **Battery Information**

Your pager is designed to operate with a single AAA-size alkaline battery.

### **-Low Battery Indication**

When the battery is low, "LOW BATTERY !" is displayed with beeping at every 4 minutes.

### **-Replacing the Battery**

To replace the battery, proceed as follows:

- ① Unlock the battery door by sliding the door latch away from the battery door.
- ② Slide the battery door away from the housing to remove it.
- ③ Remove the old battery and insert new one in the direction shown on the battery compartment.

### **-Battery Back-up**

Your pager has a backup battery for memory retention during battery replacement.

**Note:** To protect all the memory when you replace the battery, please change old battery to new one quickly. And avoid too much key operation during replacing battery.

## **Linkus Flex Pager Quick Reference**

### **Pager Symbols**

#### **Pager Status Symbols: (Top rows of display)**

 In Range

 Unread Message

-  Alarm On
-  Audible Alert Mode
-  Vibrate Alert Mode
-  Silent Alert Mode
-  Full Battery Gauge
-  Low Battery Gauge
- A AM Time
- P PM Time
-  24 Hour Time

## *Message Status Symbols: (Message time-stamp display)*

-  Locked Message
-  Duplicated Message
-  Erred Message

## **Message Manipulate Menu Symbols: (Display while reading message)**


- ▶ Read Next Message
- ◀ Read Previous Message
- ✖ Delete Message
- 🔒 Lock Message
- 🔓 Unlock Message
- ✉ Move to Notebook

## *Message Menu Symbols*

-  Read Private Message(s)
-  Read Note Book Message(s)
-  Read Mail drop Message(s)

## *Function Menu Symbols*

- ☒ Delete All Messages
- ① ② ③ Set Display Zooming (20Char 8Line/20Char 4Line/15Char 4Line)
- ☒ Turn Pager Off
- 🔊 🔇 🔇 Set Audible/Vibrate/Silent (no audible & vibrate) Alert
- hour hour Set 12/24 Hour Time mode
- ⏰ ⏰ Set Alarm
- ⌚ ⌚ Set Time & Date
- Set LCD Brightness
- ⌚ ⌚ Set Auto On/Off
- ✉ ✉ On/Off Mail drop Alert
- ✉ ✉ On/Off Unread Reminder
- DM M Set Date order to "Day/Month/Year" or "Month/Day/Year"
- 12s 20s 28s 36s Set Auto Reset Time (Display Time) to 12sec, 20sec, 28sec or 36sec
- Choose Alert(tone or melody)

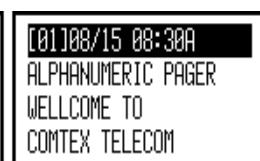

**(Function Menu) (Message Menu) (Scan Message) (Read Message) (Manipulate Message)**

Press ●, press ▲ or ▼ Press ▲ or ▼ Press twice Press while Press for 2 seconds to move cursor and and ▲ or ▼ for scan scan message while reading message press to activate

### **Turning Your Pager Off**

- ① Press ● to display the function menu.
- ② Press ▲ to move the cursor to .
- ③ Press — to turn Pager off.

### **Turning Your Pager On**

- ① Press ● for two seconds until the Pager turns on.

### **Using the Function Menu**

- ① Press ● to display the function menu.
- ② Press ▲ or ▼ to move the cursor within the function menu.
- ③ Press — to activate function.

### **Backlighting**

Press ▲ or ▼ for two seconds to activate the backlight.

### **Setting the Time and Date**

- ① Press ● to display the function menu.
- ② Press ▼ to move the cursor to .
- ③ Press — to display the Set-time-and-date screen.
- ④ Press ▲ or ▼ to adjust the hour.
- ⑤ Press — to select next set of digits.
- ⑥ Repeat for minutes, day/month(or month/day)/year/week.
- ⑦ Press ● to activate the time and date setting.

### **Setting the Alarm**

- ① Press ● to display the function menu.
- ② Press ▼ to move the cursor to  or .
- ③ Press — to display the set-alarm screen.
- ④ Press ▲ or ▼ to enable or disable the alarm.
- ⑤ Press — to select alarm hour.
- ⑥ Repeat for minutes.
- ⑦ Press ● to activate the alarm setting.

Note: alarm disabled, alarm enabled.

### **Using the Message Read Menu**

- ① Press ▲, ▼ or — to display the message menu.
- ② Press ▲ or ▼ to move within the message menu (private, notebook and maildrop).
- ③ Press — to read message.

### **Receiving and Reading Your Messages**

- ① Press any button to stop the alert.
- ② Press — to display your message.
- ③ Press ▲ or ▼ to scan (preview) messages.
- ④ Press — to view detailed message.
- ⑤ Press — again to advance message screen by screen.
- ⑥ Press ▲ or ▼ to go back to the first screen of the message.

⑦ Press ● to go back to the preview (scan) screen.

### **Deleting/Locking/Unlocking Messages or Adding to Notebook**

① Press ■ for two seconds in the message display screen(not preview screen).

② Press ▲ or ▼ to move the cursor to desired function.

③ Press ■ to activate the function.