

# USER's GUIDE MANUAL

## Introduction

Congratulations on your purchase of a Mitsuki Wave Numeric Display pager.

This User's guide explains how easy it is to use the Mitsuki Wave pagers.

## CONTENT.

### 1.PAGER LAYOUT

#### 1-1. FUNCTION INDICATORS.

#### 1-2. CONTROLS.

### 2. OPERATING INTRODUCTIONS.

#### 2-1. POWER ON.

#### 2-2. RECEIVING AND READING MESSAGE.

#### 3. SELECTING FUNCTIONS.

##### 3-1. SETTING THE MODE.

##### 3-2. ERASING THE ALL MESSAGE.

##### 3-3. SETTING THE ALERT MODE.

##### 3-4. TURNING YOUR PAGER OFF.

##### 3-5. SETTING THE CLOCK.

##### 3-6. SETTING THE ALRAM.

##### 3-7. SETTING THE AUTO ON/OFF.

#### 4. THE REST FEATURES.

##### 4-1. CONTINUOUS MESSAGE.

##### 4-2. PROTECTING & UNPROTECTING MESSAGE.

##### 4-3. DELETING INDIVIDUAL MESSAGES.

##### 4-4. DUPLICATE MESSAGES.

##### 4-5. OVERFLOW THE MEMORY.

##### 4-6. OVERFLOW THE PROTECTED MESSAGE.

##### 4-7. BACK LIGHT.

##### 4-8. PRE-PROGRAMMED MESSAGE(CANNED MESSAGE)


#### 5. BATTERY INFORMATION.

##### 5-1. BATTERY BACK-UP.

##### 5-2. REPLACEMENT THE BATTERY.

#### 6. FCC REQUIREMENTS

### 1. PAGER LAYOUT.

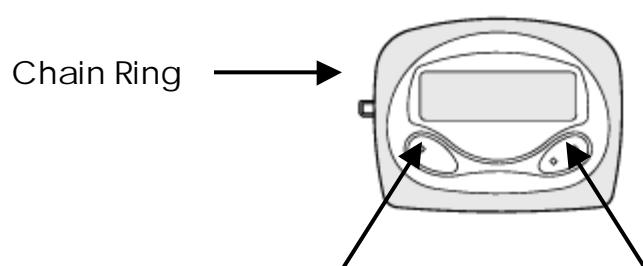

Mode button

Select button

### 1-1.FUNCTION INDICATORS.

 SERVICE AREA.

 LOW BATTERY.

 ALARM.

 VIBRATE/ALARM MODE.

 DUPLICATE MESSAGE

 PROTECTED MESSAGE.

 AUTO ON/OFF

 CONTINUOUS MESSAGE.

### 1-2.CONTROLS.

LEFT BUTTON \*Control Alarm.

(MODE) Set Mode.

Delete & Lock Selective Message.

Turn the back light ON/OFF.

Enter the function menu.

Return the pager to the standby screen.

RIGHT BUTTON \*Read Message.

(SELECT) Select Function.

Control Alarm.

Delay to return the Standby Screen.

## 2. OPERATING INTRODUCTIONS.

### 2-1.POWER ON.



Press Mode or Select button for two seconds in power Off or replace a new battery to

Turn your pager on. Your pager gives an alert sound and vibration.

After displaying the power up screen, the time of day, day of week, and an alert indicator are shown on the standby screen.

 OFF 6-00P

 SAL 6-00P

## 2-2.RECEIVING AND READING MESSAGE.

Your FLEX pager can receive up to sixteen 20 character messages. When a message is received the pager alerts for eight seconds. Press the done button to display the message and the time the message was received.

Press the Select button to display the second screen.

The first screen of your message displays the message slot number and time received.

If a message is not read, the screen displays the number of unread message

(1 memos/2 memos) until all message are read.



1 Unread Message



2 Unread Message

## 3. SELECTING FUNCTIONS.

 
### 3-1.SETTING THE MODE.

Press the Mode button for two seconds to enter the mode function on the standby screen.

Either "DELETE ALL?" or 'MELODY SET?' is displayed, depending on the message.



Press Select button



Press Select button



Press Select button



Press Select button



Press Select button



Press Select button

\*Press the Select for two second to enter the function menu at the selective modes.

### 3-2.ERASING ALL MESSAGE.

When there's any message received, press the Mode button for two seconds to enter the "DELETE ALL?" mode. If you press the Select button for two seconds to erase all messages except protected messages. The "ALL DELETED" is displayed with

delete beep.




### 3-3.SETTING ALERT MODE.

Press the Mode button for two seconds to Enter the "MELODY SET?" mode.

If you press the Select button for two Seconds, "MELODY[01]" is displayed With the melody.

Whenever you press the Select button, The alert menu is increased up to "MELODY [15]" scrolling and vibration by turns.

When you press the Mode button to select Alert menu, It is returned to the standby Screen automatically.

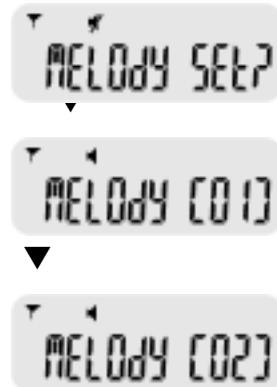

### 3-4.TURNING YOUR PAGER OFF.

Press the Mode button for two seconds to enter the mode.

Press the Select button shortly to enter the "POWER OFF?" mode.

Press the Select button for two seconds to turn your pager off.

When your pager is turned off, it cannot receive any message and is only displayed

The time.(Press either Mode or Select button for two seconds to turn your pager on).



 
### 3-5.SETTING THE CLOCK

Press the Mode button for two seconds

to enter the mode.

Press the Select button twice to enter the "CLOCK SET?" mode

press the Select button for two seconds and it is displayed “(00-01-01)”



Year blinks.

If you press the Select button, you can change the year.

▼ If you press the Select button for two seconds, the month is blinks.

Press the Select button to change the Month.



Day to change the day is the

After you set the date, press the Select button for two seconds to set the day of the week and time.

The day blinks. If you press the Select button, you can change the day.

Press the Select button for two seconds to switch to the hour.

The hour blink.

Press the Select button to change the hour.

Press the Select button for two seconds to switch to the minutes.

The first digit of the minutes blinks.

Press the Select button to change the first minute digit.

Press the Select button for two seconds to switch to the second Digit.

The second digit of minutes blinks.

Press the button to change the second minute digit.

Press the Select button for two seconds to switch to AM/PM.

The A or blinks.

Press the Select button to change A or P.

After you set day of the week and the time of the day, press the Select button for two seconds to enter “DATE ON/WEEK ON” mode.


By pressing the Select button shortly, you can choose the date Displaying type or the week type.

Press the Mode button set the clock type and to return to the Standby screen.



### 3-6.SETTING THE ALARM

 Press the Mode button for two seconds to enter mode.




Press the Select button three times to enter "ALARM SET?" mode.



If you press the Select button for two seconds, you can enter "ALARM(ON)/(OFF)" mode.



 You can change (ON)/(OFF) by pressing the button.



Select "ALARM (OFF)", it is returned to the standby screen by pressing either Mode button shortly or Select button for two seconds.



If you want to select "ALARM (ON)" mode,

Press the Select button for two seconds.



It is displayed "AL ON 7:00A" and the hour blinks.

DIMMER

The way to change the alarm time is the same with setting the clock.

When it is set "ALARM(ON)". alarm is operated in Spite of power OFF mode.

### 3-7.SETTING AUTO ON/OFF

Press the Mode button for two seconds to Enter the mode.



Press the Select button four times to

enter "AUTO SET?" mode.



If you press the Select button for two seconds, you can enter "AUTO(ON)/(OFF)" mode.



Change (ON)/(OFF) by press-

Select button.



If you want to select "AUTO (ON)" mode, press the Select button for two seconds.

It is displayed "6:00A 2:00" and the starting hour blinks.



The time is "ON" time and second

'OFF" time.



The way to change the auto on/off time

Is same with setting the clock.  
When it is set "AUTO (ON)". auto ON is operated in spite of power OFF mode.

#### 4. THE REST FEATURES

##### 4-1. CONTINUOUS MESSAGE

Message longer then 12 characters display on screen, indicated by the (▶) con. It is displayed up to 31 cgaracters.



##### 4-2. PROTECTING & UNPROTECTING MESSAGES


You can protect up to 10 messages so they are not erased or replaced by new messages.

The message you want to protect/unprotect must be displayed on the screen.

To protect a message, press the Mode button and It is displayed "LOCK?".


Press the Select button and it is displayed "LOCKED"

When reading a protected message, the protect(🔒) icon is displayed in the upper portion of the screen.

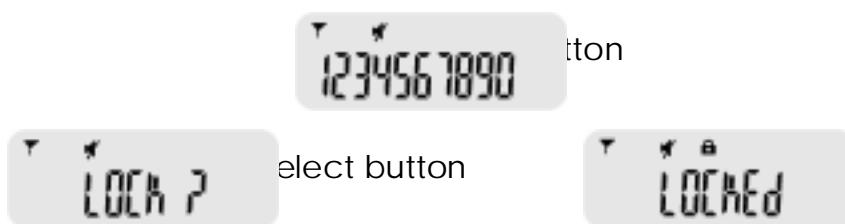

To unprotect a message, press the Mode button and the message is displayed "UNLOCK?"

Press the Select button and it is displayed "UNLOCKED." The Protect( icon is no longer displayed.

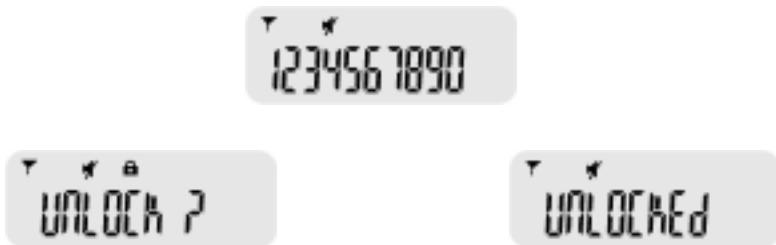

#### 4-3. DELETING INDIVIDUAL MESSAGES

Press the Select button twice while the message is displayed and "DELETE?" is displayed.

Press the Select button to delete a message. All remaining messages are moved to the next available message slots.



#### 4-4. DUPLICATE MESSAGE

If the same message is received more than once, the icon is displayed when receiving your latest message. This Message contains the latest time stamp.



#### 4-5. OVERFLOW THE MEMORY

Your FLEX pager can store up to sixteen 20 character messages. If the pager receives more messages than its available memory can hold, the new message replaces the oldest read, unlocked message.

When all message slots are filled, the pager displays 'PAGES FULL.' Message must be read and erased to clear the overflow condition.



#### **4-6. OVERFLOW THE PROTECTED MESSAGE**

Your pager can store up to 10 protected messages. If you intend to protect more messages than its available memory. The pager displays "LOCK FULL."

#### **4-7. BACK LIGHT**

Press Mode button to turn the back light ON.

Press Mode button again to turn the back light OFF.

The back light turns off automatically eight seconds after returning to the standby screen

#### **4-8. PRE-PROGRAMMED MESSAGE(CANNED MESSAGE)**

This pager is capable of displaying pre-programmed alphanumeric messages.

The code numbers for these messages should only be given to you frequently.

This code is made up of four digit decimal number..

Sending a pre-programmed message:

Dial the pager's phone number as you would normally do, enter identity-code and message codes below followed by the sharp(#)  
sign them hand up.

#### **LIST OF PRE-PROGRAMMED MESSAGES:**

Code: Message

1100: Call home urgent

1101: Call home not urgent

1102: Call office urgent

1103: Call office not urgent

1104: I love you

1105: I miss you

1106: Sweet dream

1107: Call boss urgent

1108: Call boss not urgent

1109: Good morning

1110: Have a nice day

1111: Happy Valentine's day

1112: Happy birthday

1113: Merry Christmas

1114: Happy New Year

- 1115: Happy mother's day
- 1116: Happy father's day
- 1117: Congratulation
- 1118: Call me sweet heart
- 1119: Come home early

## 5. BATTERY INFORMATION

The FLEX pager operates with one AAA-size alkaline battery. When the battery is low, the user will be alerted by tone and Low battery(  icon) display on the standby screen. (The Alert tone and icon will disappear only when a new battery is Replaced)

### 5-1. BATTERY BACK-UP

Although you remove the battery, the memory such as Received messages and the mode values you set remains for About 10 seconds.

### 5-2. REPLACEMENT THE BATTERY(1.5V×"AAA'size alraline battery cell)

Unlock the battery cabinet by up lift the battery door lock.

Slide the lid forward to open the cabinet.

Take the old cell out.

Match the "+" on the battery with "+" marking outside the Pager.

Close the battery cabinet.

## 6. FCC REQUIREMENTS

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

CAUTION : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.