

THE USER'S GUIDE MANUAL

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

USER's GUIDE MANUAL

Introduction

Congratulations on your purchase of a Mitsuki Wave Numeric Display pager. This User's guide explains how easy it is to use the Mitsuki Wave pagers.

CONTENTS.

PAGER LAYOUT

1-1.FUNCTION INDICATORS.

1-2.CONTROLS.

OPERATING INTRODUCTIONS.

2-1.POWER ON.

2-2.RECEIVING AND READING MESSAGE.

SELECTING FUNCTIONS.


3-1.SETTING THE MODE.

3-2.ERASING THE ALL MESSAGE.
3-3.SETTING THE ALERT MODE.
3-4.TURNING YOUR PAGER OFF.
3-5.SETTING THE CLOCK.
3-6.SETTING THE ALRAM.
3-7.SETTING THE AUTO ON/OFF.
THE REST FEATURES.
4-1.CONTINUOUS MESSAGE.
4-2.PROTECTING & UNPROTECTING MESSAGE.
4-3.DELETING INDIVIDUAL MESSAGES.
4-4.DUPLICATE MESSAGES.
4-5.OVERFLOW THE MEMORY.
4-6.OVERFLOW THE PROTECTED MESSAGE.
4-7.BACK LIGHT.
4-8.PRE-PROGRAMMED MESSAGE(CANNED MESSAGE)
BATTERY INFORMATION.
5-1.BATTERY BACK-UP.
5-2.REPLACEMENT THE BATTERY.

1. PAGER LAYOUT.



1-1.FUNCTION INDICATORS.

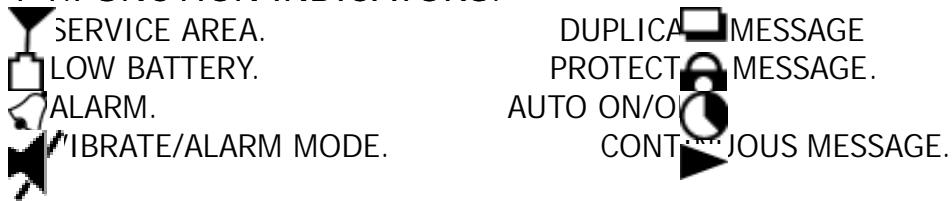

1-2.CONTROLS.

UP BUTTON *Control Alarm.
(MODE) Set Mode.
Delete & Lock Selective Message.
Turn the back light ON/OFF.
Enter the function menu.

Return the pager to the standby screen.

DOEN BUTTON *Read Message.
(SELECT) Select Function.
Control Alarm.
Delay to return the Standby Screen.

2. OPERATING INTRODUCTIONS.

2-1. POWER ON.



Press Up or Down button for two seconds in power Off or replace a new battery to Turn your pager on. Your pager gives an alert sound and vibration. After displaying the power up screen, the time of day, day of week, and an alert indicator are shown on the standby screen.



2-2. RECEIVING AND READING MESSAGE.

Your FLEX pager can receive up to sixteen 20 character messages. When a message is received the pager alerts for eight seconds.

Press the doen button to display the message and the time the message was received.

Press the down button to display the second screen.

The first screen of your message displays the message slot number and time received.

If a message is not read, the screen displays the number of unread message (1 memos/2 memos) until all message are read.



1 Unread Message 2 Unread Message

3. SELECTING FUNCTIONS.

3-1. SETTING THE MODE.

Press the up button for two seconds to enter the mode function on the standby screen. Either "DELETE ALL?" or 'MELODY SET?' is displayed, depending on the message.



DELETE ALL?

Press down button

POWER OFF ?

Press down button

CLOCK SET?

Press down button

ALARM SET?

Press down button

AUTO SET?

Press down button

*Press the down for two second to enter the function menu at the selective modes.

3-2.ERASING ALL MESSAGE.

When there's any message received, press the up button for two seconds to enter the "DELETE ALL?" mode. If you press the down button for two seconds to erase all messages except protected messages. The "ALL DELETED" is displayed with delete beep.

DELETE ALL?

ALL DELETED

3-3.SETTING ALERT MODE.

Press the up button for two seconds to Enter the "MELODY SET?" mode.

If you press the down button for two Seconds, "MELODY[01]" is displayed With the melody.

Whenever you press the down button, The alert menu is increased up to "MELODY [15]" scrolling and vibration by turns.

When you press the up button to select Alert menu, It is returned to the standby Screen automatically.

MELODY SET?

MELODY [01]

MELODY [02]

3-4.TURNING YOUR PAGER OFF.

Press the up button for two seconds to enter the mode.

Press the down button shortly to enter the "POWER OFF?" mode.

Press the down button for two seconds to turn your pager off.

When your pager is turned off, it cannot receive any message and is only displayed

The time (Press either up or down button for two seconds to turn your pager on).

POWER OFF ?

OFF 12-00A

3-5. SETTING THE CLOCK

Press the up button for two seconds
to enter the mode.

CLOCK SET? Press the down button twice to enter
the "CLOCK SET?" mode
press the down button for two seconds and it is displayed "(00-01-01)"

Year blinks.
press the down button, you
can change the year.
If you press the down button for two
seconds, the month is blinks.
Press the down button to change the

SAT 6:00P Day to change the day is the
same.

After you set the date, press the down button for two seconds to set the day of the week and time.

The day blinks. If you press the down button, you can change the day.

Press the down button for two seconds to switch to the hour.
The hour blinks.

Press the down button to change the hour | .

Press the down button for two seconds to switch to the minutes.

The first digit of the minutes blinks.

Press the down button to change the first minute digit.

Press the down button for two seconds to switch to the second digit.

The second digit of minutes blinks.

Press the button to change the second minute digit.

Press the down button for two seconds to switch to AM/PM.

The A or blinks.

Press the down button to change A or P.

After you set day of the week and the time of the day, press the down button for two seconds to enter "DATE ON/WEEK ON" mode.

By pressing the down button shortly, you can choose the date Displaying type or the week type.

Press the up button set the clock type and to return to the Standby screen.



3-6.SETTING THE ALARM

Press the up button for two seconds to enter mode.



Press the down button three times to enter "ALARM SET?" mode.

- ▼ If you press the down button for two seconds, you can enter "ALARM(ON)/(OFF)" mode.



You can change (ON)/(OFF) by pressing the button.



select "ALARM (OFF)", it is returned to the standby screen by pressing either up button shortly or down button for two seconds.

- ▼ If you want to select "ALARM (ON)" mode, press the down button for two seconds.



displayed "AL ON 7:00A" and the hour

The way to change the alarm time is the same with setting the clock.

When it is set "ALARM(ON)". alarm is operated in Spite of power OFF mode.

 
3-7.SETTING AUTO ON/OFF

Press the up button for two seconds to Enter the mode.



Press the down button four times to enter "AUTO SET?" mode.


- ▼ If you press the down button for two seconds, you can enter "AUTO(ON)/(OFF)" mode.

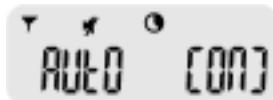

Change (ON)/(OFF) by press-

ing the down button.

 ▼ If you want to select "AUTO (ON)" mode, press the down button for two seconds. It is displayed "6:00A 2:00" and the starting hour blinks.

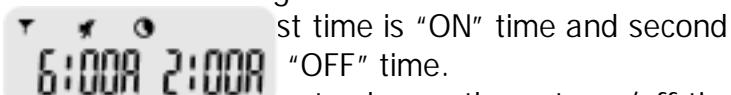 st time is "ON" time and second "OFF" time.

The way to change the auto on/off time is same with setting the clock.

When it is set "AUTO (ON)". auto ON is operated in spite of power OFF mode.

4. THE REST FEATURES

4-1. CONTINUOUS MESSAGE

Message longer then 12 characters display on screen, indicated by the Icon. It is displayed up to 31 characters.



4-2. PROTECTING & UNPROTECTING MESSAGES

 
You can protect up to 10 messages so they are not erased or replaced by new messages.

The message you want to protect/unprotect must be displayed on the screen.

To protect a message, press the up button and It is displayed "LOCK?".


Press the down button and it is displayed "LOCKED"

When reading a protected message, the protect  icon is displayed in the upper portion of the screen.

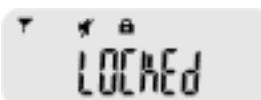 on
 down button 

To unprotect a message, press the up button and the message is displayed "UNLOCK?"

Press the down button and it is displayed "UNLOCKED." The Protect () icon is no longer displayed.

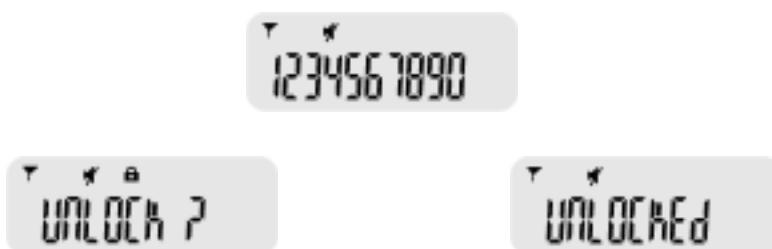

4-3. DELETING INDIVIDUAL MESSAGES

Press the down button twice while the message is displayed and "DELETE?" is displayed.

Press the down button to delete a message. All remaining messages are moved to the next available message slots.



4-4. DUPLICATE MESSAGE

If the same message is received more than once, the () icon is displayed when receiving your latest message. This message contains the latest time stamp.



4-5. OVERFLOW THE MEMORY

Your FLEX pager can store up to sixteen 20 character messages. If the pager receives more messages than its available memory can hold, the new message replaces the oldest read, unlocked message.

When all message slots are filled, the pager displays 'PAGES FULL.' Message must be read and erased to clear the overflow condition.



PAGES FULL

4-6. OVERFLOW THE PROTECTED MESSAGE

Your pager can store up to 10 protected messages. If you intend to protect more messages than its available memory. The pager displays "LOCK FULL."

4-7. BACK LIGHT

Press up button to turn the back light ON.

Press up button again to turn the back light OFF.

The back light turns off automatically eight seconds after returning to the standby screen

4-8. PRE-PROGRAMMED MESSAGE(CANNED MESSAGE)

This pager is capable of displaying pre-programmed alphanumeric messages.

The code numbers for these messages should only be given to you frequently.

This code is made up of four digit decimal number..

Sending a pre-programmed message:

Dial the pager's phone number as you would normally do, enter identity-code and message codes below followed by the sharp (#) sign, then hang up.

LIST OF PRE-PROGRAMMED MESSAGES:

Code: Message

1100: Call home urgent

1101: Call home not urgent

1102: Call office urgent

1103: Call office not urgent

1104: I love you

1105: I miss you

1106: Sweet dream

1107: Call boss urgent

1108: Call boss not urgent

1109: Good morning

1110: Have a nice day

1111: Happy Valentine's day

1112: Happy birthday

1113: Merry Christmas

1114: Happy new year

1115: Happy mother's day

- 1116: Happy father's day
- 1117: Congratulation
- 1118: Call me sweet heart
- 1119: Come home early

5. BATTERY INFORMATION

The FLEX pager operates with one AAA-size alkaline battery. When the battery is low, the user will be alerted by tone and Low battery() icon display on the standby screen. (The Alert tone and icon will disappear only when a new battery is Replaced)

5-1. BATTERY BACK-UP

Although you remove the battery, the memory such as Received messages and the mode values you set remains for About 10 seconds.

5-2. REPLACEMENT THE BATTERY(1.5V×"AAA'size alraline battery cell")

Unlock the battery cabinet by up lift the battery door lock.

Slide the lid forward to open the cabinet.

Take the old cell out.

Match the "+" on the battery with "+" marking outside the Pager.

Close the battery cabinet.