



WALKIE TALKIES Instruction Manual

Model no. : 90761

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 yrs.



FEATURES:

- 9-Volt battery operated.
- "ON/OFF" volume control to adjust volume for comfortable listening.
- Push-To-Talk, release to listen button switch.
- Powerful signal (4-transistors).
- Flexible antenna for best transmission & reception.
- Morse code signal switch.
- Communication distance approximately up to 1 m.
- Belt-Clip for ease of carrying.
- Fashion and special design for easy handling.

HOW TO OPERATE:


1. Open Battery Compartment (Fig. 6) and snap in a 9-volt battery. Replace door firmly.
2. Turn the "ON/OFF" switch (Fig. 2) to "ON", and adjust the volume control to comfortable listening level.
3. Press the "PUSH-TO-TALK" button (Fig. 3) for transmitting, and speak in a normal voice level into the speaker/microphone grille (Fig. 4).
4. Release the "PUSH-TO-TALK" button (Fig. 3) for receiving.
5. Best transmission and reception are obtained when the FLEXIBLE ANTENNA (Fig. 1) is held in vertical position.
6. To send MORSE CODE signals, pushing the "PUSH-TO-TALK" button (Fig. 3), press the signal code key (Fig. 5) and quickly release to send a dot, or hold key longer to send a dash.

CARE:

- Your walkie talkies have been fully adjusted prior to shipment. Be sure not to touch the internal components other than when replacing the battery.
- When the sound becomes weak, it is time to change the battery.
- After use, always turn the ON/OFF/VOLUME CONTROL switch to the "OFF" position.
- Keep your walkie talkies in a dry place.


BATTERY INSTRUCTION:

- Do not leave batteries inside the toy when it is not in use.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with the correct polarity, observing the plus "+" and minus "-".
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Batteries must be installed by an adult.
- Remove screw to open battery compartment cover.
- This unit requires 2 x 9V batteries (Not included).

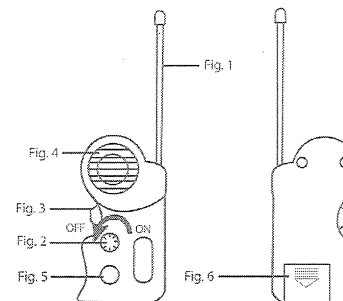

TRANSCIVER:

1. Flexible antenna
2. Power "ON/OFF" and "VOLUME" CONTROL
3. "PUSH-TO-TALK" button
4. Speaker/Mic. grille
5. MORSE "CODE KEY"
6. Battery compartment

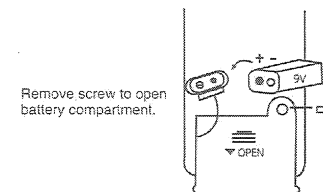

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.