
RC Tank with Missile

AGES 5+

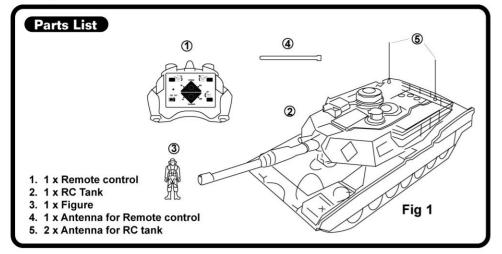

Warning

- · Adult setup and supervision required at all times.
- Adult should instruct children on proper use of this toy.
- Only for children ages 5 or above.
- · Do not stand on this product.
- Keep away from fire.
- · Do not immerse this toy in water.
- Play on hard surfaces only.
- Play on flat surfaces only.

Initial Setup & Battery Replacement

Important: Only ADULTS should replace batteries. Replace all included batteries that came with new alkaline batteries upon purchase.

- 1. Take out the tank from the package (For initial setup only).
- 2. Attach the two metal wire antenna on the RC tank rear as shown in figure 1.
- 3. Loosen screws from in battery compartment door with a Philips cross head screwdriver (not included).
- 4. Remove battery compartment door.
- 5. Insert 8 x "AA" Alkaline batteries in the orientation shown.
- Replace and secure the battery compartment door.

Remote Control


- 1. Take out the remote control from the package (For initial setup only).
- 2. Screw on the metal antenna and extend it to the maximum length.
- 3. Loosen screw from battery compartment door with a Philips / cross head screwdriver (not included).
- 4. Remove battery compartment door.
- 5. Insert 9V Alkaline battery in the orientation shown.
- 6. Replace and secure the battery compartment door.


How to Power Up RC Tank

· Simply slide the ON/ OFF switch on the RC Tank and remote control to the "On" position.

 \oplus

- The target tube LED lights up to show RC tank is switched on.
- Power indication LED lights up to show remote control is switched on.

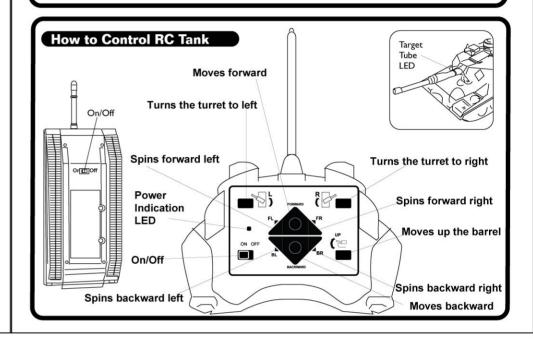

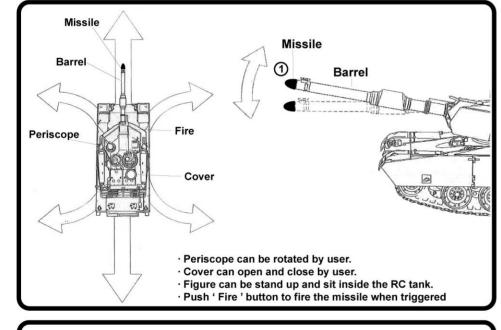

After Use Storage

Remove all batteries before storage

NOTE: Always store the product in a dry place. Never leave outside when not in use!

Warning

Do not aim at eyes or face to fire the missile.

While every attempt is made to embody the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury from use. All merchandise is sold on this condition. No representative of the company can waive or change this condition.


Battery Warnings

Important! Only adults should replace batteries.

- · Use of alkaline batteries is recommended
- Do not use rechargeable batteries.
- · Non-rechargeable batteries are not to be recharged.
- Do not mix old with new batteries.
- · Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- · Used batteries are to be inserted with the correct polarity. · Exhausted batteries are to be removed from the tov.
- · The supply terminals are not to be short-circuited.
- Please keep this information for future reference.
- Remove batteries from the product before extended storage.

Care & Maintenance

- · Clean the product (plastic parts) with a damp cloth.
- · Do not immerse this toy in water.
- · Do not expose product to direct sunlight for long periods of time
- · If movements from this toy became weak or slow, please replace the batteries.
- · Do not take this toy apart since no serviceable parts are available.
- · If the gun barrel or the fences became detached from normal play, simply reinsert the items into their original positions. This is not defective.
- A power protective circuit is inside the RC tank. It shuts down the power when the objects trap the driving wheel causing the motor current drawn high. After a few seconds, It restart automatically.

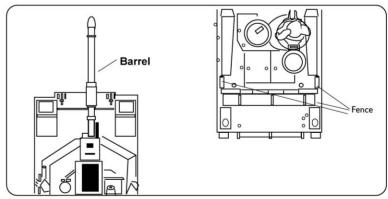

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE. CONFORMS TO ASTM F963. COLORS AND CONTENT MAY VARY MADE IN CHINA