

■ **Troubleshooting**

Trouble	Solution
Why can't I turn the transmitter on?	<ul style="list-style-type: none">● Check if the transmitter is connected with power already.
Why can't I hear anything from bodypack receiver?	<ul style="list-style-type: none">● Check if the bodypack receiver is turned on.● Check if selected channel on both transmitter and receiver is same.● Check if the volume of bodypack receiver is tuned at appropriate level.● Check if the bodypack receiver is located within the operation range of the transmitter.
Why can't the transmitter send audio signal?	<ul style="list-style-type: none">● Check if the input signal is well connected with the transmitter.● Check if the mic / aux level is tuned at appropriate level.
Why is the operation range shorter?	<ul style="list-style-type: none">● Check if the attached antenna is fixed well.● Check if the audio level is pre-set correctly.● Adjust the RF power in the setting menu.
Why is the volume of the transmitter quite low?	<ul style="list-style-type: none">● Check if aux-in level is set correctly (Lo / Hi).

■ **Specifications**

Carrier frequency range	794 ~ 938 MHz (country dependent)
RF output power	<ul style="list-style-type: none">● Hi: 18 dBm● Mid: 13 dBm (country dependant)● Lo: 10 dBm
Antenna	TNC connector
Headphone output	200 mW @ 32 ohm
Inputs	<ul style="list-style-type: none">● Mic in: 3.5 mm & 6.3 mm● Aux in: RCA● Loop in: 6.3 mm
Outputs	<ul style="list-style-type: none">● Earmic out: 3.5 mm, stereo● Aux out: RCA● Loop out: 6.3 mm
Wireless coverage	>100 meters (line of sight @ Hi power)
Power requirements	100 ~ 240 V AC / 12 V DC; 1A switching power
Dimensions(D x W x H)	215 x 210 x 51 (mm)
Weight	1.25 kgs

※Specifications are subject to change without prior notice.



OKAYO ELECTRONICS CO., LTD.

No. 2, Gongye 10th Rd., Dali Dist., Taichung 41280, Taiwan

Tel: +886-4-2491-4666 Fax: +886-4-2491-3066

E-mail: okayo@okayo.com

www.okayo.com