



- |   |   |   |
|---|---|---|
| ① Battery / Signal indicator                      | ⑥ Power   | ⑪ Strap hole  |
| ② Antenna   | ⑦ Hidden Mic. (Transmitter)                         | ⑫ Buckle clip   |
| ③ LCD screen                                      | ⑧ Mic. In (Transmitter)<br>Earphone jack (Receiver) | ⑬ Transmitter:<br>Power output switch (Hi / Low)<br>Receiver:<br>Distance switch (Hi / Low) |
| ④ Aux In (Transmitter)<br>Volume wheel (Receiver) | ⑨ Mute button                                       | ⑭ Battery cover   |
| ⑤ UP / DOWN button                                | ⑩ Charging contacts                                 |   |

## ■ Set up/ Installations

### On / Off

- Press and hold (⏻) for 1 sec. and the power is on.
- Press and hold (⏻) for 2 sec. and the power is off. OFF display on screen.

### Channel Select

- Press △ or ▽ button, enter into the select mode.

### Lock / Unlock Button

- Channel will be lock automatically without any buttons pressed. LCD displayed 🔒 lock icon. In lock mode, the power can be off, but channel number cannot be changed.
- When locked, press △ or ▽ button up to 1 sec to unlock. Unlock icon will not be showing on LCD screen.

### LED/ Battery Status

#### ※ Transmitter:

- LED lights blue when the battery is sufficient.
- LED lights red when the battery is insufficient.

#### ※ Receiver:

- LED lights off when no signal is received but the battery is sufficient.
- LED lights red when signal is received but the battery is insufficient.

### Battery Saving (only for Receiver)

- The power will off when no signal is received within 20 mins.

### Power Output

#### ※ Transmitter: power output switch

- Switch UP/ DOWN to desired power output
- UP (HI), DOWN (LOW)

#### ※ Receiver: Distance switch

- Switch UP/ DOWN to desired distance range
- UP (HI), DOWN (LOW)

### Group Channel Setting

- In OFF mode, press ▽ and ⏻ to enter into setting mode. LCD displays channel numbers. Press △ and ▽ to select.
- Press power button (⏻) to confirm or quit in 5 seconds without any buttons pressed.
- When group channel number is changed, channel default setting is CH1.

*Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

**IMPORTANT NOTE:** To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

#### Consumer Alert

Most users do not need a license to operate this wireless microphone system. Nevertheless, operating this microphone system without a license is subject to certain restrictions: The system may not cause harmful interference; it must operate at a low power level (not in excess of 50 milliwatts); and it has no protection from interference received from any other device. Purchasers should also be aware that the FCC is currently evaluating use of wireless microphone systems, and these rules are subject to change.

For more information, call the FCC at 1-888-CALL-FCC (TTY: 1-888-TELL-FCC) or visit the FCC's wireless microphone Web site at <http://www.fcc.gov/cgb/wirelessmicrophones>.

※ Specifications are subject to change without prior notice.