# **Specifications / Special Features Overall system**

Oscillation mode	PLL synthesized
Carrier frequency range	Group 1. 744~752 MHz Group 2. 794~806 MHz
o Frequency	pre-programmed 16 switchable frequencies
Max deviation	+/-65 KHz ,with level limiting
Dynamic range	>80 dB
∘ T.H.D	<1%
• Pre/De-Emphasis	< <b>50</b> μs
Power supply	1.2V * 2 AA type Ni-MH rechargeable battery or DC IN 5V

# **Transmitter**

<b>oMike</b>	condenser microphone
•Antenna	in side Loop ant.
∘R F output	10 mW (according to regulation)
∘C/N Ratio	>110 dB
•Spurious	<-60 dBc
<b>Battery</b>	1.2V * 2 AA type Ni-MH rechargeable battery or DC IN 5V
•Dimensions (L*W*H)	98*66*27 mm
•Weight	80g (less battery)



# **User's Guide**

**WT-808T** 

UHF-PLL

16-CH Switchable Tour Guilde

& Wireless Mic. Systems

# **Function**

- 1.Channel Selection
- (1) with 16 ch. Selectable.

#### 2.Tx LED Indicator

- (1)When turn on,LED light up GREEN indicates (1) (5) (6) transmission normally.
- (2)After using a period of time,LED light RED indicated low battery, and still with transmission could stay for about 30 minutes.

#### 3. Power switch & MIC. Volume

- (1)Turn clockwise for Turn-ON and MIC. Volume control, Min—→MAX.
- (2) Turn anti-clockwise for Turn-off and MIC. Volume control , MAX  $\longrightarrow$  Min .

#### 4.PL LED Indicator

(1) When indicate Red light and stop working, battery need to recharging or change New batteries.

#### 5.Built-In MIC

- (1)When MIC or AUX with input, built-in microphone off.
- (2) When MIC and AUX without input, built-in microphone on.

## 6. 3.5mm MIC. Input jack

Using condenser MIC., when AUX with inpout, 3.5mm MIC off.

### 7. 3.5mm Aux Input jack

For connecting MP3, CD play audio source, and send audio source to receiver.

#### 8.DC Input & Recharging jack

Could connect +5V switching adapter to provide power or slow recharging internal rechargeable batteries.



(2) (3) (4)

TX O

1612

## 10.Battery box

- (1) This system also could use AA type dry cell battery, but please do not put them on charging stand for recharging.
- (2)When recharging the transmitter , please use 2 pcs AA size Ni-MH. rechargeable battery .
- 11.Rechaging bottom jack

  Could connecting to charger HDC-808 for fast charging internal batteries.

#### 12.Battery cover



UM-3"AA"1.5V

dIM-3\*AA\*1.5∨

(9)

(10)

## Features:

- 1.WT-808T transmitter, with built-in microphone, and also could work for with lapel microphone or headset microphone.
- 2.WT-808T could use DC +5V switching adapter to provide power or recharging the internal battery, and could use charger (HDC-808) for recharging internal battery.
- 3.Applicable Occasion: Tour Guide, Museum and Factory visit, Oral multi-languages translating system, Journalist V8 voice recording, audio-visual language teaching, assist wireless amplification system etc,