

Attachment A: Test report 4215/1600/A/TR.

Attachment B: User Manual / Production Data Sheet.


Note. This is a standard data sheet that covers 3 different option cards.

OKIPAGE 10i

Option Board Installation Guide


Warning: Disconnect the printer from a.c. power before starting.

1

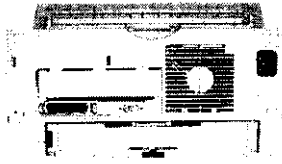

Turn the printer around so that the rear is facing you.


4

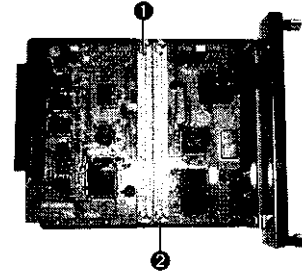

1 SIMM 1
for additional memory.


2 SIMM 2
for flash rom such as PostScript option.

2

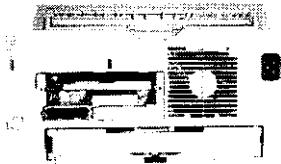


Using a sharp knife, remove the cut-out in the rear panel.

5

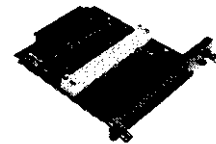

Insert the option board into the printer making sure that the board locates in the guide rails. Push the board firmly into position.


3

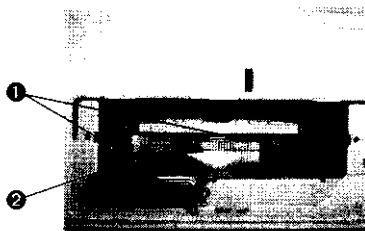

1
Guide rails

2
Edge connector

6

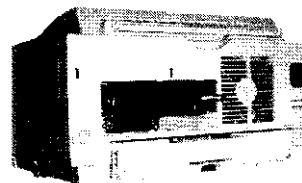

Tighten the screws (if fitted) on the option board. If the screws do not locate, the board may not be properly seated.