

## READ ALL INSTRUCTIONS PRIOR TO USE

PICK A PITCH™  
RADIO CONTROL PITCHING MACHINE  
ITEM# 838001  
READ ALL INSTRUCTIONS PRIOR TO USE

SPORT-FUN IS FAMILY FRIENDLY.  
WE ARE COMMITTED TO CUSTOMER SATISFACTION,  
NEED HELP? CALL OUR CUSTOMER SERVICE:  
1-888-FUN-8998  
HOURS: MON-FRI 8AM TO 4PM P.S.T

 
MANUFACTURED BY SPORT-FUN INC.  
©2003 SPORT-FUN, INC. ALL RIGHTS RESERVED  
LOS ANGELES, CA 90039, U.S.A

**BATTERY INSTALLATION**  
DO NOT MIX OLD AND NEW BATTERIES,  
DO NOT MIX ALKALINE, STANDARD (CARBON  
ZINC), OR RECHARGEABLE (NICKEL-CADMIUM)  
BATTERIES.

ALKAUNE BATTERIES REQUIRED (NOT INCLUDED).

REMOVE COVER AND INSTALL ALL BATTERIES,  
MAKE SURE TO MATCH NEGATIVE AND POSITIVE  
TERMINALS.

TOOLS: PHILLIPS SCREWDRIVER (NOT INCLUDED).

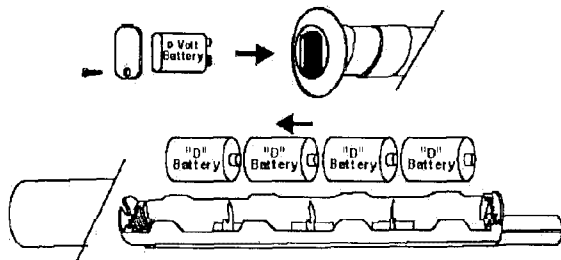

### **WARNING:** ADULT SUPERVISION RECOMMENDED

1. KEEP FACE AND HEAD AWAY FROM OPENING OF MOTOR UNIT.
2. DO NOT PUT FINGERS OR HAND INTO MOTOR UNIT.
3. BE PREPARED FOR BALLS AT ALL TIME.
4. USE ONLY THE BALLS INCLUDED WITH THIS SET.  
DO NOT PUT OTHER OBJECTS INTO UNIT.
5. TURN OFF MOTOR AT END OF PLAY.

**SAFETY PRECAUTIONS:** TO ENSURE THAT YOUR CHILD PLAYS WITH THIS PRODUCT IN A SAFE AND FUN WAY, ADULTS SHOULD REVIEW THE OPERATING INSTRUCTIONS AND SAFETY RULES WITH THEIR CHILD. THIS PRODUCT IS RECOMMENDED FOR CHILDREN EIGHT YEARS OF AGE AND UP.

**INSTRUCTIONS TO THE USER:** IN ORDER TO MAINTAIN COMPLIANCE WITH FCC REGULATIONS, SPORT-FUN, INC. DOES NOT RECOMMEND CHANGES OR MODIFICATION TO THE MACHINE.

#### DO...

1. DO READ ALL INSTRUCTIONS PRIOR TO USE.
2. DO SUPERVISE CHILDREN.
3. DO OPERATE IN DRY OPEN AREA.
4. DO TURN ON/OFF SWITCH TO "OFF" POSITION WHEN NOT IN USE.
5. DO STORE IN COOL, DRY LOCATION.

#### DO NOT...

 
1. DO NOT OPERATE NEAR WET SURFACES OR IN THE RAIN.  
WATER CAN DAMAGE THE ELECTRONIC AND MECHANICAL PARTS.
2. DO NOT PLAY IN OR NEAR THE STREETS.
3. DO NOT OPERATE NEAR HIGH VOLTAGE ELECTRICAL WIRES OR LARGE STEEL REINFORCED CONCRETE BUILDINGS. RADIO INTERFERENCE IS CAUSED BY OTHER RADIO CONTROLLED PRODUCTS OPERATING ON THE SAME FREQUENCY AS THE MACHINE.

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the


MACHINE WILL ONLY OPERATE  
WITH PROVIDED BALLS IN THE FEEDER.

INCLUDES  
6 BALLS

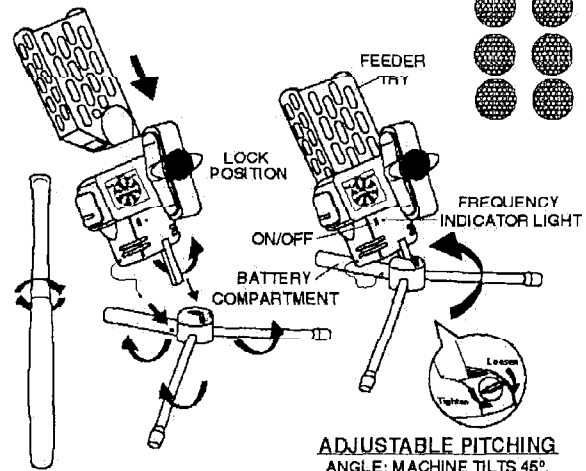

HOW TO PUT TOGETHER  
YOUR PICK A PITCH™

 **ADJUSTABLE PITCHING**  
ANGLE: MACHINE TILTS 45°.  
HOLD TOP OF CHUTE & TILT  
DOWN. TO PLACE BACK IN UP-  
RIGHT POSITION, TILT MACHINE  
UP 45°.

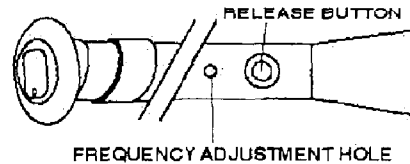

### MACHINE OPERATION

\*FOR BEST PERFORMANCE FOLLOW STEPS 1-6 IN ORDER:

 
1. REMOVE PICK A PITCH™ FROM PACKAGE AND PUT TOGETHER ALL OF THE PARTS.
2. INSTALL ALL BATTERIES.
3. ATTACH BALL FEEDER ONTO THE "LOCK" POSITION.
4. PLACE BALLS INTO BALL FEEDER.
5. TURN UNIT "ON".
6. ADJUST THE STYLE OF BALL THROWN.  
ADJUST THE ANGLE AND DISTANCE OF PITCHED BALL BY TILTING THE BALL CHANNEL UP OR DOWN. PLAYER SHOULD TAKE NORMAL POSITION AND WHEN READY, PUSH THE RADIO CONTROL RELEASE BUTTON AND BE PREPARED TO SWING!
8. FOR BEST RESULTS, WAIT 10 SECONDS BETWEEN PITCHES.

### PROBLEM SOLVING

- Q. PROBLEM: MORE THAN 1 BALL IN BALL CHANNEL.  
A. TURN UNIT OFF. REMOVE ALL BALLS FROM CHUTE AND PLACE THEM BACK INTO FEEDER.
- Q. BALL DID NOT FALL INTO BALL CHANNEL.  
A. CHECK FEEDER. IT MUST BE IN THE "LOCK" POSITION.
- Q. MOTOR IS WEAK.  
A. CHECK BATTERIES.
- Q. BALL DID NOT EJECT  
A. SEE FREQUENCY INDICATOR LIGHT.

### BATTERY SAVER FEATURE

MACHINE WILL ONLY OPERATE WITH BALLS ON FEEDER.  
MOTOR POWER "ON", WHEN ONE BALL DROPS INTO THE TOP OF  
THE CHUTE AND POWER "DOWN" WHEN CHUTE IS EMPTY



### FREQUENCY INDICATOR LIGHT

IN THE EVENT THAT THE FREQUENCY LIGHT DOES NOT GO ON,  
MAKE SURE THAT THE MACHINE IS ON.

ADJUST THE FREQUENCY BY HOLDING DOWN THE RADIO RELEASE  
BUTTON, INSERT THE ADJUSTMENT TOOL AND SLOWLY TURN LEFT OR  
RIGHT UNTIL YOU SEE THE INDICATOR LIGHT GO ON.

RELEASE THE RADIO CONTROL BUTTON AND PUSH 2 OR 3 TIMES AND  
VERIFY THAT THE LIGHT ACTIVATES WITH EACH PUSH OF THE BUTTON.

Equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

838001



Tested To Comply  
With FCC Standards

FOR HOME OR OFFICE USE