



**COMPATIBLE
ELECTRONICS**

FCC ID: NUS-939001

**EXHIBIT 8
OWNER'S MANUAL**



POWER PITCH 'N' HIT™

RADIO CONTROL PITCHING MACHINE

Instructions to the User:


In order to maintain compliance with FCC regulations SFI does not recommend changes or modifications to the Power Pitch 'N' Hit™.

1. Radio interference is caused by other radio controlled toys operating on the same frequency as the Power Pitch 'N' Hit™. Interference also caused by the operation of the Power Pitch 'N' Hit™ near high voltage electrical wires, large steel reinforced concrete buildings, and passing trucks with CB radios. Try to avoid these if possible.	2. Do not operate your Power Pitch 'N' Hit™ near wet surfaces or in the rain. Water can damage the electronic and mechanical parts of the Power Pitch 'N' Hit™.
3. Do not play baseball with your Power Pitch 'N' Hit™ in or near streets.	4. Your Power Pitch 'N' Hit™ is designed to operate at a maximum range of 30 feet. If you get too far away from the Power Pitch 'N' Hit™ the signal may get too weak and the Power Pitch 'N' Hit™ may not function properly.



POWER PITCH 'N' HIT™

RADIO CONTROL PITCHING MACHINE

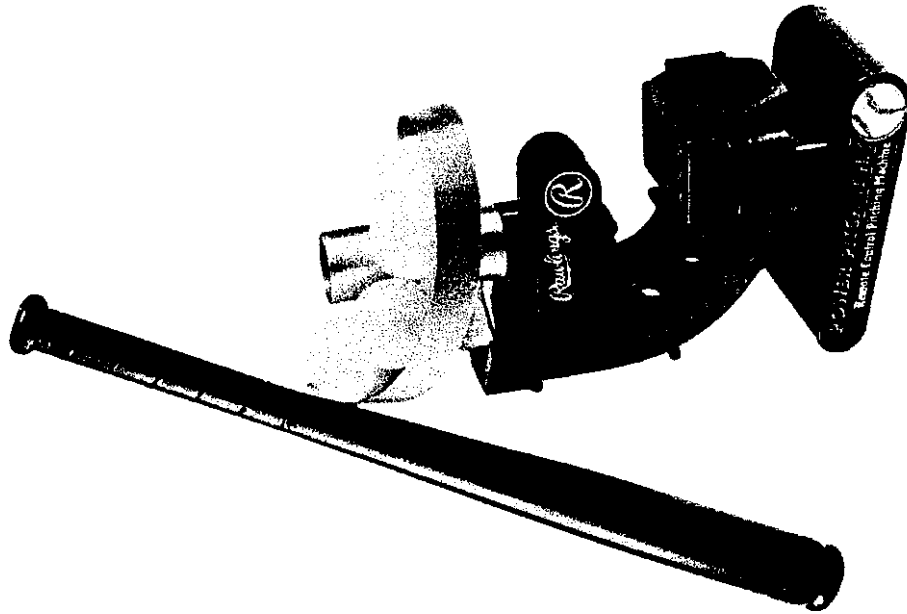

BY **SPORT FUN®**

⚠ WARNING


- 1) Keep face and head away from opening of motor unit.
- 2) Do not put fingers or hand into motor unit.
- 3) Be prepared for pitch at all times.
- 4) Use only the balls included with this set. Do not put other objects into unit.
- 5) Turn off motor at end of play.
- 6) Do not mix old and new batteries.
- 7) Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

SPORT FUN®

Customer Service: 888 - FUN - 8998

© 1998 Sport Fun, Inc. Los Angeles, CA 90039
Authorized Licensee of Rawlings Sporting Goods Co.

TO PLAY:

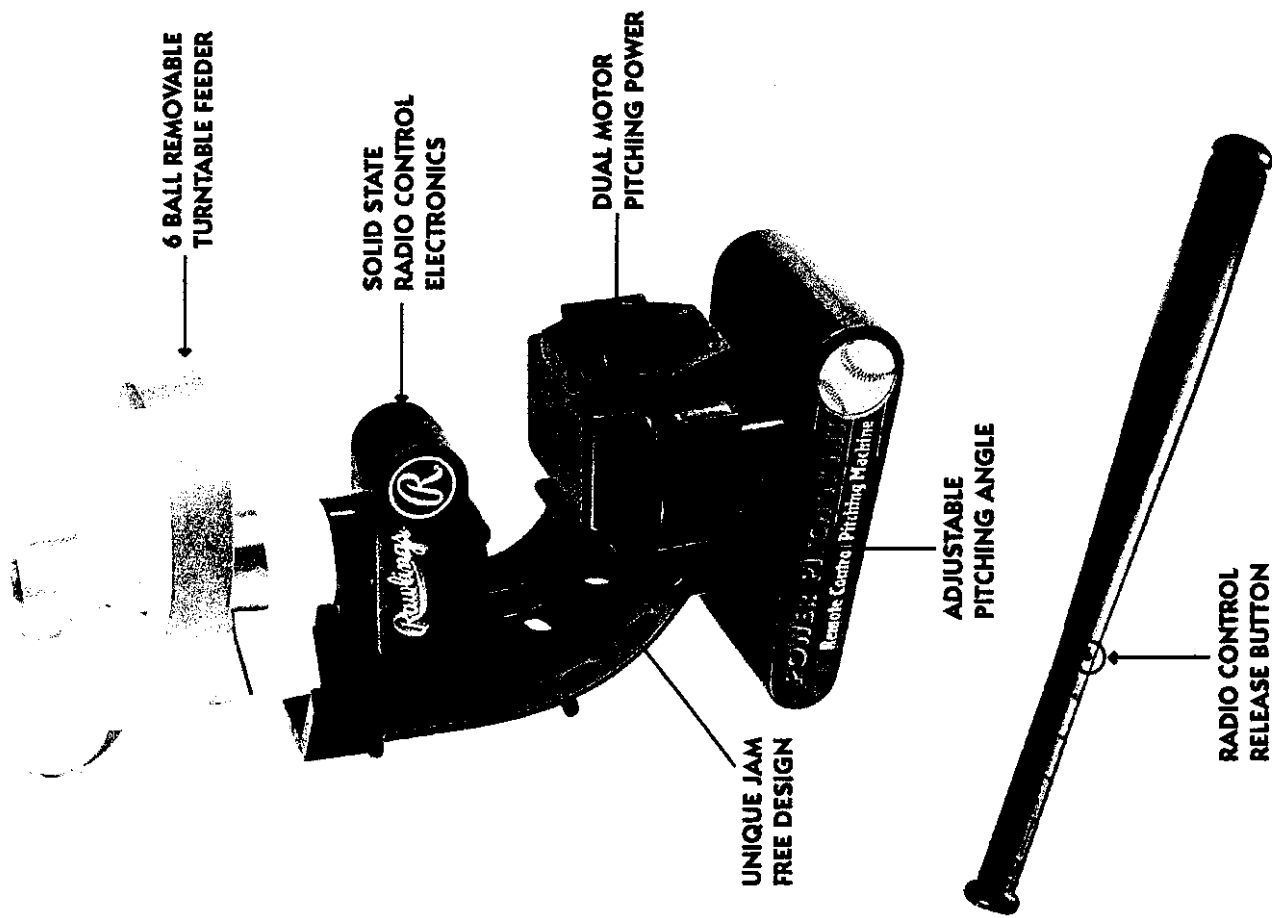

SAFETY PRECAUTIONS:

BATTERY INSTALLATION