

Panasonic®

EB-TX320 Series Operating Instructions



Preliminary

Before operating this phone, please read these instructions completely and save this manual for future use. Charge battery before operation.

Press shortcut keys shown to get to desired function.



1 Phonebook [Call Icon] [1]

- 1 Search [Call Icon] [1] [1]
- 2 Create [Call Icon] [1] [2 ABC]
- 3 Super Dial [Call Icon] [1] [3 DEF]
- 4 Search Method [Call Icon] [1] [4 GHI]
- 5 Own Number [Call Icon] [1] [5 JKLM]
- 6 Delete All [Call Icon] [1] [6 MNO]

Chapter 5

2 Messages [Call Icon] [2 ABC]

- 1 Voice Mail [Call Icon] [2 ABC] [1]
- 2 Text Message [Call Icon] [2 ABC] [2 ABC]

Chapter 7

3 Call History [Call Icon] [3 DEF]

- 1 Dialed [Call Icon] [3 DEF] [1]
- 2 Missed [Call Icon] [3 DEF] [2 ABC]
- 3 Received [Call Icon] [3 DEF] [3 DEF]
- 4 Call Timers [Call Icon] [3 DEF] [4 GHI]

Chapter 6

4 Tone Settings [Call Icon] [4 GHI]

- 1 Ring Volume [Call Icon] [4 GHI] [1]
- 2 Key Volume [Call Icon] [4 GHI] [2 ABC]
- 3 Ring Alert [Call Icon] [4 GHI] [3 DEF]
- 4 Message Alert [Call Icon] [4 GHI] [4 GHI]
- 5 Vibration [Call Icon] [4 GHI] [5 JKLM]
- 6 Warning Tone [Call Icon] [4 GHI] [6 MNO]

Chapter 6

5 Phone Settings [Call Icon] [5 JKLM]

- 1 Display [Call Icon] [5 JKLM] [1]
- 2 Answer Mode [Call Icon] [5 JKLM] [2 ABC]
- 3 Alert Mode [Call Icon] [5 JKLM] [3 DEF]
- 4 Time Settings [Call Icon] [5 JKLM] [4 GHI]
- 5 Answer Key [Call Icon] [5 JKLM] [5 JKLM]
- 6 Welcome Screen [Call Icon] [5 JKLM] [6 MNO]
- 7 Language [Call Icon] [5 JKLM] [7 PQRS]
- 8 Miscellaneous [Call Icon] [5 JKLM] [8 TUV]

Chapter 6

6 Security [Call Icon] [6 MNO]

- 1 Lock Code [Call Icon] [6 MNO] [1]
- 2 Call Lock [Call Icon] [6 MNO] [2 ABC]
- 3 Power-On Lock [Call Icon] [6 MNO] [3 DEF]

Chapter 6

7 System Setting [Call Icon] [7 PQRS]

- 1 Network Voice Privacy [Call Icon] [7 PQRS] [1]
- 2 NAM Selection [Call Icon] [7 PQRS] [2 ABC]
- 3 Search [Call Icon] [7 PQRS] [3 DEF]
- 4 SVC Priority [Call Icon] [7 PQRS] [4 GHI]

Chapter 8