



## **OPERATION AND MAINTENANCE MANUAL**

### **ELEVATION OVER AZIMUTH POSITIONER AL-4017-1EBS-B**

**For Baron Services Radars:**

**XDD-350C ®**

**VHDD-350C ™**

**HDD-350C ™**

**HDD-250C ™**

**BARON RADAR SERVICES, L.L.C.**

**4930 Research Drive**

**Huntsville, AL 35805**

**PHONE: 256.881.8811 FAX: 256.881.8283**

## TABLE OF CONTENTS

<b>SECTION 1    DESCRIPTIONS .....</b>	<b>1</b>
<b>1.1    General Description .....</b>	<b>1</b>
<b>1.2    Technical Description .....</b>	<b>1</b>
<b>1.3    Specifications .....</b>	<b>1</b>
<b>1.4    Mechanical Sub-Assemblies .....</b>	<b>1</b>
1.4.1    Elevation Unit .....	1
1.4.2    Azimuth Unit .....	2
<b>1.5    Electromechanical Sub-Assemblies .....</b>	<b>2</b>
1.5.1    Limit Switches .....	2
<b>SECTION 2    INSTALLATION &amp; OPERATION .....</b>	<b>4</b>
<b>2.1    General.....</b>	<b>4</b>
<b>2.2    Positioner Installation.....</b>	<b>4</b>
<b>2.3    Antenna Installation .....</b>	<b>4</b>
<b>2.4    Operation Instructions .....</b>	<b>5</b>
<b>SECTION 3    MAINTENANCE .....</b>	<b>7</b>
<b>3.1    General.....</b>	<b>7</b>
<b>3.2    Cleaning .....</b>	<b>7</b>
3.2.1    Exterior Cleaning .....	7
3.2.2    Interior Cleaning .....	8
<b>3.3    Lubrication .....</b>	<b>8</b>
3.3.1    Periodicity .....	8
3.3.2    2000 Hour or 2-Month Lubrication .....	8
3.3.3    17000 Hour or 2-year Lubrication .....	8
<b>3.3    Electromechanical Components .....</b>	<b>11</b>
3.3.2    General.....	11
3.3.3    Limit Switches Maintenance.....	11
3.3.4    Limit Switch Adjustment Procedure (see Figure 1).....	11

<b>3.4 Timing Belt Installation And Adjustment .....</b>	<b>13</b>
3.4.1    Belt Tension (refer to Figure 2) .....	13
3.4.2    Sprocket Alignment .....	15
3.4.3    Belt Handling .....	15
3.4.4    Belt Storage.....	15
<b>3.5 Replacement of Azimuth Motor Assembly.....</b>	<b>15</b>
3.5.1    Removal of Azimuth Motor Assembly.....	15
3.5.2    Installation of Azimuth Motor Assembly .....	17
<b>SECTION 4 STORAGE AND PREPARATION FOR USE.....</b>	<b>19</b>
<b>SECTION 5 REPLACEMENT PARTS .....</b>	<b>20</b>
<b>5.1 PARTS LIST .....</b>	<b>20</b>
5.1.1    GENERAL .....	20
5.1.2    ITEM NUMBER (ITEM No.) .....	20
5.1.3    DESCRIPTION.....	20
5.1.4    PART NUMBER (PART No.).....	20
5.1.5    QUANTITY (QTY).....	20
5.1.6    ORDERING INFORMATION FOR PARTS.....	21
<b>APPENDIX.....</b>	<b>22</b>

## LIST OF TABLE AND FIGURES

<b>TABLE 1. AL-4017-1EBS-B SPECIFICATIONS .....</b>	<b>3</b>
<b>TABLE 2. RECOMMENDED LUBRICANTS AND LUBRICATION INTERVALS .....</b>	<b>10</b>
<b>FIGURE 1. LIMIT SWITCH ASSEMBLY .....</b>	<b>12</b>
<b>FIGURE 2: RECOMMENDED BELT TENTION.....</b>	<b>14</b>
<b>FIGURE 3. AL-4017-1EBS-B POSITIONER ASSEMBLY .....</b>	<b>18</b>
<b>TABLE 3. AL-4017-1EBS-B Parts List.....</b>	<b>21</b>

# RDACS User's Guide

August 2000



## Table of Contents

1. Introduction.....	1
2. RDACS Terminal Window.....	2
3. RDACS Config.....	3
3.1 File Pull-Down Menu.....	3
3.2 Connect Commands.....	4
3.3 A-Scope Commands.....	5
3.4 Control Commands.....	8
3.5 Configuration Commands.....	17
4. Configuration Commands.....	36
5. Installing RDACS.....	39
6. The radacs.ini Configuration File.....	41
6.1 Start-Up Section.....	45
6.2 Master Section.....	50
6.3 Site Section.....	53
6.4 RadPgmN Section.....	57
6.5 Antenna Sections.....	63
6.6 LevelN Section.....	67
6.7 ModeN Section.....	70
6.8 AntennaCmds Section.....	91